
 
## MACHINE QUICK REFERENCE GUIDE


**Control Panel Cheat Sheet** 

 
www.happyemb.com




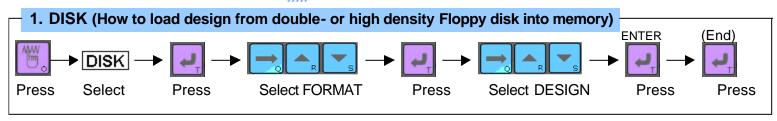


 




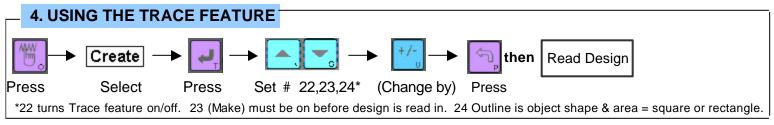

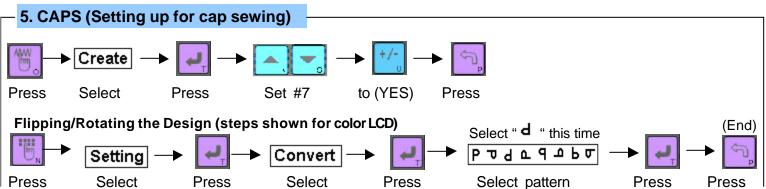


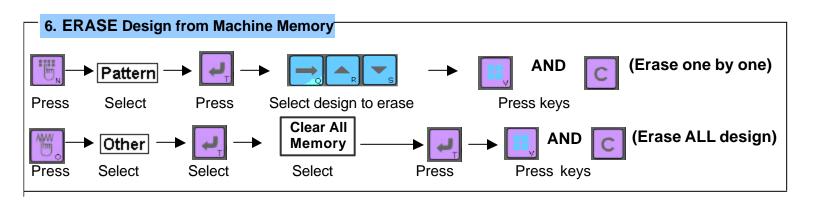



This function allows you to increase or decrease the width of satin stitches in design from –1.0 up to +1.0mm. You can make this feature standard for all designs using CREATE menu item #26.

## 8. USING THE FRAME OUT FUNCTION (i.e. appliqués)

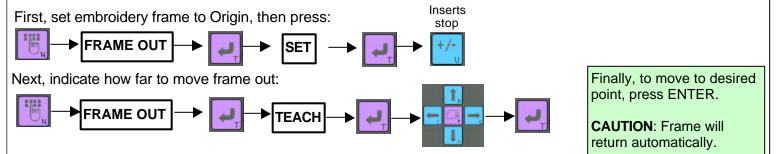

## 9. POSITION (move to any stitch point or color change in the design)



## **Reference for Drive Keys**

**DISPLAY:** 



- Changes contents of display (for regular control panel)
- Displays the image of the active design (for color LCD panel)

FORWARD



 The embroidery frame advances one stitch when pressed once. If you hold down, the frame goes forward continuously. Press STOP button to halt.

Return to POSITION



If the frame is moved at any time during the design, the Position key will return the frame to previous position.

Return to ORIGIN



 Returns the design to "0" (zero) stitch position, and returns the frame to its origin.

**TOP** 



- Returns the design to "0" (zero) stitch position, but does not move the frame.