


Diagram of Voyager's Presser Foot Guide System

When sewing, the presser foot moves up and down together with the presser foot shaft (shown in white in both views). To keep the motion perfectly vertical, the prongs of the guide "hook" around the guide shaft, which stays motionless. If these prongs are bent or broken, the guide shaft can no longer keep the presser foot moving perfectly vertical.

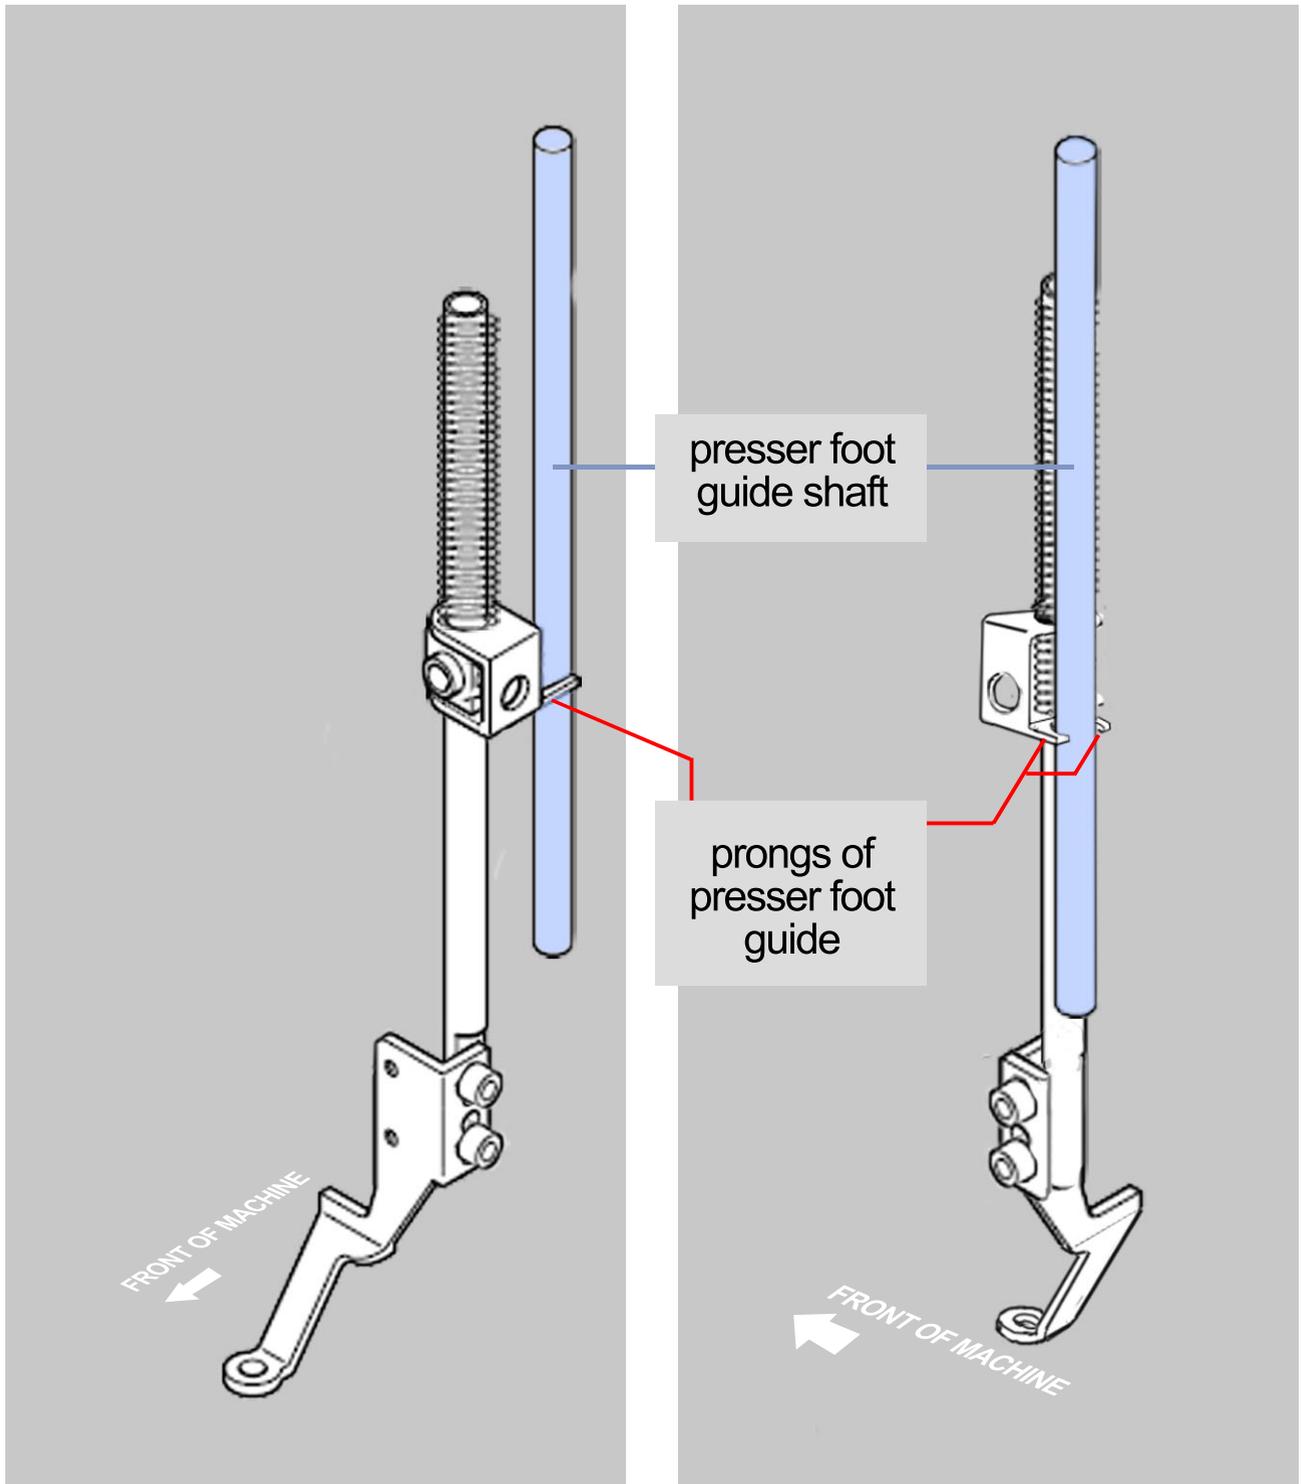

front 3/4 view

rear 3/4 view