


# TechTips

## For HAPPY HCH-701 Journey

### Thread Guide

Follow this guide to properly route each of the 7 threads through the moving head on a Happy HCH-701 7-needle Journey machine. NOTE: after threading as shown, pull thread slowly downwards through eye of needle and ensure that **thread break detection wheel and lower tension wheel both turn smoothly**, and that the **thread tension feels smooth and even**.

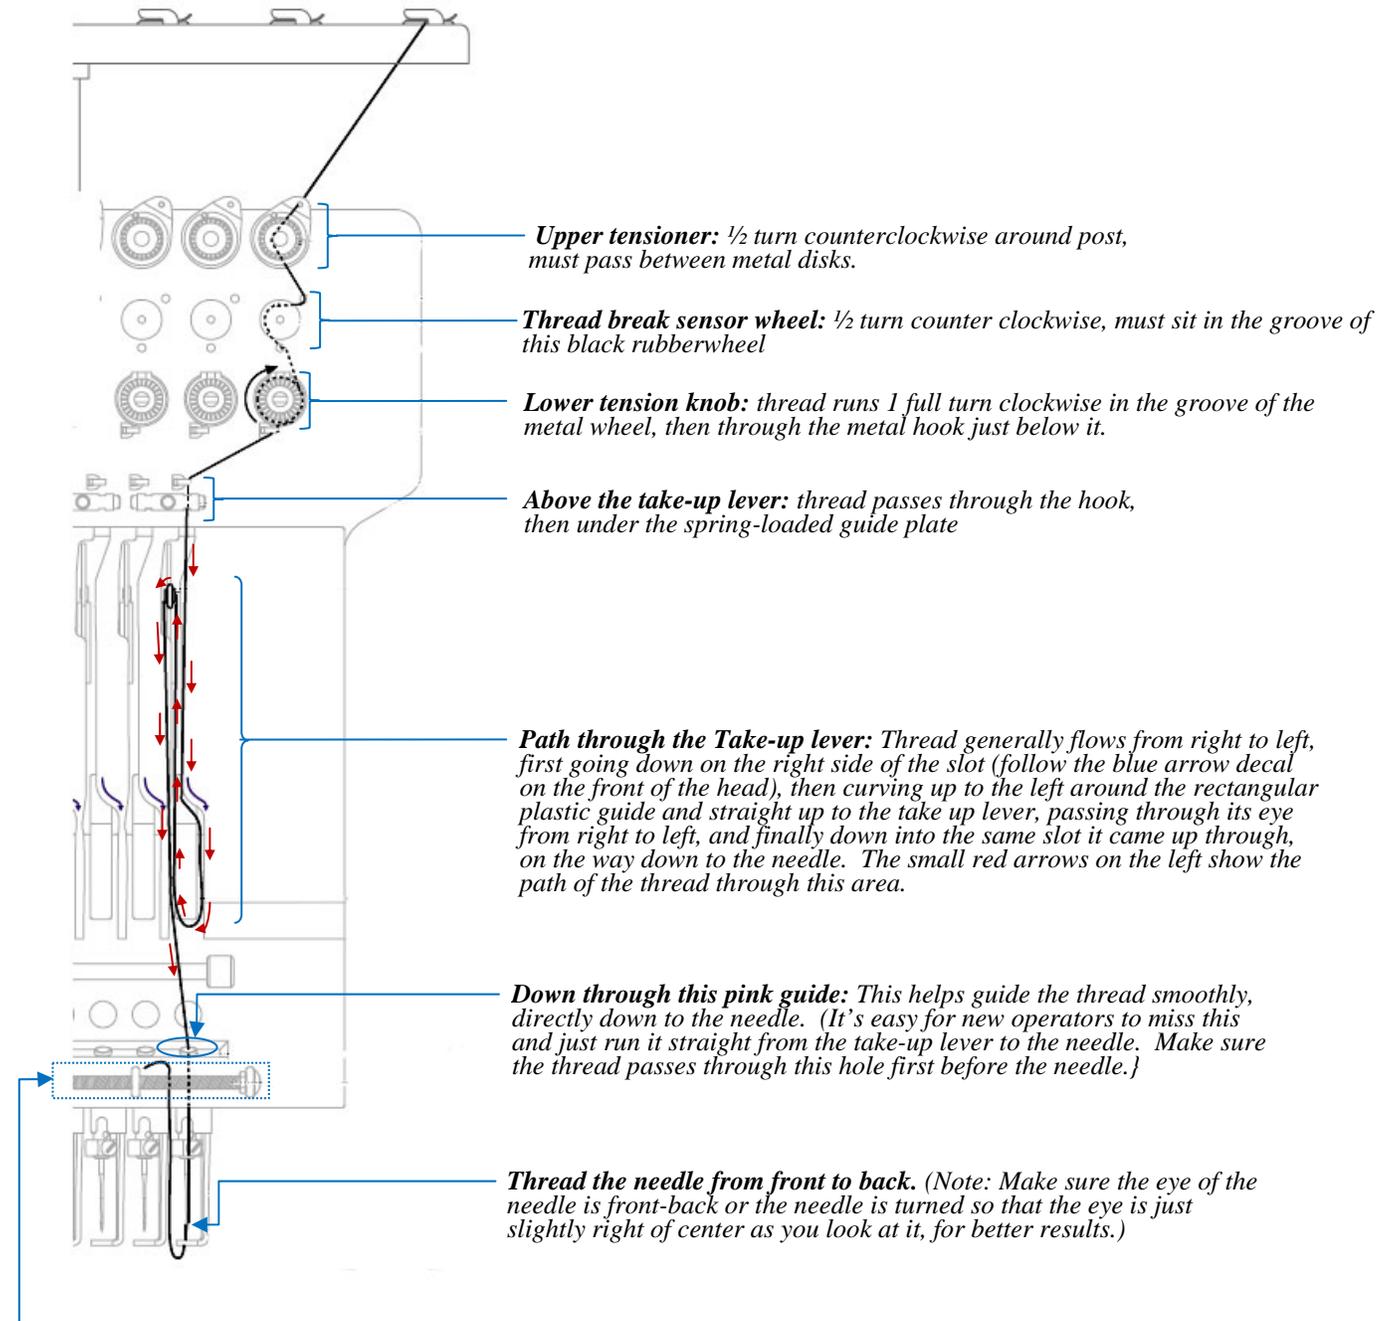

**Thread holding spring:** Do NOT leave the thread simply hanging from the eye of the needle. Pull it upwards enough to remove any slack in the thread between the cone and the needle, and tuck the end into this spring.