

HCD

Computerized Single Head Embroidery Machine

INSTRUCTION BOOK



 **HAPPY Industrial Corporation**

IMPORTANT SAFETY INSTRUCTIONS ..	1-1
WARNING LABELS & THEIR LOCATIONS	1-2
SETTING UP THE MACHINE	
Assemble machine unit	2-1
Machine installation	2-2
Assemble safety sensor (Option)	2-4
Assemble Wide X-carriage (Option)	2-4b
Assemble table (Option)	2-5
Assemble border frame (Option)	2-5b
Assemble Expand side table (Option)	2-5c
Assemble bobbin thread guide (Option) .	2-6
Grounding instruction	2-7
Disposal of a battery	2-7
3.5" DISKS (OPTION)	2-8
MAIN PARTS	3-1
HOW TO READ THESE INSTRUCTIONS	3-3
MESSAGES	3-4
TURNING THE MACHINE ON	
How to turn on the machine	3-5
Display contrast	3-6
Calendar and clock setting	3-7
THE CONTROL BOX	3-8
DRIVE MODE	3-A
DRIVE MENU	3-B
MENU	3-C
GUIDE	3-D
INSERTING A NEEDLE	4-1
SELECT NEEDLES AND THREADS	4-2
BACKING MATERIALS	4-3
BOBBIN WINDING	
Winding the bobbin (Option)	4-4
Removing the bobbin	4-5
Inserting the bobbin	4-5
Adjusting bobbin thread tension	4-5
Inserting the bobbin case	4-5
THREADING THE MACHINE	
How to thread upper thread	4-6
BASIC MODE	4-8
MACHINE SETTINGS	5-1
PREPARATION OF PATTERN DATA	
Connecting to a PC by Serial or USB connection ...	5-4
Reading embroidery pattern data from the PC	5-4
Reading embroidery pattern data	5-5
Reading pattern data from 3.5" disks (Option)	5-8
Selection of folders	5-9b
How to select patterns from memory	5-A
Erasing patterns from memory	5-B
How to delete pattern data in the folder ..	5-D
NEEDLE BAR SELECTION	5-E
SEWING WITH TUBULAR FRAMES	
Installing and removing the frame base ..	6-1
How to hoop	6-2
Mounting the hoop on the machine	6-3
Starting to embroider	6-4
CAP FRAME (option)	
Cap frame settings in the control box	7-1
Changing the needle plate	7-1b
Adjusting the fulcrum shaft	7-2
Installing and removing the cap frame driver .	7-3
Normal cap frames	7-5
Wide cap frames	7-8
Starting to embroider	7-B
ADJUSTING THE THREAD TENSION	8-1
ADJUSTING THE LASER POINTER (OPTION) ...	8-2
SEWING	
What to do if the thread breaks while sewing .	9-1
Stopping and resuming sewing	9-1
Loss of power while embroidering	9-2
Moving the hoop while embroidering and then returning to the correct location (Position)	9-3
Moving back to the starting point (Origin) .	9-3
Going back to the beginning of the design (Top)	9-4
Placing the design in the center of the selected embroidery frame (Center)	9-4
Rotating and mirroring designs (Convert)	9-5
Starting in the middle of a design (Position) ...	9-6
DISPLAYING THE PATTERN IN SETTING MODE .	10-1
PATTERNS IN MEMORY	
Locking pattern data	11-1
Trace type	11-2
Export	11-3
Renaming patterns	11-5

Copying pattern data	11-6	Insert stitch•Erase stitch	19-8
Moving pattern data	11-7	Finish editing	19-A
Renaming folders	11-9	FRAME CONFIRMATION	20-1
Sort	11-A	Tubular round frame, Tubular square frame	20-2
Thread break report	11-B	Cap frame	20-4
PATTERN SETTINGS	12-1	Boadere frame	20-6b
Scaling	12-2	User-defined frames (No.130 ~ 135)	20-7
Width adjustment	12-3	User-defined frames (No.136 ~ 150)	20-A
Angle	12-4	How to change center point of frame	
Repeat sewing	12-5	(No.131 ~ 135, No.136 ~ 150)	20-J
Auto origin	12-7	FLOPPY (Option)	
Offset	12-8	Erase	21-1
Frame out	12-D	Initialize	21-2
NEEDLE BAR SELECTION	13-1	OTHER SETTINGS	
Auto setting	13-2	Create network	22-1
Thread color	13-3	Version information	22-3
Color change data registration	13-5	Report	22-4
Color change data read	13-6	SPECIFICATIONS • MAINTENANCE	
Repetition of color group setting	13-7	Specifications	23-1
READING		Oiling	23-1
Join	14-1	Cleaning the rotary hook	
Pattern Read Settings	14-4	Cleaning the thread cutting knife	23-2
Restoring settings	14-7	ERRORS AND WHAT TO DO	24-1
Machine settings		INITIALIZING OF MACHINE SETTINGS	
Initialization of setting	15-1	Re-Initialization of machine system	25-1
POSITION	16-1	Initializing of machine speed	25-2
Piece number	16-2	HELPFUL HINTS	26-1
LOCATE	17-1	EMBROIDERY TERMS	26-2
Entry	17-2		
Return	17-3		
QUEUE	18-1		
Alter	18-2		
Delete	18-3		
Set	18-4		
Reset	18-5		
DATA EDIT			
Stitch selection	19-1		
Zoom in for the display	19-4		
Zooming rate	19-5		
Function code	19-6		

When using an electrical appliance, basic safety precautions should always be followed, including the following.

Read all instructions before using this appliance.



DANGER - To reduce the risk of electric shock:

1. An appliance should never be left unattended when plugged in. Always unplug this appliance from the electric outlet immediately after using and before cleaning.




WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Do not allow to be used as a toy. Close attention is necessary when this appliance is used by or near children.
2. Use this appliance only for its intended use as described in this manual. Use only attachments recommended by the manufacturer as contained in this manual.
3. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to the nearest authorized dealer or service center for examination, repair, electrical or mechanical adjustment.
4. Never operate the appliance with any air openings blocked. Keep ventilation openings of the sewing machine and foot controller free from the accumulation of lint, dust, and loose cloth.
5. Never drop or insert any object into any opening.
6. Do not use outdoors.
7. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
8. To disconnect, turn all controls to the off ("0") position, then remove plug from outlet.
9. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
10. Keep fingers away from all moving parts. Special care is required around the sewing machine needle.
11. Always use the proper needle plate. The wrong plate can cause the needle to break.
12. Do not use bent needles.
13. Do not pull or push fabric while stitching. It may deflect the needle causing it to break.
14. Switch the sewing machine off ("0") when making any adjustments in the needle area, such as threading needle, changing needle, threading bobbin, or changing presser foot, etc.
15. Always unplug sewing machine from the electrical outlet when removing covers, lubricating, or when making any other user servicing adjustments mentioned in the instruction manual.

SAVE THESE INSTRUCTIONS

Safety Instruction Sticker for servicing, operating and maintaining

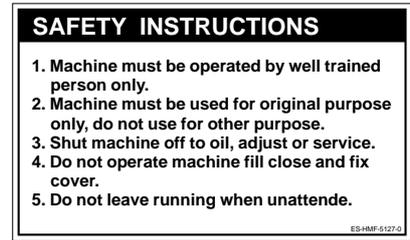

Caution Sticker for hot surface

(on all pulse motors, the motors may reach a certain temperature after long time running, which can reach up to 60°C)



Trapping hazard




Trapping hazard wherever this label is found



Power Supply Voltage sticker

Risk of electrical shock and fire if the power recommendations on this label are ignored!

Make sure that the power supply meets the exact specifications as provided by the manufacturer.

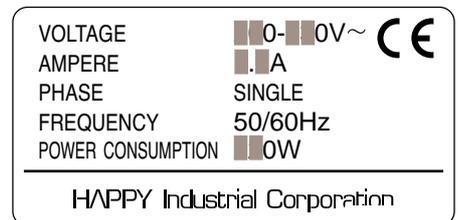

Injury risk warning for all needles




Shock hazard on all electrical components



Injury risk on moving head(s)



Injury risk on frame and carriage

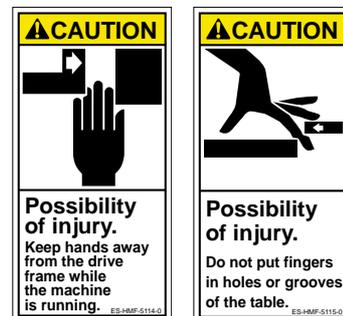

Laser beam (Class 1)





Do not stare into the beam.



● Assemble machine unit

1. Insert thread stand felt on the thread stand.
2. Turn the thread guide pillar clockwise with a 3 mm hexagonal driver until tight.
3. Install the thread guide bracket with supplied screws (pan head screw M4 X 8 2 pcs).
4. Loosen the screw with a offset driver and remove the red shipping collars that are equipped on the both side of the guide bar. (Keep the shipping collars. It is necessary when packing.)
5. Raise slowly the control box to the front then fix it with 2 screws (upper and lower).
6. Install the arm for tubular embroidery. Please refer to (page 6-1) "Installing and removing the frame base".
Or, Install the cap frame for the cap embroidery. Please refer to (page 7-1) "Installing and removing the cap drive frame".


- When taking the machine apart in case of packing, the process is opposite of assembling the machine. Please do exactly the opposite way of assembling.
- When packing the machine up for transportation, be sure to select the sixth needle and fix it with shipping collars on the both side of the guide bar.

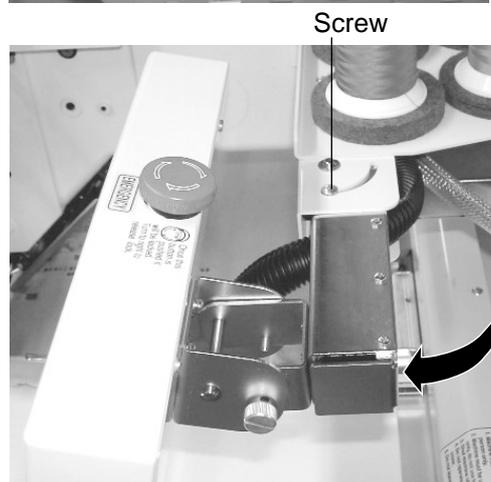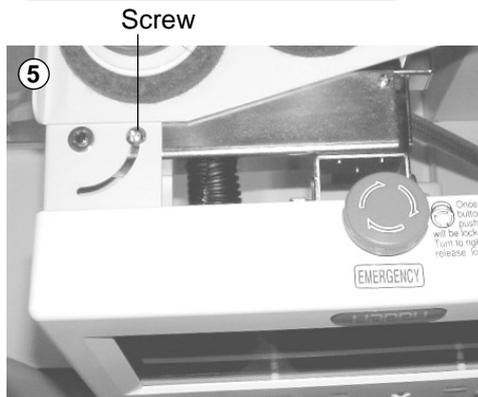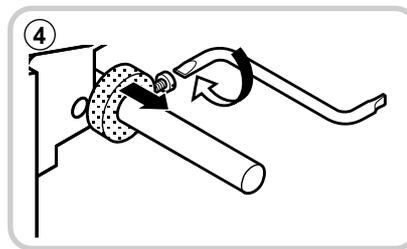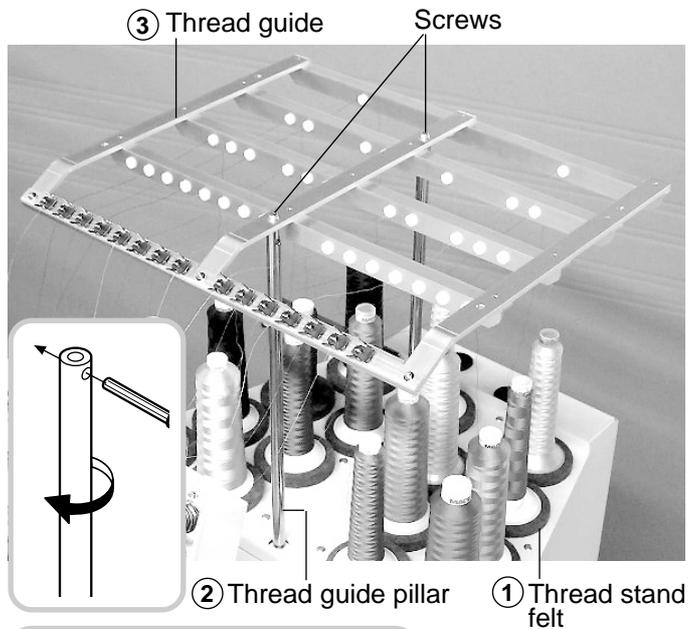

● Machine installation

- Do not run the machine before setting it properly.
Make sure of taking the following steps to set the machine.

1. Pick up rubber mount (3 places) on the stand then mount machine on the stand. Then adjust machine level by adjuster on foot and lock the each nut.
- Be sure to use rubber mounts. Also be sure to use robust stand that enables to adjust level of the machine and endure machine weight and vibration.
2. Please two occasional adjuster light touch to stand and lock.

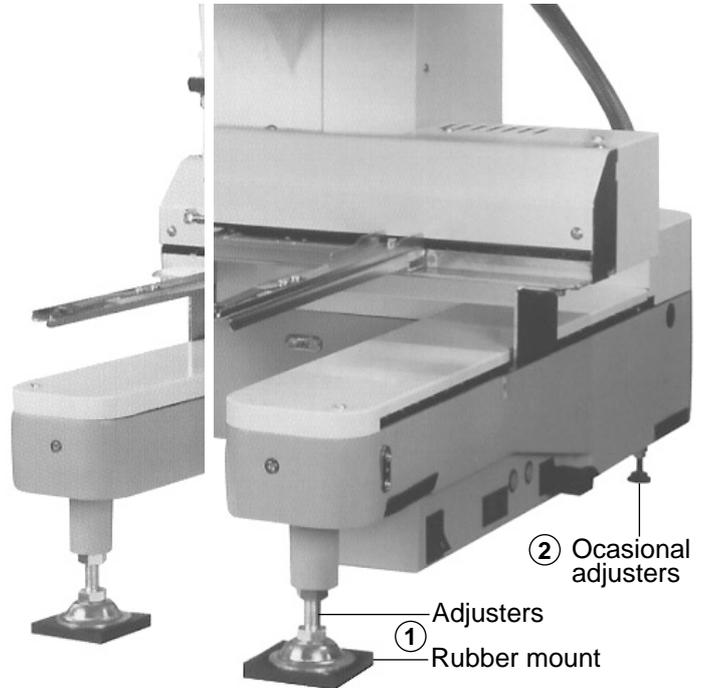

3. Remove needle plates and bobbin cases from all the heads.
4. Lower the needle holder by pressing down with fingers on Fig. 4.
5. Turn main shaft by using the hexagonal driver in direction shown with arrow mark on Fig. 5 and set the angle of the adjustment disk as shown in fig. 6.
6. Check the needle depth on all needles. Pull white plastic f17 measuring gauge in and out of rotary hook in fig. 7. If height gauge brushes lightly against tip of needle, needle height is correct. If not, loosen needle bar block screw to adjust, then re-tighten after adjustment. (Remove the gauge when finished). Note: Height gauge is contained in tool box.
7. Turn main shaft slightly in direction shown by the arrow mark. Then set the angle of adjustment disc as shown in Fig. 8. Note the space or timing between needle and tip of rotary hook as shown Fig. 9, 10. If the space is too open or too close, loosen 3 screws of shuttle to adjust. Make sure to tighten 3 screws after adjusted the space. (The timing is set exactly at the factory. However, in some cases timing is inadvertently thrown off from handling during shipment.)
8. Turn main shaft in direction and set to C point. Place the bobbin and bobbin case in the hook and replace the needle plate and tighten.
9. Machine is now ready for sewing.

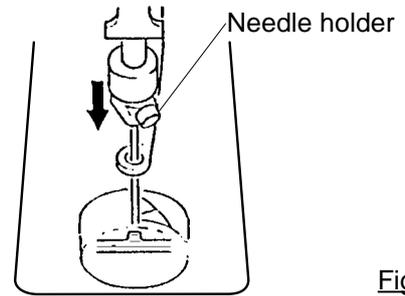


Fig. 4

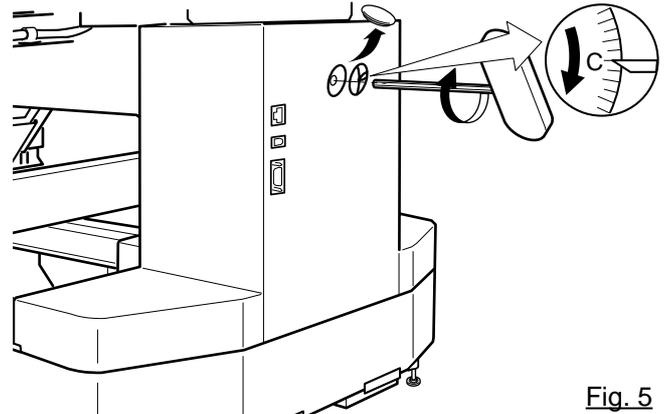


Fig. 5



Fig. 6

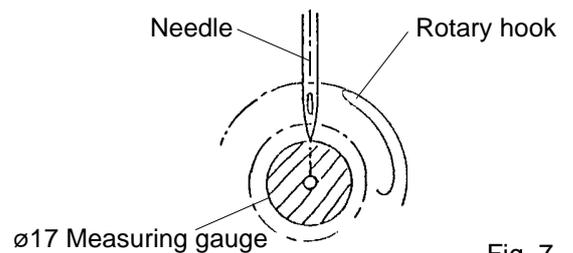


Fig. 7



Fig. 8

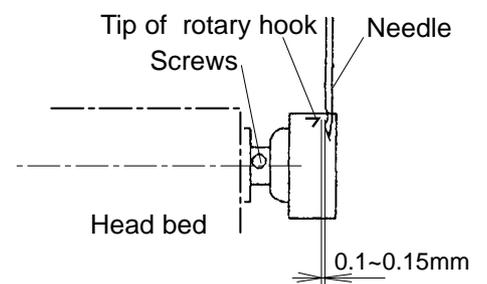


Fig. 9

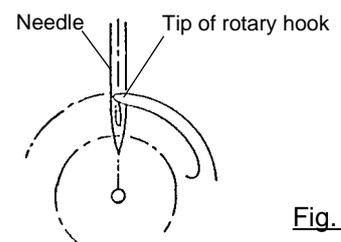


Fig. 10


● Assemble safety sensor (Option)

Safety sensors are set at a provisional position for transportation. Please reset the safety sensors at normal positions for adjustment.

1. Unscrew set screws at lower points on the safety sensors on right and left sides.
Loosen set screws slightly at upper points on the safety sensors.




2. Set the right and left safety sensors at the positions as shown in a photo by turning them to the front side.
At this time, make sure the part on the sensors indicated by an arrow shall be set vertically, and set safety sensors both right and left at parallel positions each other with viewing them from the side.
The set screw on the right safety sensor shall be tightened to the level that the positions of the safety sensors can be adjusted vertically.

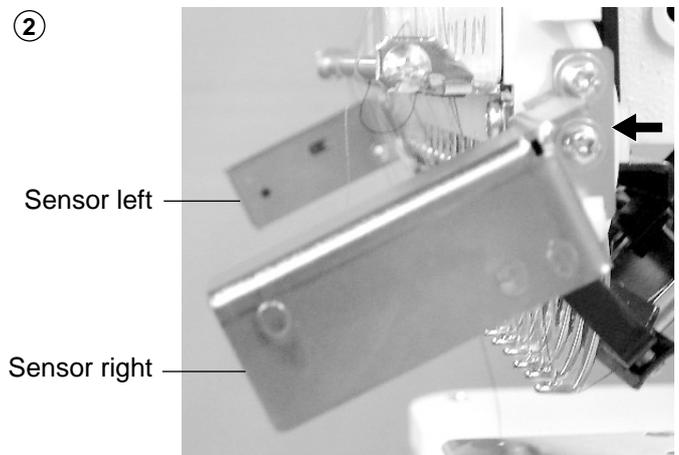


3. Turn on the machine and confirm a lamp for receiving ray (green) is on when the way of sensor ray is not blocked.

The ray from the sensor is invisible as it is infrared light.
An operational lamp lights up indicates that the sensor ray has been emitted.

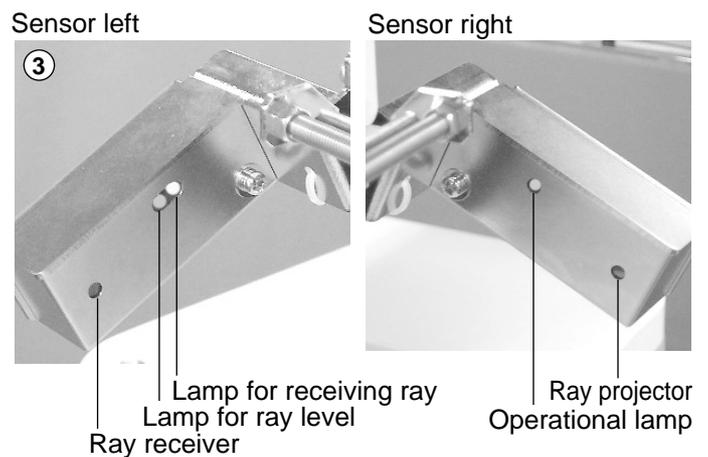

4. Adjust the position of the right safety sensor vertically so as the brightness of the Lamp for ray level (red) becomes to the maximum level.

5. Confirm if the lamp for receiving ray is turned off by blocking the way of sensor ray by a hand or other.
Tighten the set screw firmly.

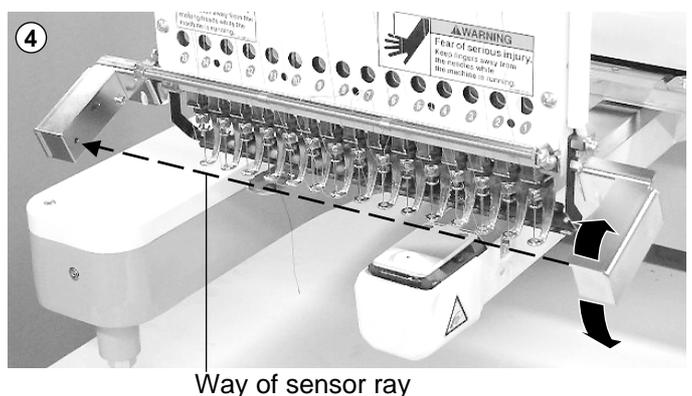

● Assemble Wide X-carriage (Option)

Wide X-carriage is packed separately from machine.




When you set machine up, please install Wide X-carriage on machine.

1. Move Stay at middle of Y-carriage.
2. Put Wide X-Carriage on Stay and adjust screw hole position.
3. Fix Carriage by Flat head screw (M4x8) at hole position [1] and [2](for the purpose of positioning).
4. [3][4] Fix Carriage by Fixing screw (Cap M4x8, Spring washer, Plain washer) at hole position [3] and [4].
5. Unscrew Flat head screw from [1] and [2] and fix by Fixing screw (Cap M4x8, Spring washer, Plain washer).
6. Loosen screws on BOX terminal and take cover out.
7. Insert X-Motor cable into BOX terminal and connect with X-Motor relay cable. Fix terminal for earth connection for X-Motor cable and X-Motor relay cable together.
8. Fix X-Motor cable by Cable clamp.

9. Close cover of BOX terminal.


Please be sure cables do not get caught by cover.

- Please reverse procedure when remove the X-Carriage.

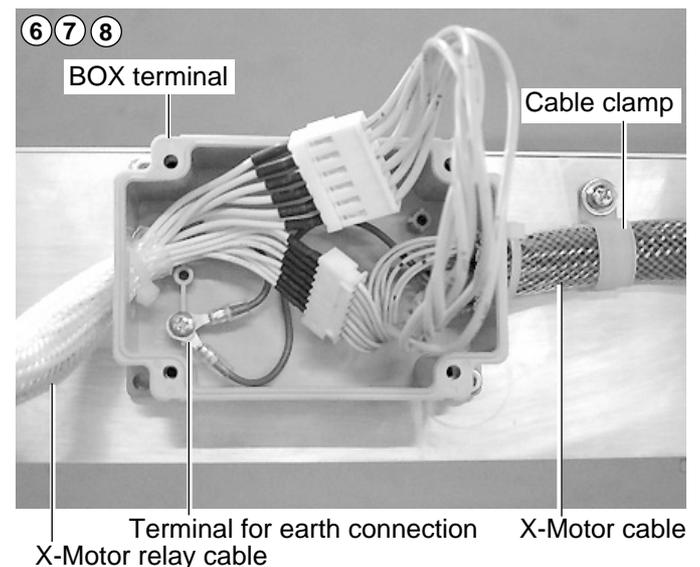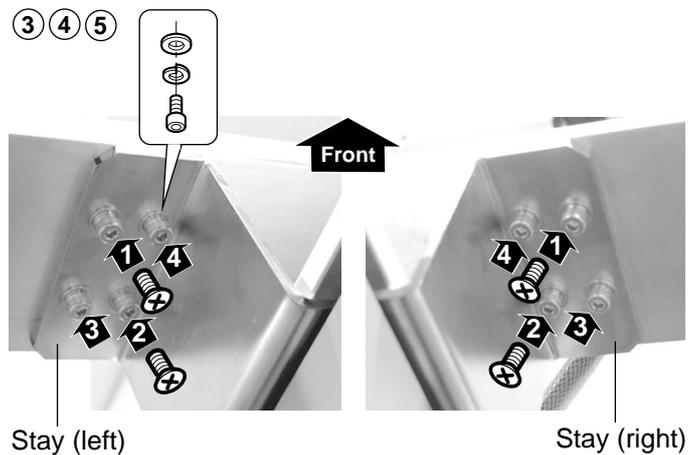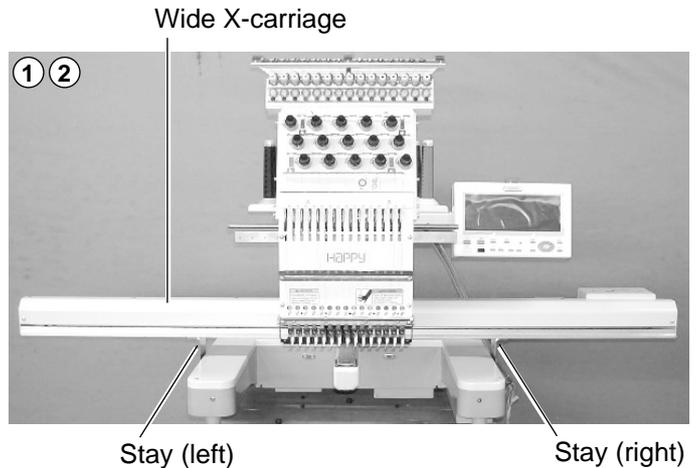


● Assemble table (Option)

1. Insert Knob screw to right and left side of machine.
And set table like right side picture.
Please insert table bracket trench to the knob screw.

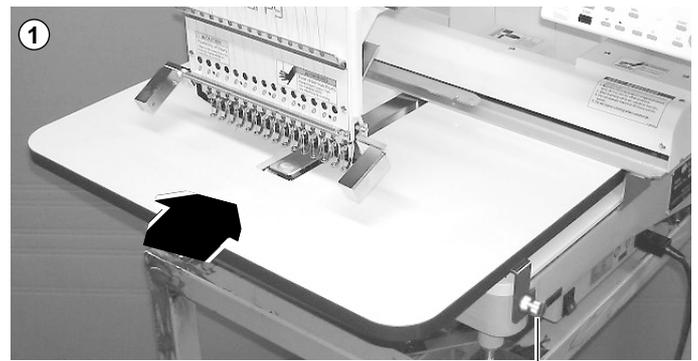

Knob screw

2. Tight 2 knob screw on under the table for fix table.

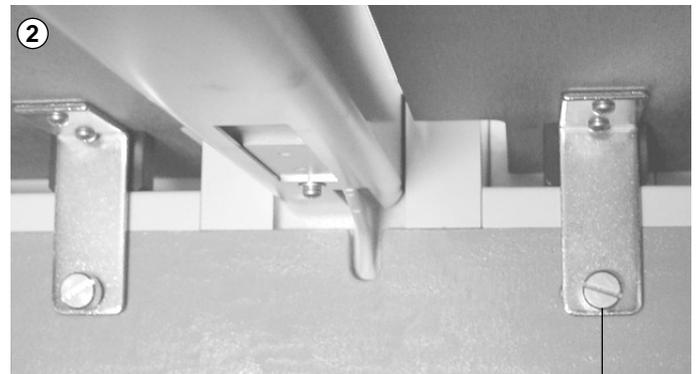

Knob screw



3. Tight 2 knob screw on side of the table.

■ Please reverse procedure when remove the table.


● Assemble border frame (Option)

When you use Wide Border frame, to use Expand side table is recommended for keeping stable stitch quality.  2-5c

1. Fix the border frame under the bracket of the X carriage and tighten the knob screw completely.

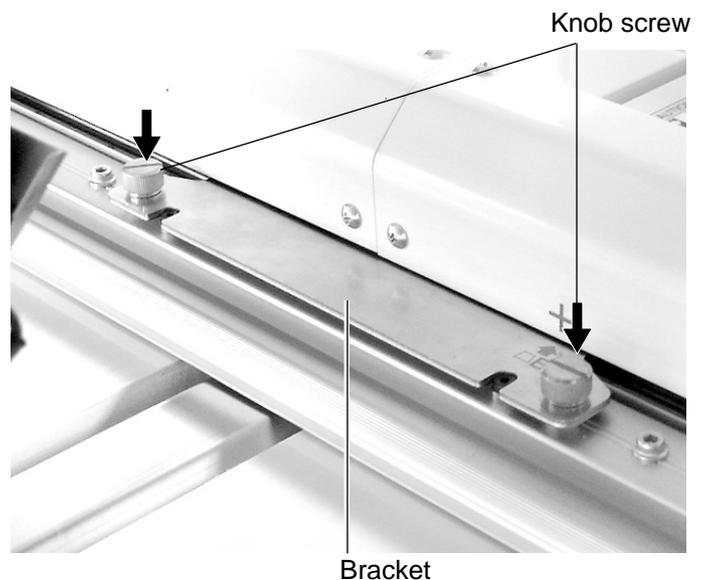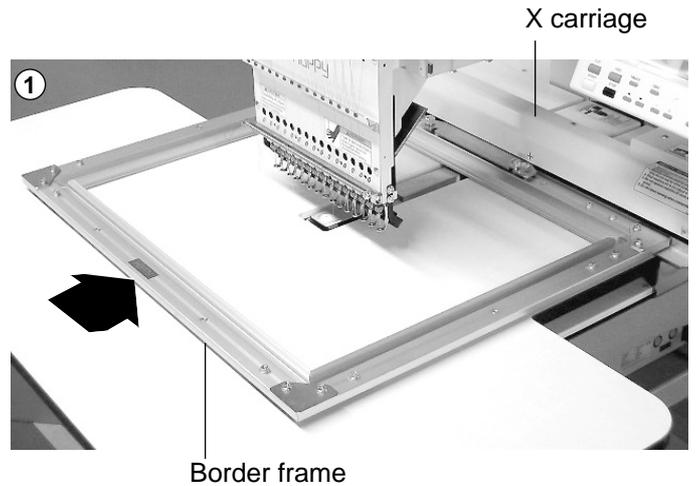

Clearance between X-carriage and Border Frame at right edge and left edge should be equal.

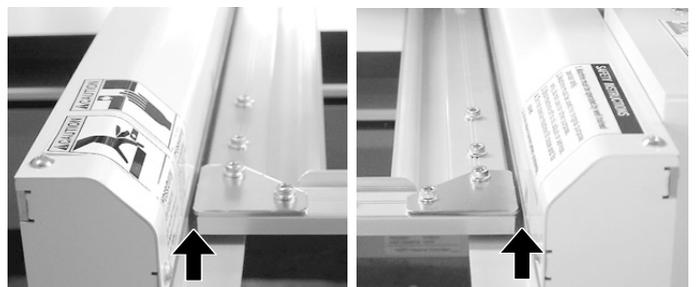


2. Select Frame Type "Border 400 x1200". Please refer in this manual page "FRAME CONFIRMATION / Border Frame" for frame selection.

 20-6b



- Please reverse procedure when remove the border frame.

● Assemble Expand side table (Option)

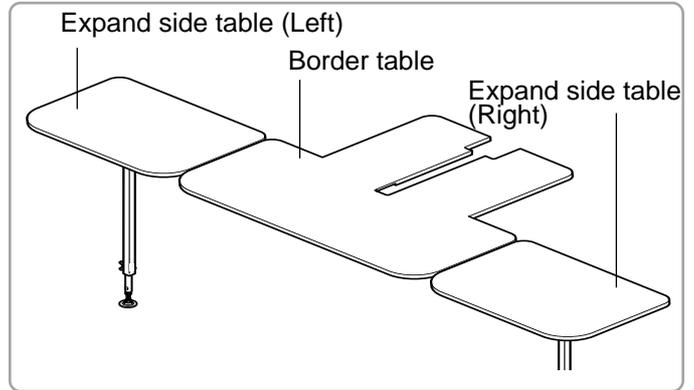


1. Set Stay on Expand Side table.
Put Expand Side Table under Border table and set Stay by Wing Bolt.
Adjust height of Adjuster by Wing bolt to the same height as surface of border table.

⚠ CAUTION: To prevent accidents.
Table may be slanted.
Tighten Wing bolt to fix height of stay.

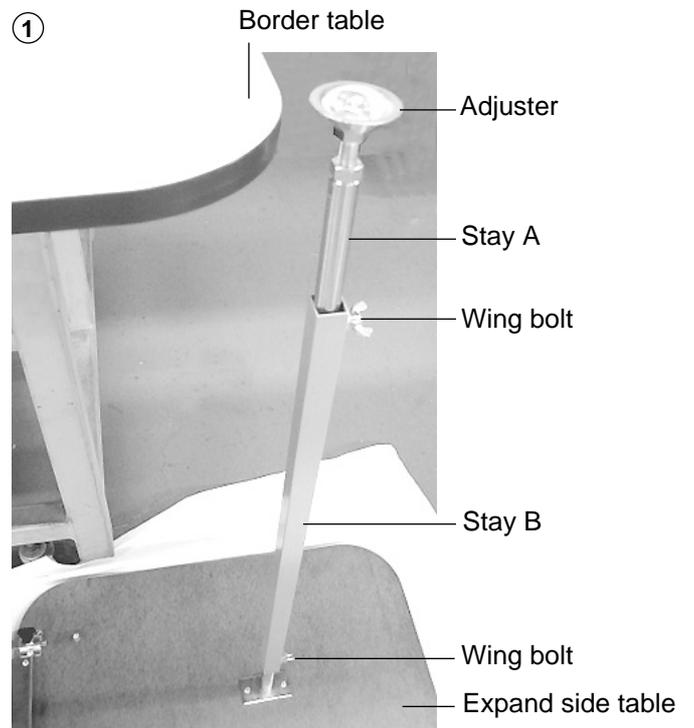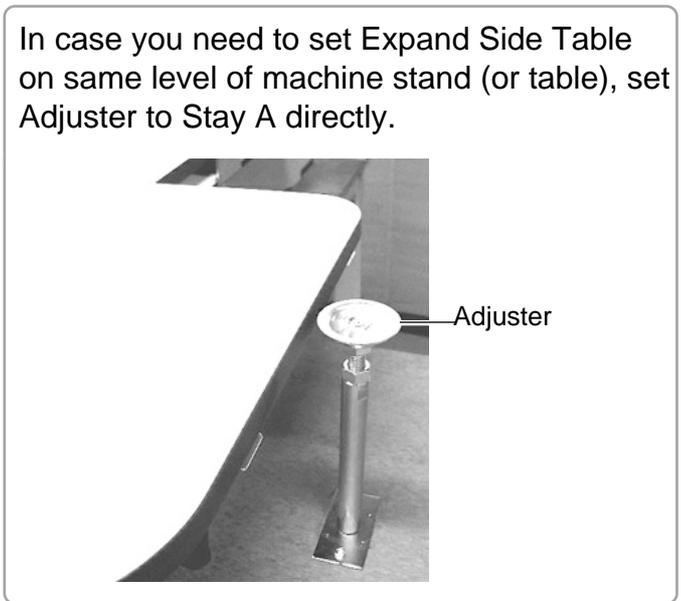


2. Turn Expand Side Table and join tables with inserting Prop B into Prop A.

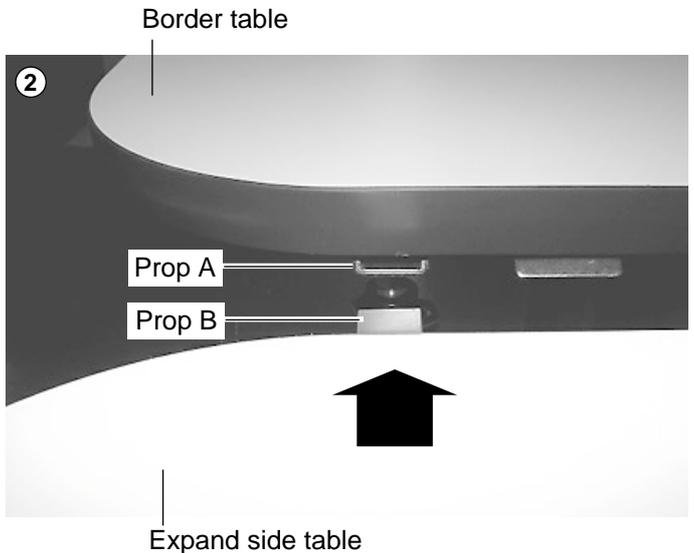

SETTING UP THE MACHINE


2-5d

3. Confirm that Middle support plate enters to the space between table and Prop plate and there is no opening between tables. Tighten Knob bolt of Prop A at Border table and fix Lock nut. Then set Clamp.

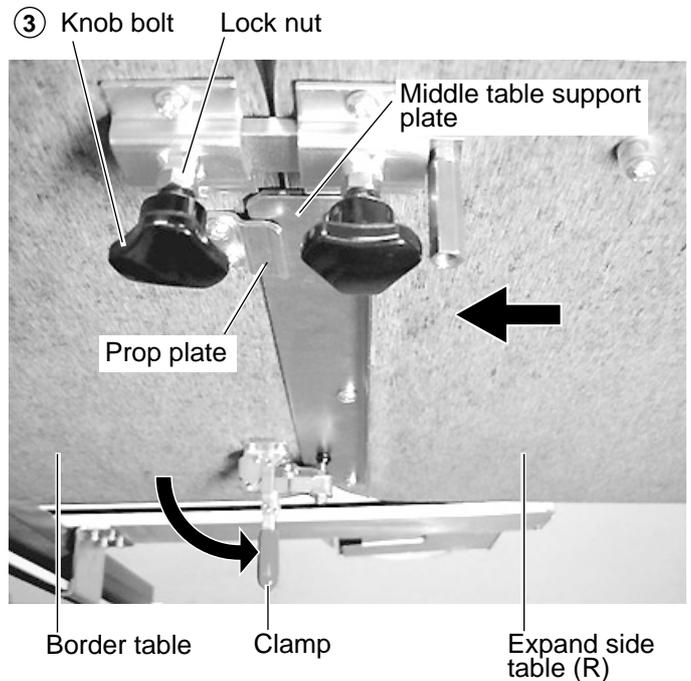

4. Adjust height of Expand Side Table by Adjuster and fix by Lock nut.



CAUTION: To prevent accidents.
Table may be slanted.
Please do not load any objects on Expand side table.

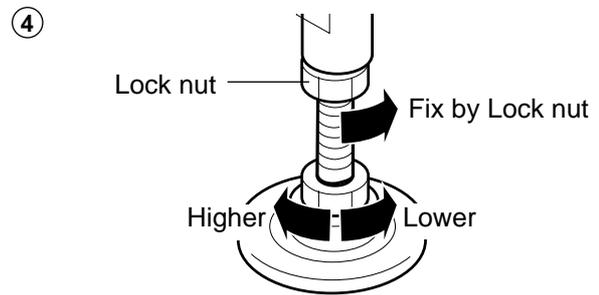

- Please reverse procedure when remove the Expand Side Table.

● Assemble bobbin thread guide (Option)

1. Install the bobbin thread guide with supplied screws (pan head screw M4 X 6 2 pcs).
(Showing following pictures, Please square left end of sticker with right end of thread stand)

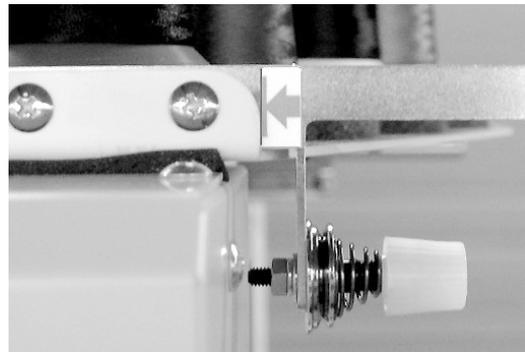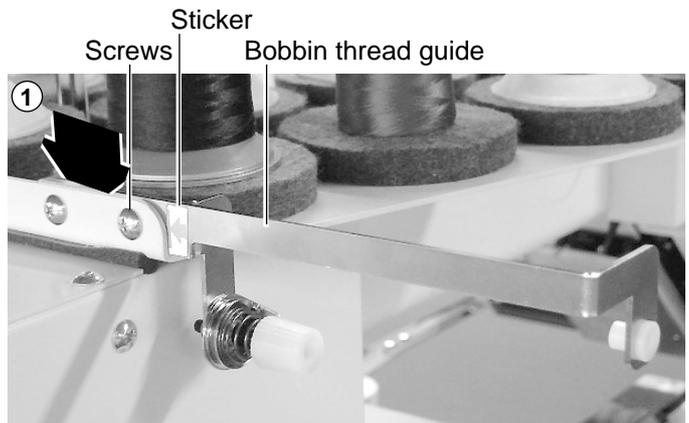

● Grounding instruction (for type of 120V)

This product must be grounded. In the event of malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.


⚠ DANGER – Improper connection of the equipment-grounding conductor can result in a risk of electric shock. The conductor with insulation having an outer surface that is green with or without yellow stripes is the equipment-grounding conductor. If repair or replacement of the cord or plug is necessary, do not connect the equipment-grounding conductor to a live terminal.

Check with a qualified electrician or serviceman if the grounding instructions are not completely understood, or if in doubt as to whether the product is properly grounded.

Do not modify the plug provided with the product – if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This product is for use on a nominal 120 V circuit, and has a grounding plug that looks like the plug illustrated in sketch A in Figure. A temporary adaptor, which looks like the adaptor illustrated in sketches B and C, may be used to connect this plug to a 2-pole receptacle as shown in sketch B if a properly grounded outlet is not available. The temporary adaptor should be used only until a properly grounded outlet can be installed by a qualified electrician. The green colored rigid ear, lug, and the like, extending from the adaptor must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adaptor is used, it must be held in place by the metal screw.

Grounding methods

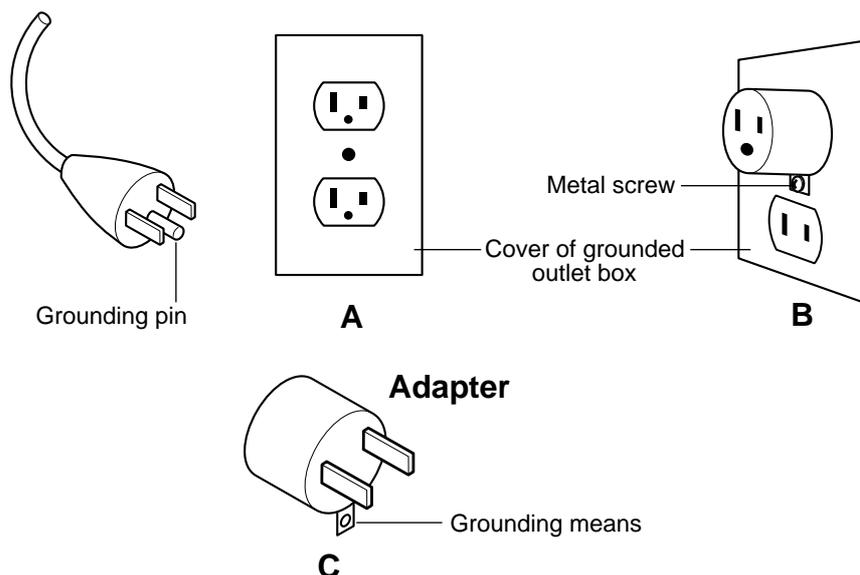


● Disposal of a battery



A battery is had built-in to this embroidery machine.

When you dispose of a battery, according to each country or a method determined in each area, please dispose appropriately.

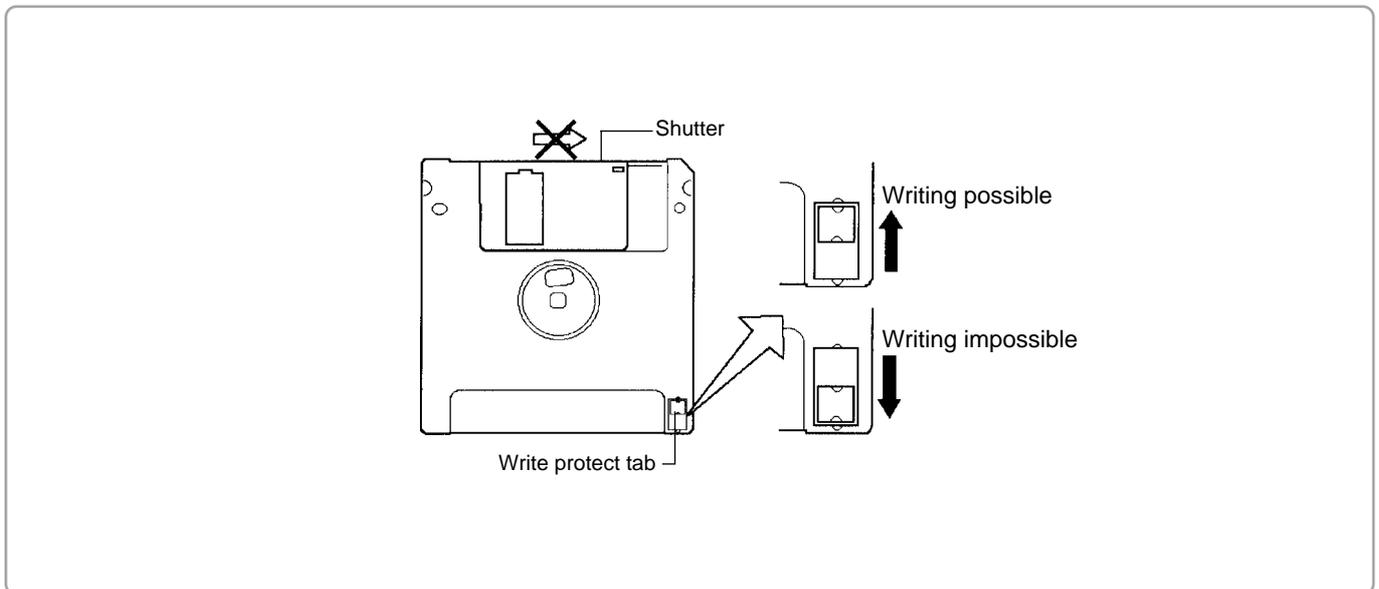


The optional floppy drive allows you to use new or recently-formatted 3.5" disks. Either of these two types may be used:

1. MF2DD (3.5")
2. MF2HD (3.5")

The same disk may be re-written repeatedly. However, it should be noted that floppy diskettes are not ideal for long-term storage. Throughout the course of handling diskettes, data may be lost by careless or rough handling. Unlike paper tapes, data lost on a disk cannot be recovered. Diskettes should be handled carefully. For best results, take the following precautions when handling diskettes::

- ▶ Keep disks away from magnetic materials. Magnetic fields can erase some or all of the data on a disk.
- ▶ Keep disks away from temperature extremes and high humidity.
- ▶ Do not open the shutter of the data disk or touch the magnetic disk inside. Contact with magnetic disk may cause disk to become unreadable.
- ▶ Use the write protect tab on your disk to help prevent accidental erasure of data.
- ▶ Do not leave disk in disk drive for extended periods. When not in use, remove the floppy disk from drive.

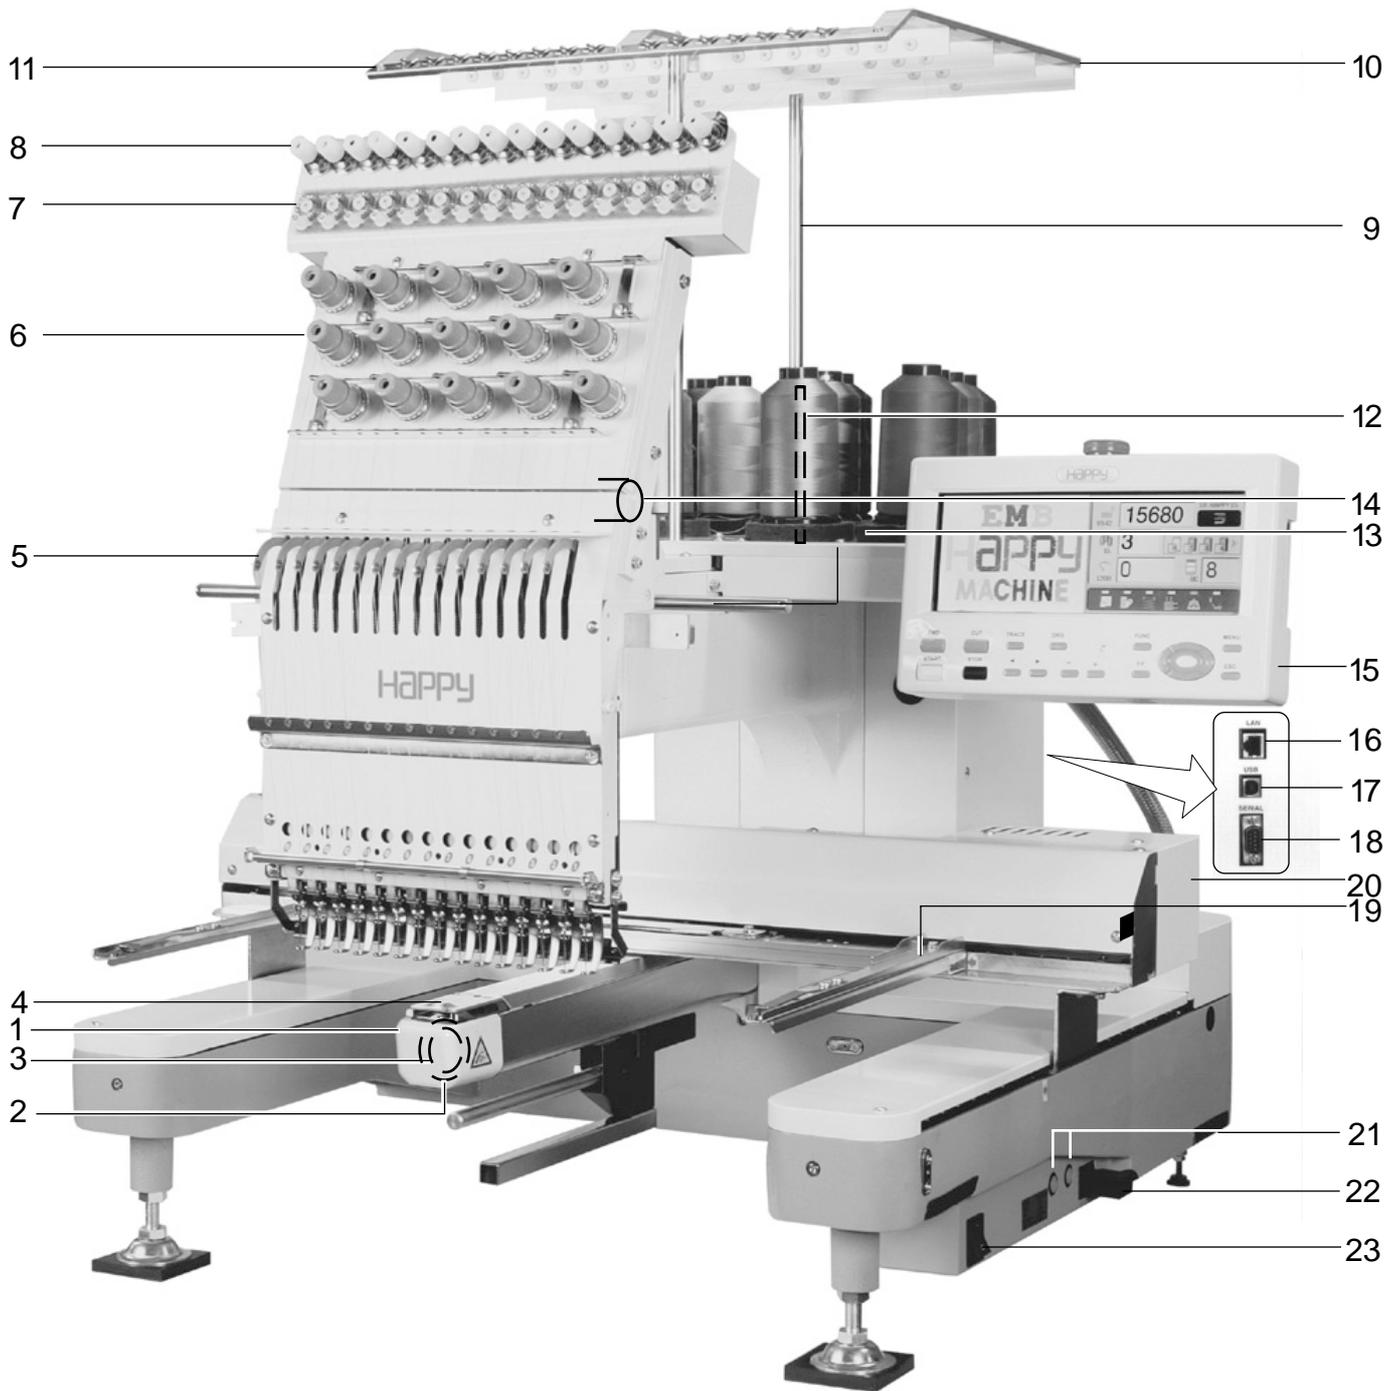


- 1. Hook cover
- 2. Hook
- 3. Bobbin case
- 4. Needle plate
- 5. Take-up lever
- 6. Thread tension
- 7. Detecting roller
- 8. Minor thread tension
- 9. Thread guide support
- 10. Thread guide

- 11. Upper rectifier
- 12. Thread stand pin
- 13. Thread stand felt
- 14. Needle bar selection knob
- 15. Control box
- 16. LANport
- 17. USB port (based on the USB)
- 18. Serial port
- 19. Frame base
- 20. Carriage


- 21. Fuse (6A)
- 22. Terminal box
- 23. Power switch

CONTROL BOX

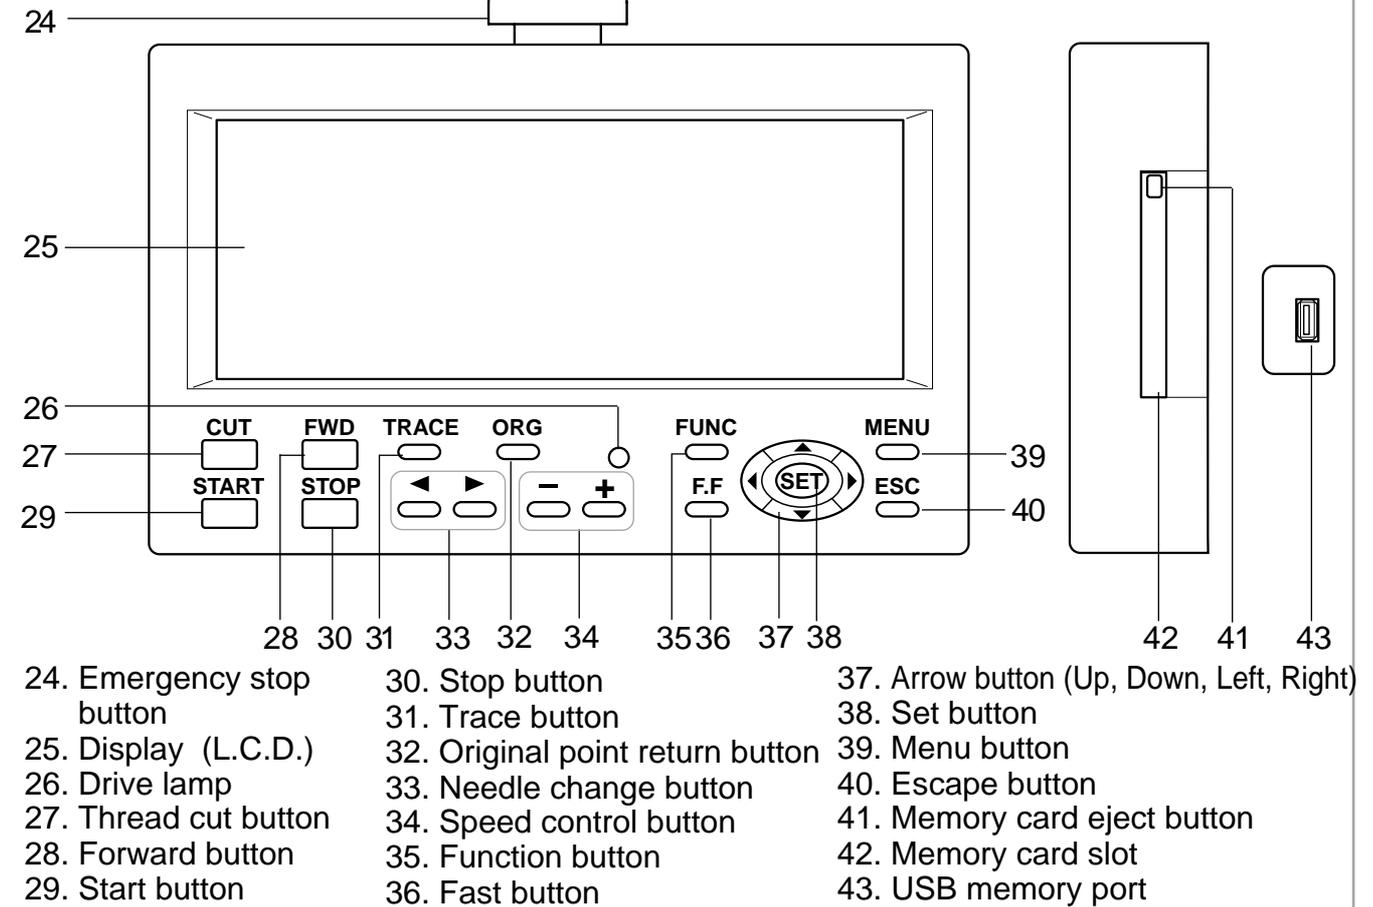


- 24. Emergency stop button
- 25. Display (L.C.D.)
- 26. Drive lamp
- 27. Thread cut button
- 28. Forward button
- 29. Start button
- 30. Stop button
- 31. Trace button
- 32. Original point return button
- 33. Needle change button
- 34. Speed control button
- 35. Function button
- 36. Fast button
- 37. Arrow button (Up, Down, Left, Right)
- 38. Set button
- 39. Menu button
- 40. Escape button
- 41. Memory card eject button
- 42. Memory card slot
- 43. USB memory port

FLOPPY DRIVE (Option)

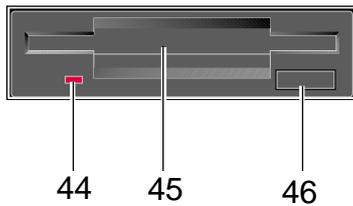

- 44. Disk access lamp
- 45. Disk insertion slit
- 46. Disk eject button

BOBBIN WINDING (Option)

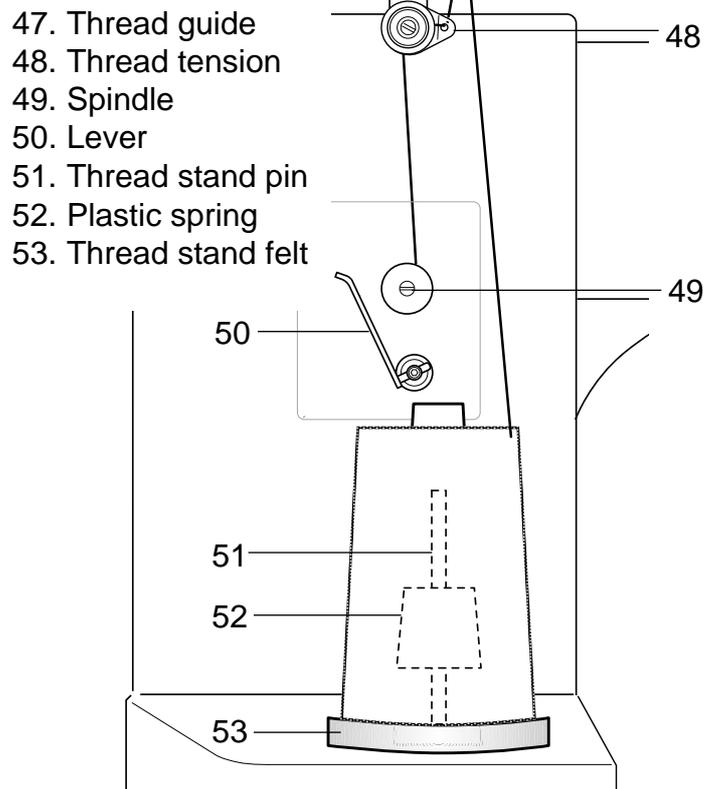

- 47. Thread guide
- 48. Thread tension
- 49. Spindle
- 50. Lever
- 51. Thread stand pin
- 52. Plastic spring
- 53. Thread stand felt

HOW TO READ THESE INSTRUCTIONS

3-3

The instructions in this manual have been formatted as follows:

Written instructions will be provided on the left side of the page while graphics depicting the necessary steps are provided on the right.

Graphics on the far right will show the display after performing the steps indicated.


 **CAUTION: To prevent accidents.**
This will appear for items related to your safety.

 **CAUTION: To avoid problems.**
This will appear for items related to potential problems.

Order of operation


1. When the machine is stopped, Press the .

Selected item

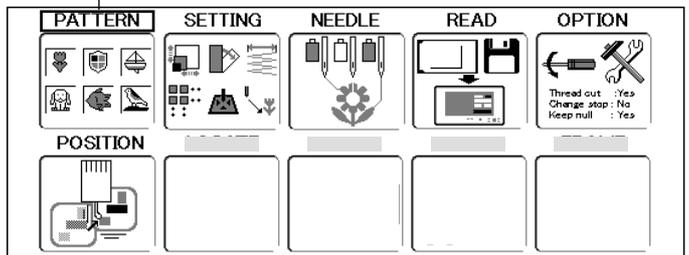

A Words marked with a "*" are explained in "EMBROIDERY TERMS" at the end of this instruction manual.

2. Select desired *menu with .

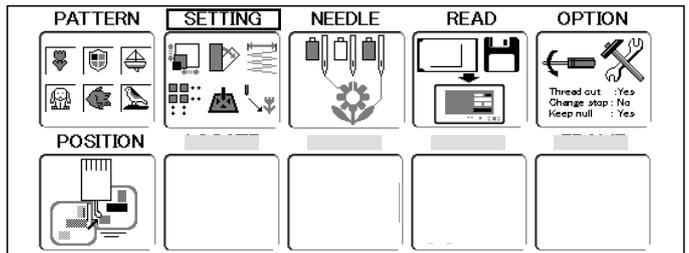


3. Press  to show the selected menu.

Press  to return to the previous display.  3-3

Indicates supplementary explanation regarding a given operation or action.


This indicates an additional explanation on an operation elsewhere in the manual for more detail.

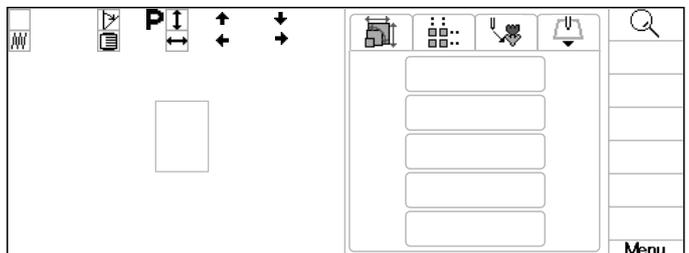

Operation key

 In the order of operation, this denotes that the indicated keypress will cause the display to change.

Below is a list of possible messages that may appear while operating the machine, along with an brief explanation and suggested actions to take as a result.

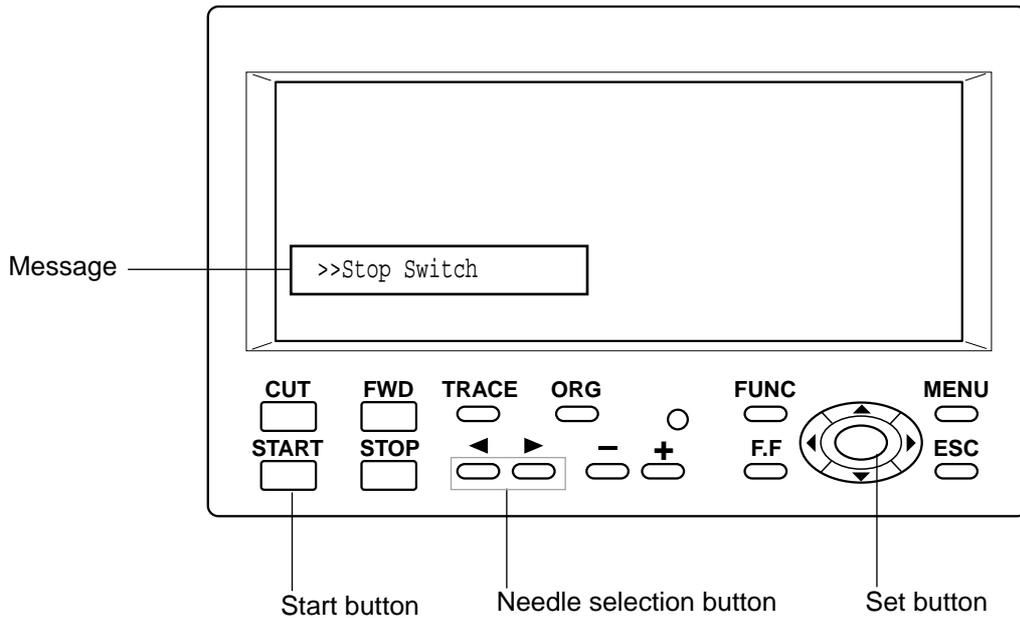

CAUTION: To prevent accidents.
The embroidery frame may move. Please keep hands clear for your safety.

MESSAGE	EXPLANATION	OPERATION	PAGE
A Place to oil B	Designated letter on the display is due to be lubricated.	Lubricate the location indicated by A or B. Refer to the indicated page in this manual then press the set button.	23-1
Cleaning of rotary hook Cleaning of thread cut knife	Clean the rotary hook and the thread cutting knife.	Clean with instruction in the reference page then press the set button.	23-2
Frame move !	Frame will move to recognize the actual frame position.	When you press the set button, the embroidery frame will move and return to the previous position.	3-5
>>Stop Switch	The machine is stopped because the stop button was pressed while embroidering the design.	Press the start button to resume sewing.	
>>End	The machine is stopped because it has finished the design.	If you wish to sew design again, please newly hooped item on machine & press start button.	
>>Change Stop	Machine stopped, because you used "Stop at color change point" function.	When you press the start button, the machine will select the next color and resume embroidering automatically.	
>>Color ?	Machine stopped because the next color has not been selected.	Please select next needle number by needle selection button then press the start button.	
>>Thread Break	Machine stopped, because upper or bobbin thread broken.	Please thread upper thread or check bobbin thread then press start button to resume sewing.	
>>Trace end	The machine is stopped because it has finished with the design trace.	Press the start button if OK.	6-4 7-A


TURNING THE MACHINE ON

3-5

● How to turn on the machine

1. Connect the power cord to the inlet on the right side of the machine.

2. Connect the power plug to an electrical outlet.

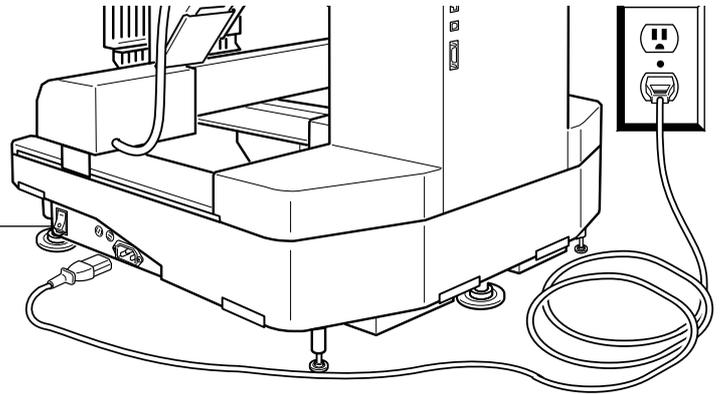


3. Turn on the power switch.

Please confirm the emergency stop button has been released.
Push the power switch firmly so it will remain on.




4. In case you do not need to change frame type, press the **[SET]** button.

After the carriage and frame move slightly, the embroidery frame will return to the previous position automatically.
Machine becomes ready for operation.

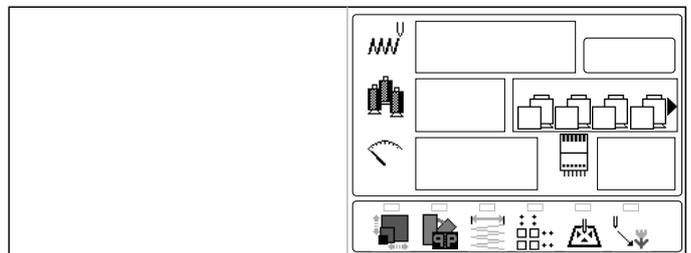


CAUTION: To prevent accidents.
The embroidery frame and carriage will move.
Please keep hands clear for your safety.

In case you want to change frame type, press the **[FUNC]** button, select "Frame type" with **[←/→]** and press **[SET]**.

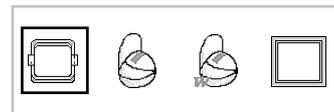

If this menu appears on the screen

"Basic mode" is selected. [P 5-2](#)
To change to "Advanced mode", please enter to "MACHINE SETTING" and change mode to "Advanced mode". [P 5-2](#)

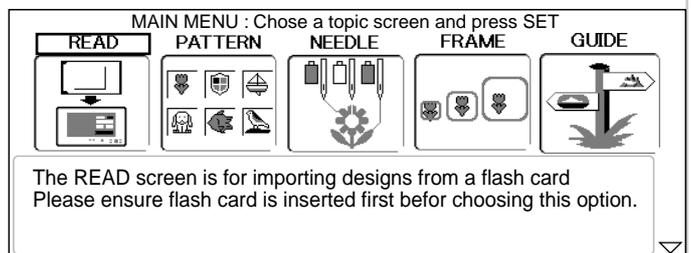

In case previous design is not finished completely and power machine off.

Sewing is stopped.
Do you wish to continue with this pattern?
Pattern Name : [12: BIRD]

Yes

No

5. Select the desired frame with  and press the **SET** button.



: Tubular frame



: Standard cap frame



: Wide cap frame



: Border frame

The display returns to the view of Step 4.

To disconnect, switch the power switch to the off position, then remove plug from outlet.



DANGER: To reduce the risk of electric shock.

Never leave the machine unattended when plugged in.

Always unplug this machine from the electrical outlet immediately after use and before performing any maintenance on it.




WARNING: To reduce the risk of burns, fire, electric shock, or injury to persons.

Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.


● Display contrast

The contrast can be adjusted by following the procedure below.


1. When the machine stopped, press **(MENU)** and Select "CONTRAST" with .

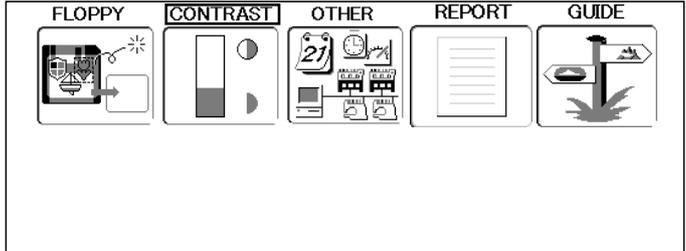


2. Press the **(SET)** button.

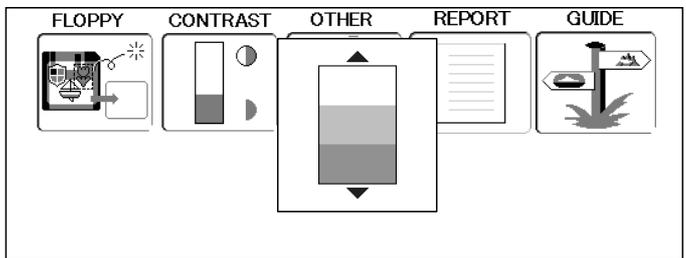

3. Adjust the contrast as desired by pressing .

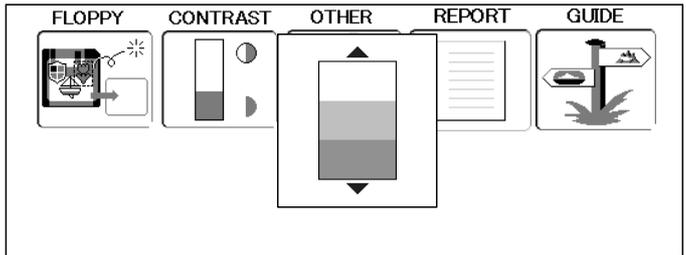

4. Press the **(SET)** button.
The setting is fixed.

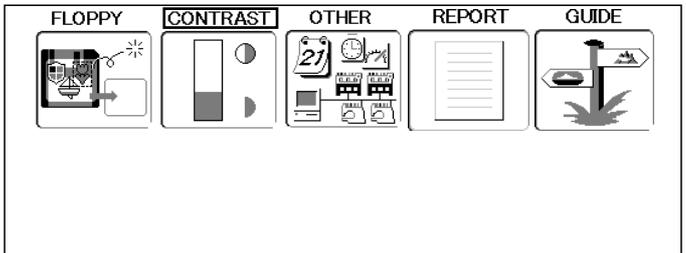


If you Press the **(ESC)** you will return to drive mode.


●Calendar and clock setting

Setting the calendar and clock lets the machine advise when oiling and other maintenance is scheduled to occur.


1. When the machine is stopped, press **(MENU)** and Select "OTHER" with .

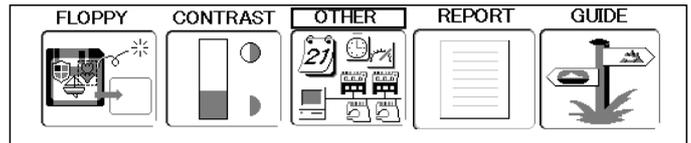


2. Press the **(SET)** button.

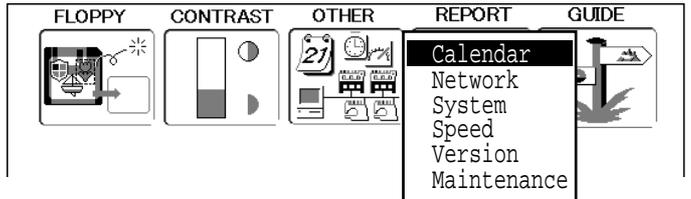

3. Select "Calendar" with  and press **(SET)**.
Current year, month date and time is displayed.

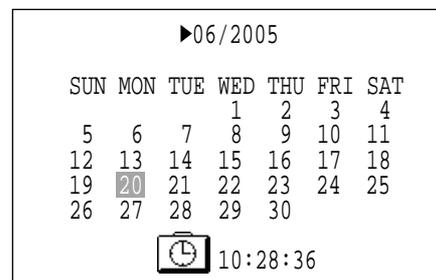


4. Select year, month date and time with up/down of .

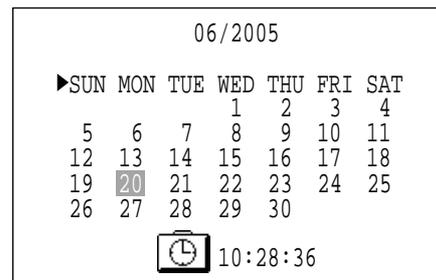


5. Press the **(SET)** button.
Press right/left of  to select the setting point, and press up/down of  to select the number of year, month and time. To select the date, press up/down and right/left of .



6. Press the **(SET)**.
The date is fixed.

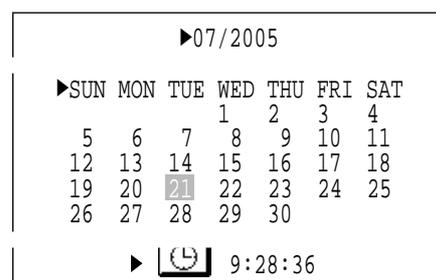

Press **(ESC)** to return to Menu mode.
Press **(ESC)** once again to return to Drive mode.

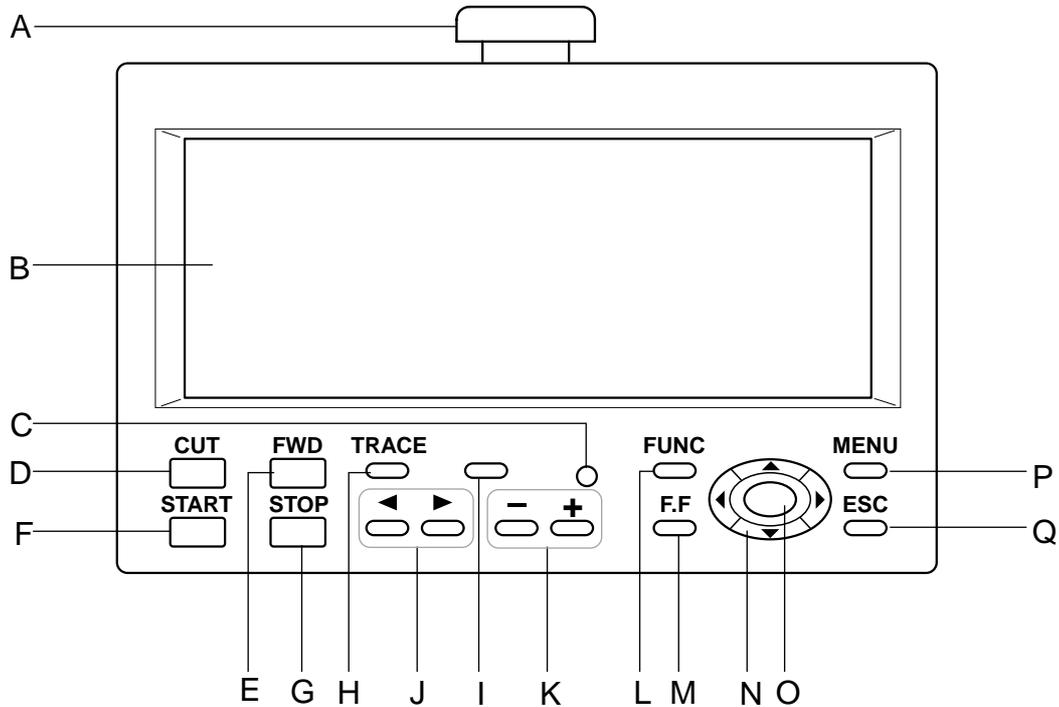

A. Emergency stop button

When pressed, the power is switched off and the machine stops immediately. The emergency button locks when pressed.

To unlock, turn the emergency button to the right (Arrow direction) then release. The button will unlock.

Use this button only for emergency.



B. Display

Shows the embroidery design name, the number of the current needle and other machine generated messages.

C. Drive lamp

Green Machine ready to sew. Main menu also accessible by pressing MENU, which causes menu to display.

Red Machine has detected an error. An error number will be shown on the Display. [p 24-1](#)

Blinking red . Indicates the upper thread has broken or the Bobbin thread has run out.

D. Thread trim button

The Machine will cut the upper and lower thread when this button is pressed.

E. Forward button

Press once The frame moves forward one stitch.

Press continuously ... The frame will move forward continuously.

Keep pressing The button's function locks. The frame will move forward by 1 stitch continuously. Push the "STOP" button to stop it. When you stop it, push stop button.

Pressing longer still .. Button's function will lock. The frame will move forward by 10 stitches continuously. Push the "STOP" button to stop it. When you stop it, push stop button.

F. Start button

This button starts the machine.

When pressed, while the machine is running, running, the machine will switch to "inching". (Super slow speed)


The Machine will return to the previous speed when button is released.

If you use the inching function for an extended length of time, the stitch quality may be influenced.



CAUTION: To prevent accidents.

If you Press the thread trim button, the needle will penetrate the fabric. Please keep your hands clear for your safety.

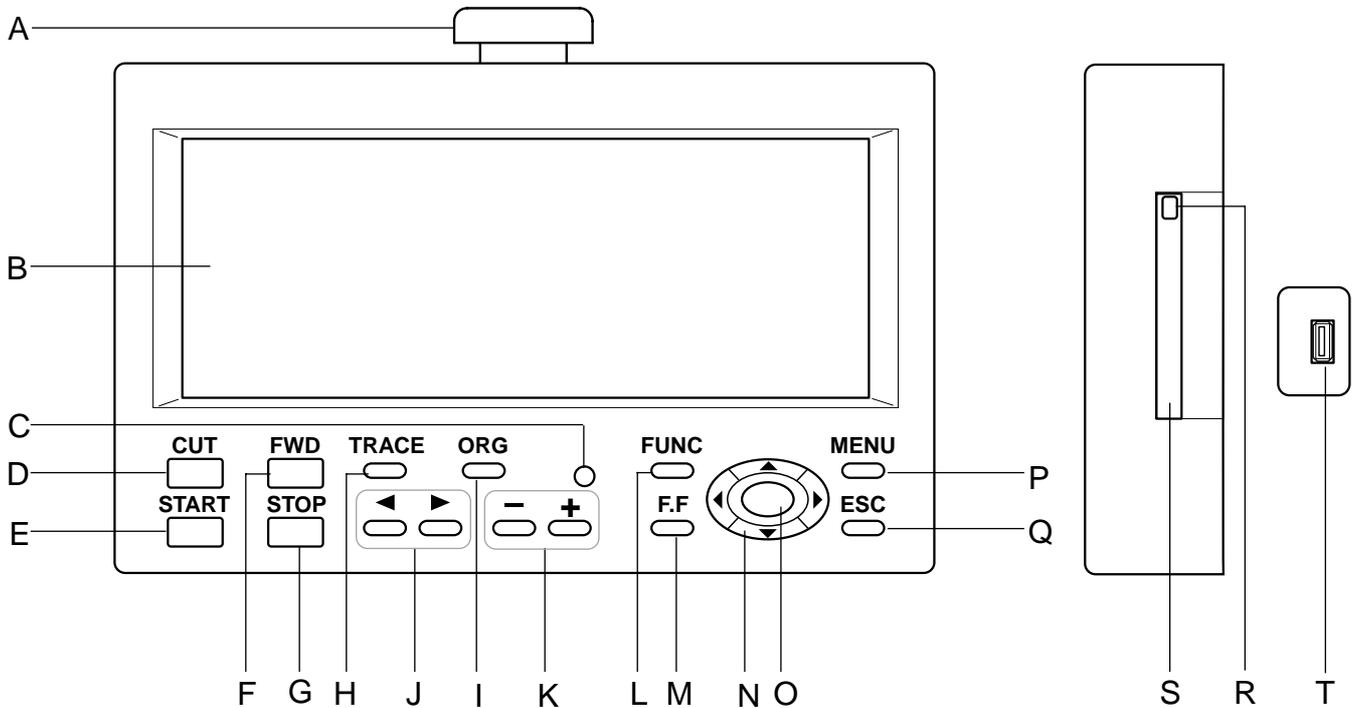

G. Stop button

This stops the machine.

When the STOP button is pressed while the Drive Lamp is blinking (green color), the following will take place depending on the manner pressed:

Press once Frame moves back one stitch.

Press continuously The frame will move backwards continuously.

Keep pressing. The button's function locks. The frame goes back by 1 stitch at a time continuously. Push the stop button again to stop it.

Keep pressing longer still... The button's function locks. The frame goes back by 10 stitches at a time continuously. Push the stop button again to stop it.

H. Trace button

When pressed while at the beginning of design, the embroidery frame moves following the outer edge of the design. This allows you to compare the design size and position against the frame before sewing.

I. Original point return button

This returns the frame to *pattern origin point. After performing this action once, repeating this again will cause the frame to return to the previous position.

J. Needle change button

Moves the sewing head to the adjacent needle in the direction of the arrows.

K. Speed control button

Press the + button to increase the machine sewing speed and the - button to lower the machine speed. The sewing speed is shown on the display.

L. Function button

Press the function button to execute each function of embroidering.

If press and keep, laser pointer switch ON or OFF.

M. Fast button

When you press this key while pressing frame move key, frame movement speed increases. You can make more slow frame speed in

"Machine settings" menu. [P](#) 5-2

N. Arrow button (Up, Down, Left, Right)

The frame moves toward direction of the arrow mark..

In the menu, select each item required by pressing the arrow mark toward the right direction.

You can change direction to opposite side in " Machine settings" menu. [P](#) 5-1

O. Set button

By pressing Set button, you can execute each function in the menu and other settings. Indicate target design on LCD panel when non-showing design.

If you press this key and hold, re-display your target design.

P. Menu button

Displays the function menu for the machine settings and the design set-up.

Q. Escape button

Press ESCAPE button when you stop or cancel the settings selected.

R. Memory card eject button

Press this button to take out the memory card.

Do not try to take out the memory card when  is displayed on the LCD display.

S. Memory card insertion slot


PCMCIA card socket for installing the memory cards.

T. USB memory port

USB memory socket.

Display example

When beginning an embroidery

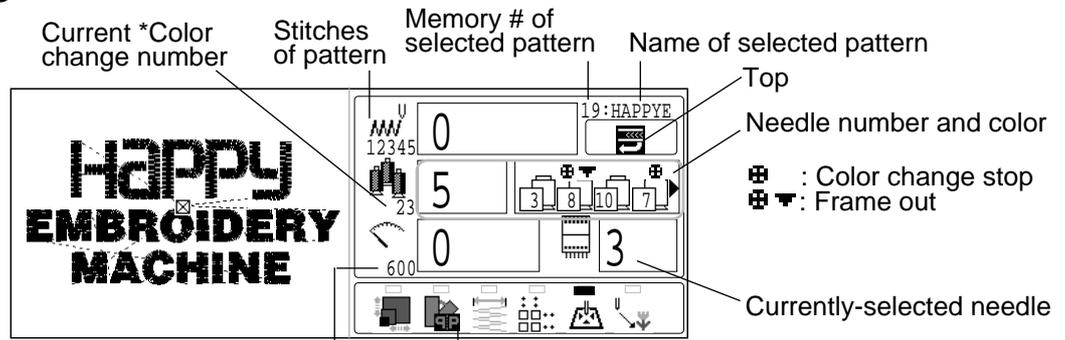


Number of maximum repetitions set

Lamp above icon blinks when each function (Scale, Angle /Convert, Width, Repeat, Auto origin and Off set) is set.


While embroidering

+cursor indicates the position of actual stitch point.

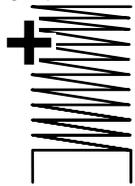

Drawing of next 100 stitch will be shown.

The embroidered part and the next embroidering part will be colored.

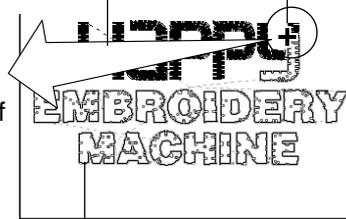

The part which has not embroidered will be shown in outline.

Color change number sewn up to now

Number of stitches sewn up to now


Shift to left when color change.

- If a needle number is not assigned to a Color change number, the default color will be assigned automatically.

- Sewing starts after outline of entire pattern is displayed if sewing is started from "Top" position.

- "+" cursor indicates the position of actual stitch point. In the display, pattern is filled with color reflecting sewing progress.

Machine stopped during embroidering

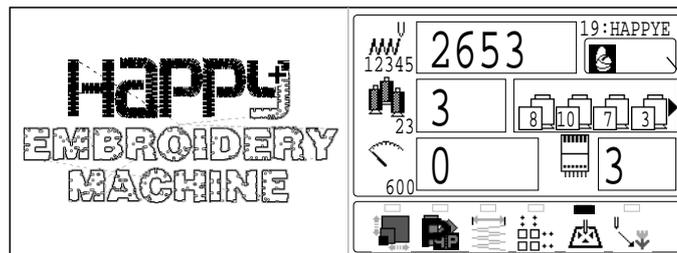

Status



Normal cap frame
This icon shows that the drive frame is set for low profile cap sewing.



Wide cap frame
This icon shows that cap system is set for wide cap field sewing.




Top
This indicates that the machine is ready to start sewing from the "top" memory position of the pattern.



Frame out
This indicates that a frame out is occurring.

Display if the machine has no design in memory

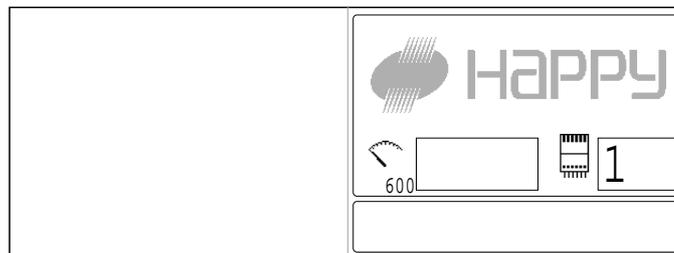

Display example

Display when manually moving the hoop (at TOP state)

Size of pattern and distance

↑ Height
↔ Width
↑ Size between start point and the top of pattern
↓ Size between start point and the bottom of pattern
→ Size between start point and the extreme right of pattern
← Size between start point and the extreme left of pattern
Y: Y-distance moved
X: X-distance moved

Top

Selected frame

Embroidery area

Outline of pattern

Display when manually moving the hoop (at RUN state)

Size of pattern

↑ Height
↔ Width
↑ Size between start point and the top of pattern
↓ Size between start point and the bottom of pattern
→ Size between start point and the extreme right of pattern
← Size between start point and the extreme left of pattern

X-distance moved

Y-distance moved

(Indicates X and Y distance)

The following functions are performed by in the drive menu.

Frame position

Selection the way of frame movement and Move frame.



Center  9-4

Moves the embroidery frame to the center automatically.



Frame out  5-2

Move frame to the front position which was set before.

It is convenience if hand work is required in the middle of embroider process.



Design centering

Move design to the center of frame.



Position  9-3

When sewing is interrupted in the middle of a design, this returns the frame to current sewing position regardless of where frame may have been moved with the arrow keys after interrupt.

Top 9-4

This causes frame to return to the top of the pattern.

The  lights if you perform this function while in the middle of a design.

If this function is performed again, the action will be cancelled.

The  light will turn off. The frame will then return to the previous position it was previously stopped.

Frame type 7-2

Select appropriate frame type from  *Tubular frame,  Standard cap frame,  Wide cap frame or Border frame .

If Cap frame is selected, status will be indicated between  (Standard) or  (Wide cap).

0 Set (Registration of original point)

This enables to set original point manually.

Normally original point is registered automatically to the first stitch of the pattern data.

Needle Jump, Needle Drive

In this mode, machine will not sew.

Log-in, Log-out

Log-in is for the use of networking between the machine and PC.

Log-out is for disconnecting the machine from the network between PC.

Refer to the Network software instruction which correspond to this machine.

Turn-off

This will be used for turn off the machine when machine is networking.



Refer to the Network software instruction which correspond to this machine.

1. When the machine is stopped, press **(FUNC)**.
The drive menu will be shown.



CAUTION: To prevent accidents.
The embroidery frame and carriage will move.
Please keep hands clear for your safety.

2. Select the desired function with  and
press **(SET)**.
Drive menu will be cleared after execution of
selected function.

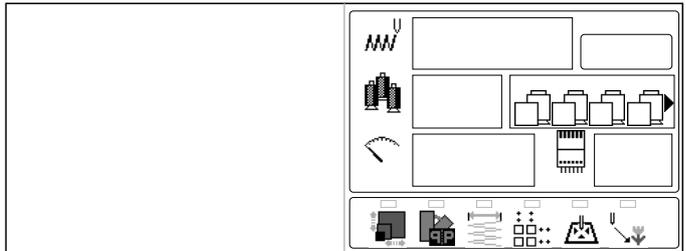
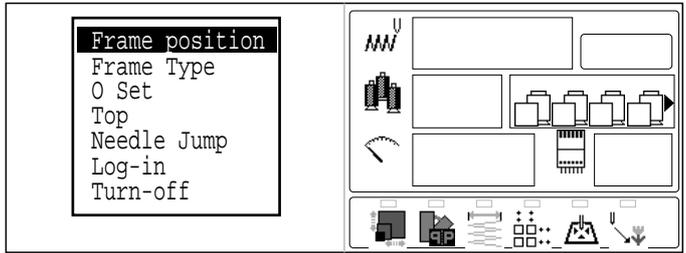


The diagram below describes the layout functions accessed from the main menu.

The main menu is accessed by pressing **(MENU)**.


From here, any function can then be selected with the up and down . Pressing **(SET)** enters your choice.

If you Press **(ESC)** from any point in the Menu mode, you will change to Drive mode.

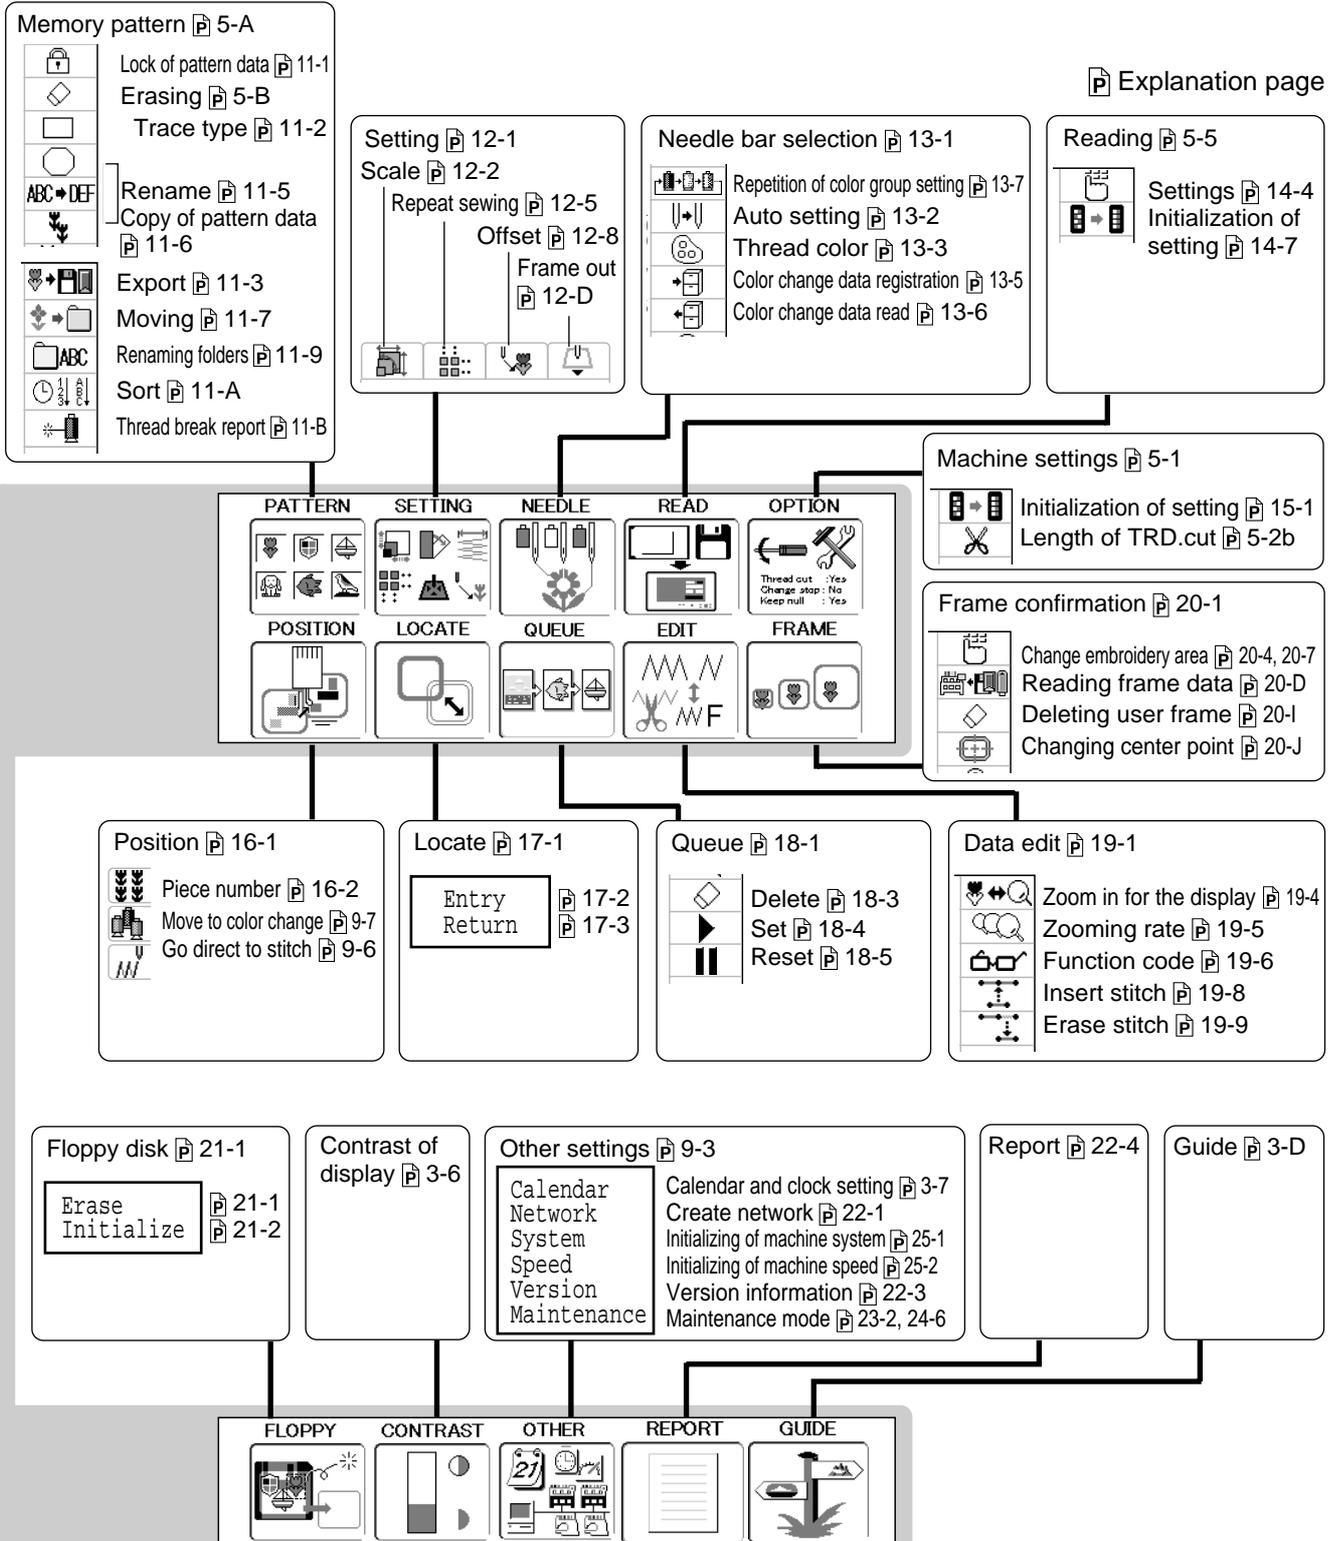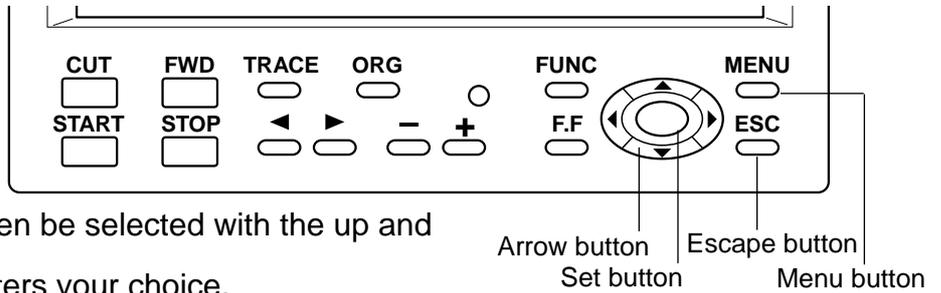


In Basic mode, explanation is shown under Icons on each menu.  4-8

Explanation

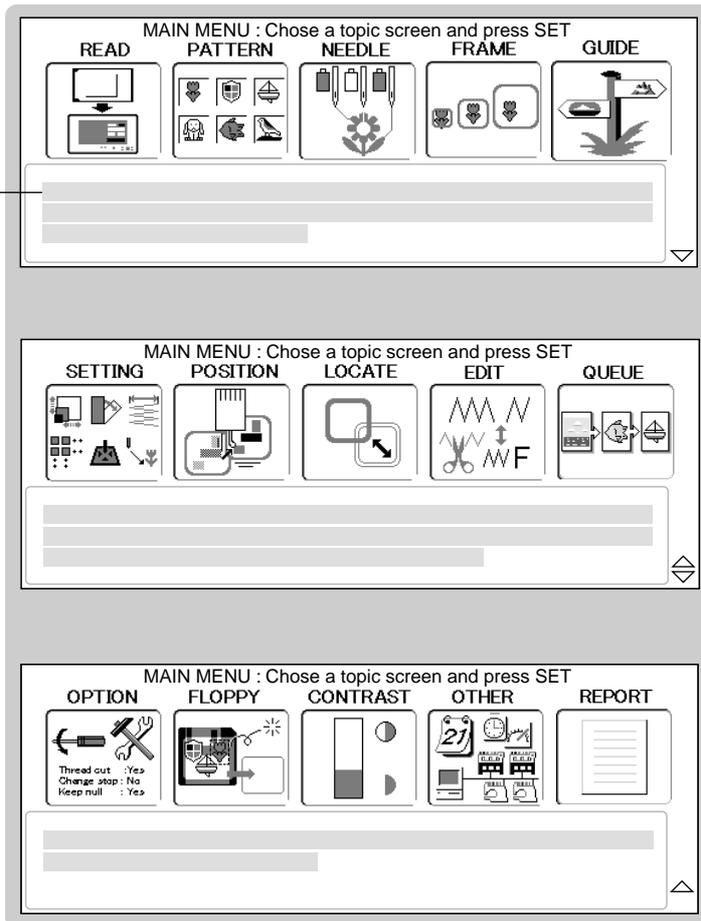


The GUIDE offers tips and step-by-step help for embroidering with the machine. In each stage of embroidery operation there is an easy to follow guide available.


1. When the machine is stopped, press **(MENU)** and Select "GUIDE" with .

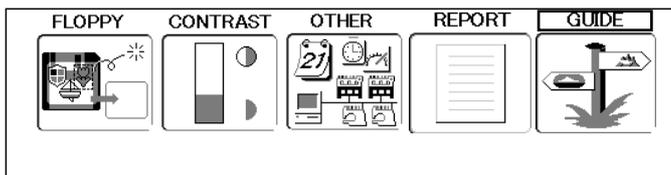


2. Press the **(SET)** button.

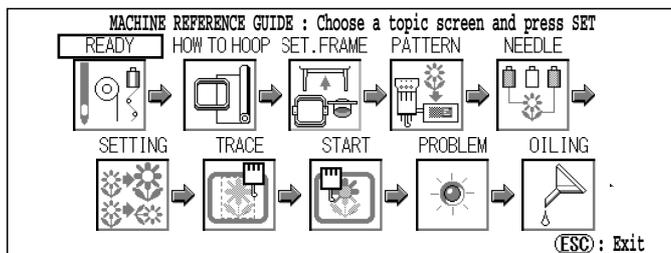


3. Select desired item with  and press **(SET)**.

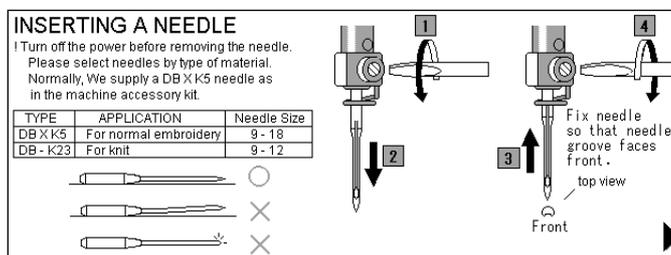

4. When  or  is shown in the right lower portion of the display, you can move to next page by pressing .

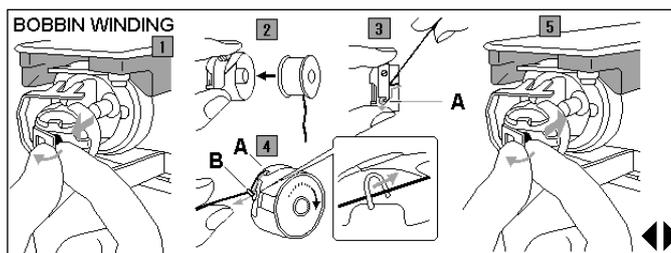

5. Press the **(ESC)**.
You will return to the guide menu.

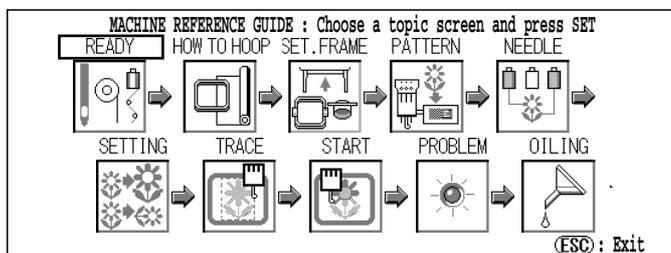

Press **(ESC)** to return to Menu mode.
Press **(ESC)** once again to return to Drive mode.


INSERTING A NEEDLE

4-1


Select a needle of the right type. See the following "SELECT THREADS".

 **CAUTION: To prevent accidents.**
Turn off the power before removing the needle.

1. Loosen the needle clamp screw slightly with the screwdriver.
2. Remove the needle.
3. Insert a new needle into the needle clamp with push it up as far as it will go keeping the slotted side of the needle in front.
4. Tighten the needle clamp screw with the screwdriver.

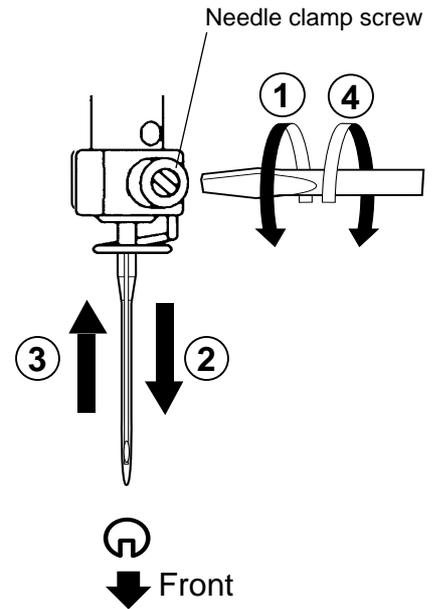

- A. Do not use a bent or blunt needle.
Place the needle on a flat surface and check for straightness.

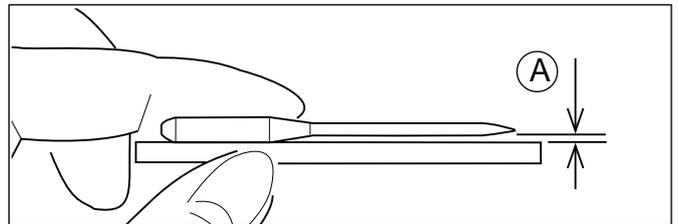

About needle

Please select needles by type of material .

Normally, We supply a DB X K5 needle as in the machine accessory kit.

TYPE	APPLICATION	Needle Size
DB X K5	For normal embroidery	9 ~ 18
DB - K23	For knit	9 ~ 12

Relation of needle and upper thread

Please select type of needle and upper thread by flowing list.

Size		Relation of needle and upper thread			
Organ	German	Cotton #	Silk	Polyester	Rayon
# 8	# 60	100 ~ 130	140 ~ 160	150 ~ 200	50 ~ 70
9	65	70 ~ 80	100 ~ 120	130 ~ 150	70 ~ 100
10	70				
11	75	50 ~ 60	80 ~ 100	100 ~ 130	100 ~ 130
12	80				
13	85	36 ~ 40	60 ~ 70	80 ~ 100	130 ~ 150
14	90				
15	95				
16	100	30 ~ 36	50 ~ 60	60 ~ 80	150 ~ 160
17	105				
18	110	24 ~ 30	40 ~ 50	50 ~ 60	180 ~ 230

Normal embroidery field

► Normal use embroidery needle and upper thread.

Upper thread : Rayon 120 d/2 (120 denier)
Polyester 120 d/2 (120 denier)

Needle : #11 (DB X K5)

► If the relationship of needle size and thread type is incorrect, it is possible to have any of the following problems.

- Thread break
- Skip stitch (Upper thread does not catch bobbin thread)
- Other stitch quality problem

Backing

Generally, Backing is used for hooped embroidery fabric. Knit fabrics particularly require the use of embroidery backings.

Embroidery backings will allow the hoop to move the fabric more accurately, creating a more beautiful embroidery.


Select backing type

Choose the thickness and number of sheets by the type of material and embroidery condition. Generally, you should consider the following items.

- Embroidery stitch quality
- Contraction or compression of fabric caused by sewing, etc.
- Stiffness of fabric

■ In case, if you sew lace and leather, you may not need backing sheet.


Example of using a backing

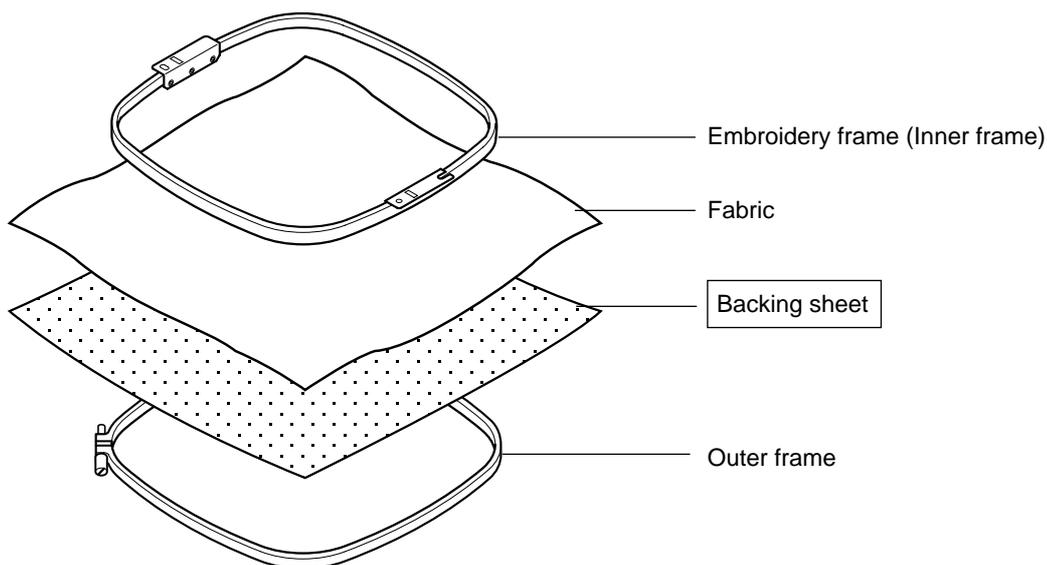

● Winding the bobbin (OPTION)

Thread the bobbin winder as shown below:

1. Thread guide
2. Thread tension – Be sure to thread through the small eye before going between the disks.
3. Bobbin (Place the bobbin on the bobbin winder spindle.)
4. Press the limit lever as indicated by the arrow to start the winder. The lever stops the winder automatically after the winding is complete.

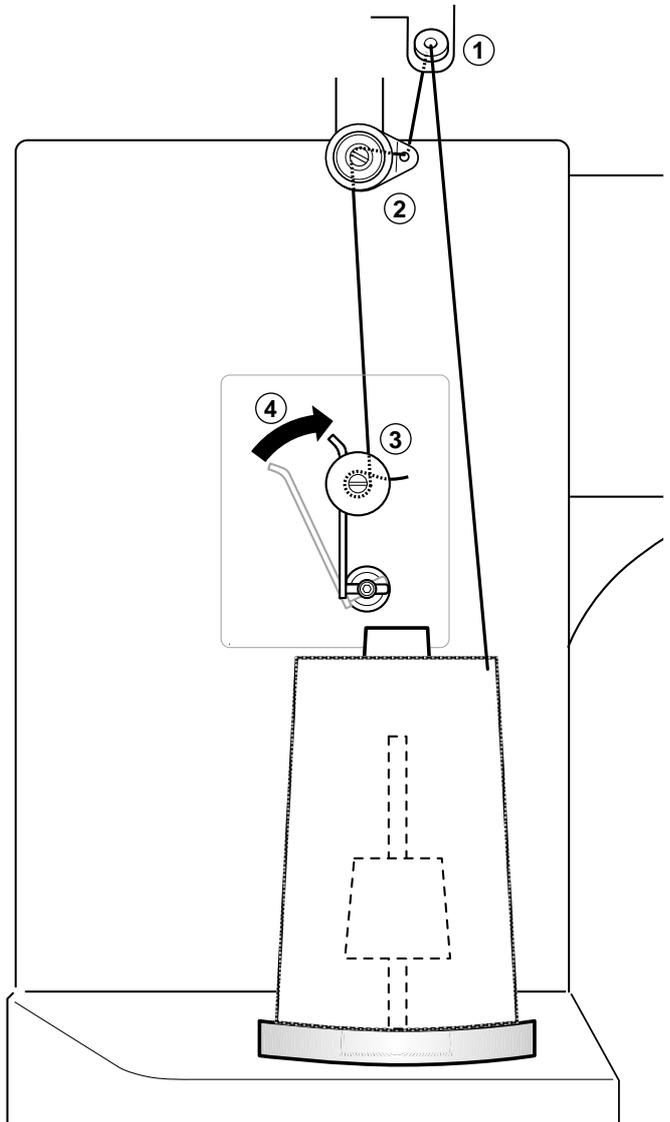

Tension




When adjusting bobbin winder tension:

- Ensure thread winds evenly on bobbin as shown.

Confirm that the bobbin is wound properly..

- Keep the tension constant while winding.


Tighten thread tension if thread winds too loosely.

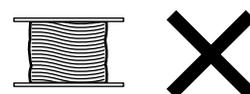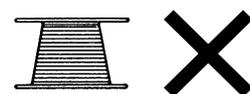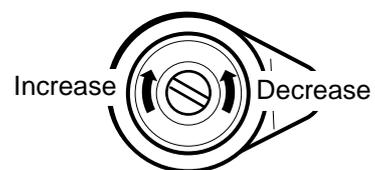

⚠ CAUTION: To prevent accidents.
Please watch out for the point of the rotary hook when you replace the bobbin.


● Removing the bobbin

1. Open hook cover (A) to front.
2. Grasp bobbin case latch (B) and withdraw bobbin case from hook taking care not to damage the thread keeper.

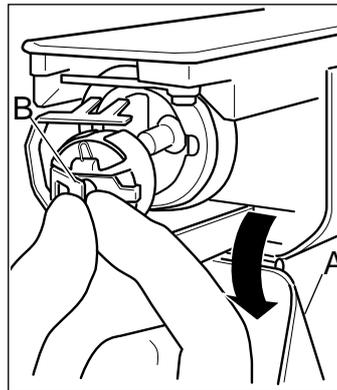


● Inserting the bobbin

1. Hold the bobbin case in left hand. Hold the bobbin in your right hand with thread on top leading from left to right.
2. Insert bobbin in case and draw thread up into slot in case.
3. Draw thread under tension spring (A) and wind into guide coil (B). The bobbin should turn clockwise in the case when the thread is pulled.

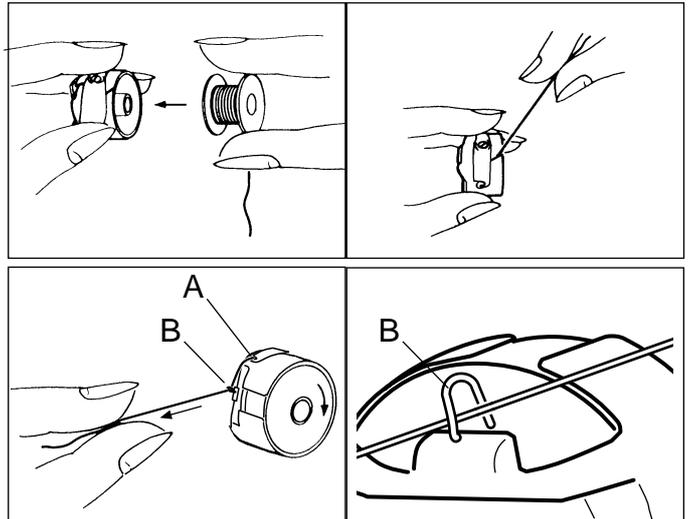


● Adjusting bobbin thread tension

1. Hold bobbin thread and jerk upward approx. an inch. Thread should unspool further approx. the same amount.
2. The screw on the tension spring is for adjusting bobbin tension. This adjustment is very delicate. Please turn the screw only a small amount. Only 1/8 of a turn maximum.

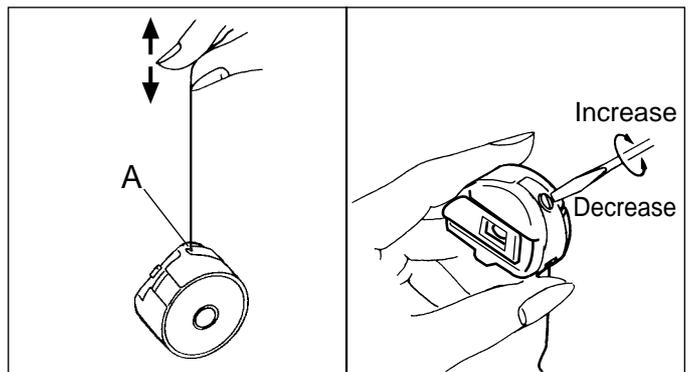

● Inserting the bobbin case


1. After threading bobbin in case, open bobbin case latch (A), grasping it in fingers as shown. Slip bobbin and case on stud of rotary hook body, and press in securely. Release bobbin case latch. Press the bobbin case in to be sure it is fully seated.
2. Close hook cover.

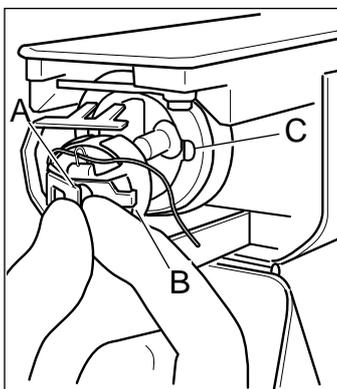

■ The attached bobbin case is available only for this machine. Thread may be caught in thread guide coil if other types are used.

● How to thread upper thread

Pass upper threads in order according to the figure:

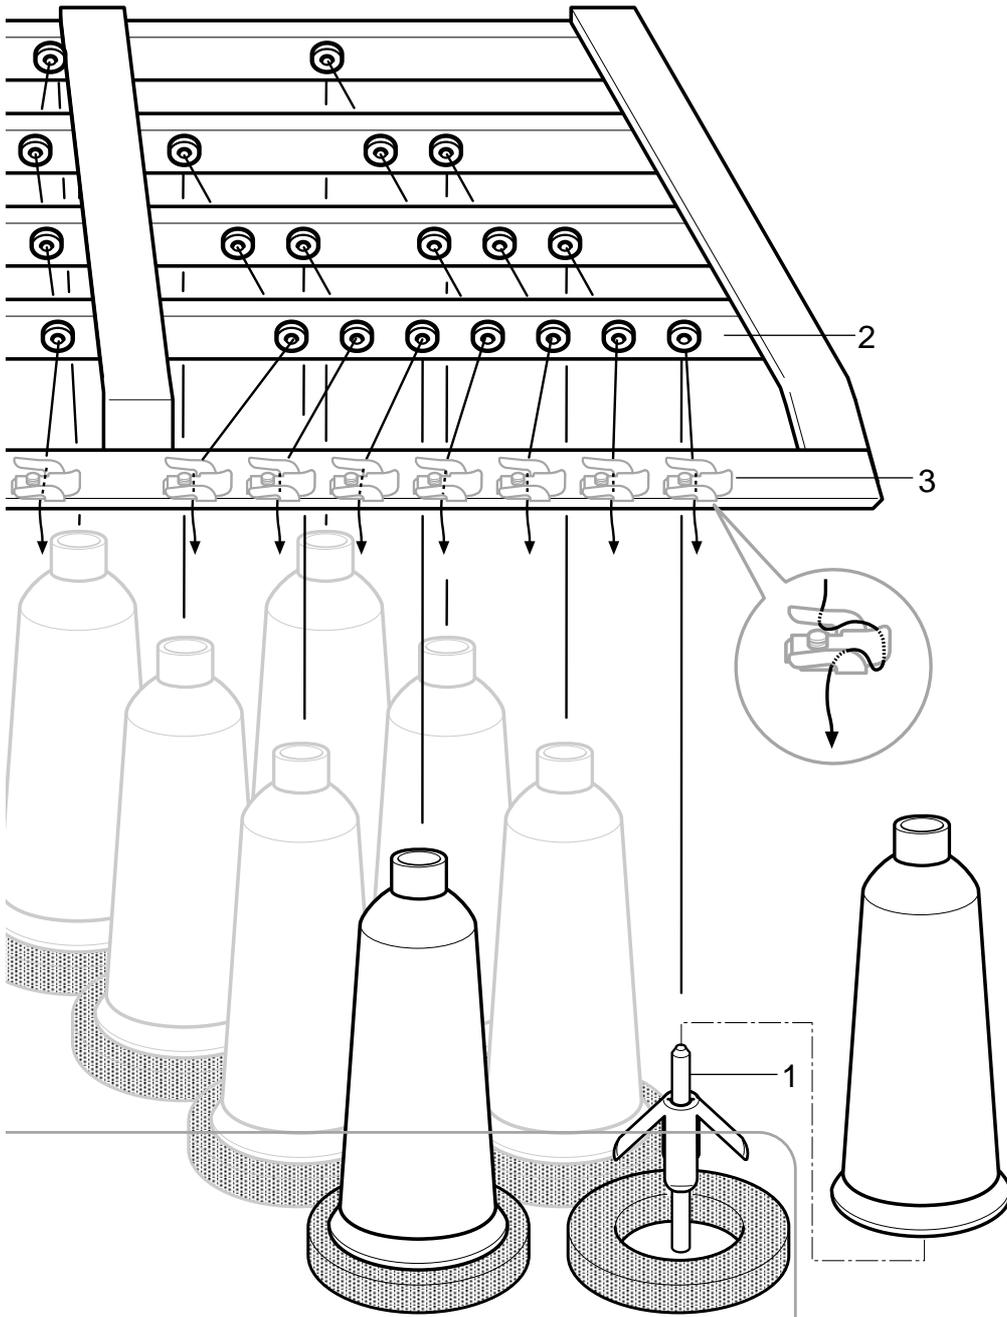

1. Thread stand


Set thread cone on the stand.
Small cones can also be used as shown.

2. Thread guide

Thread through the thread guide above each
thread cone.

3. Upper rectifier

Continued next page

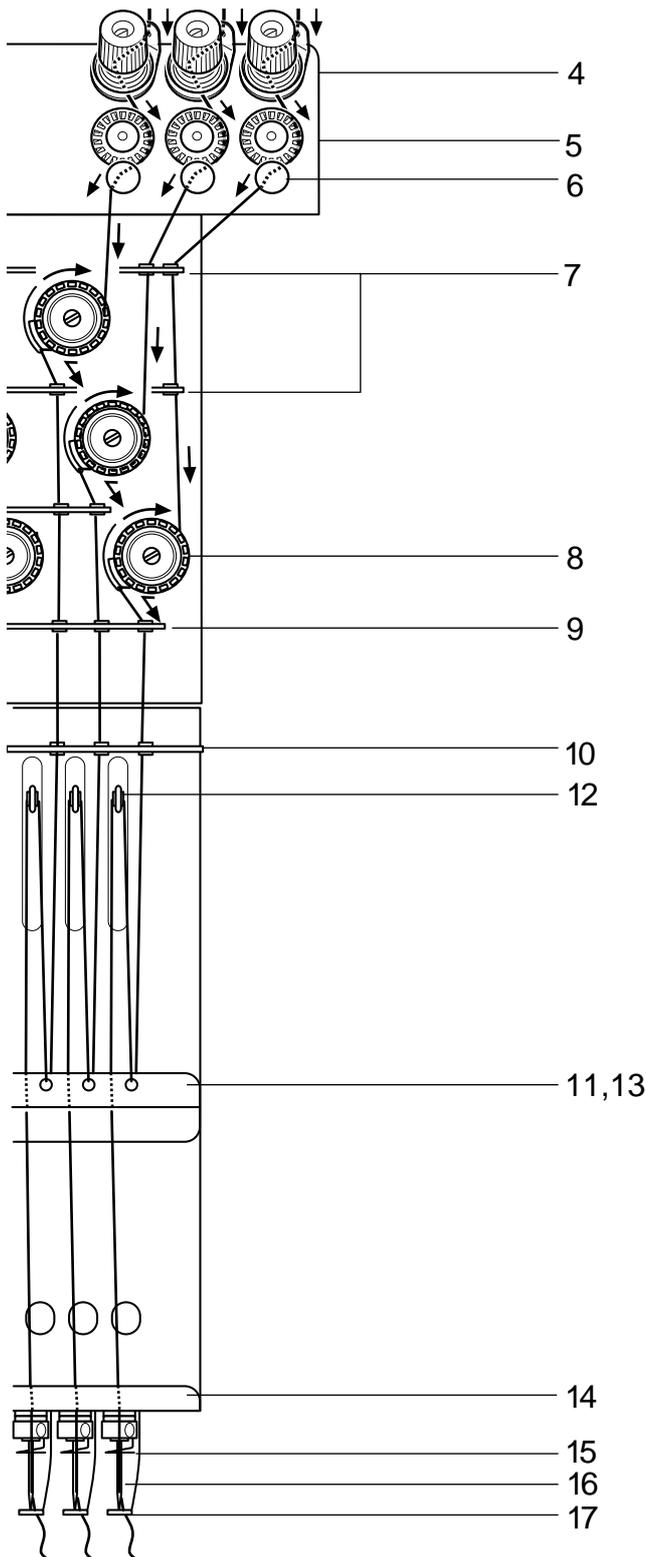

4. Minor thread tension
5. Detection roller
6. Guide
7. Upper thread guide
8. Thread tension
Wind upper threads one time around rotary tension disc clock-wise.
9. Lower thread guide
10. Thread guide plate upper
11. Thread guide plate middle
12. Take-up lever
13. Thread guide plate middle
14. Thread guide plate lower
15. Needle bar thread guide
16. Needle
Thread from front side of needle.
Pull upper threads slowly and see that the detecting roller moves smoothly by pulling the thread downward as much as possible.
17. Pressure foot

When checking thread, pull upper threads from needle and check if detecting roller moves smoothly.

CAUTION: To prevent accidents.
Please be careful of the sharp point of the needles when threading upper threads through the needle.

Basic mode supports operator for making machine setting step by step.
Basic mode has 2 levels of support.

Basic 2 : The explanation of each item can be seen, and menu moves to next step automatically after setting of each items.

This mode may be used for understanding all steps of operation setting.
Especially this mode support to the beginner of embroidery machine.

Basic 1 : After setting one item of operation setting, the cursor moves to item of next step.
In this mode the explanation of item is not appeared on the screen and menu does not change automatically.

This mode may be used after understanding of operation steps.

Advanced : This mode may be used by operator who knows how to set machine well.
Any manu and item can be selected by operator.

Advanced is default setting of machine.

level can be changed in the menu "Machine Settings".  5-1

Power On 3-5


1. Turn on the power switch.
Please confirm the emergency stop button has been released.
Push the power switch firmly so it will remain on.



 **CAUTION: To prevent accidents.**
The embroidery frame and carriage will move.
Please keep hands clear for your safety.



2. Press the **SET** button.
After the carriage and frame move slightly, the embroidery frame will return to the previous position automatically.

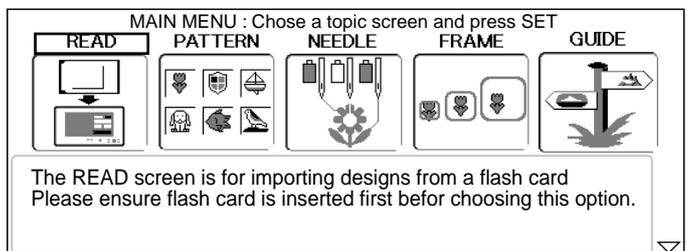

In case previous design is not finished completely and power machine off.

Sewing is stopped.
Do you wish to continue with this pattern?
Pattern Name : [12: BIRD]

3. In case you want to import design data from outside of machine, select "READ" with  and press **SET**.

In case you want to select design data saved in machine memory, select



"PATTERN" with  and press **SET**.

Jump to step.8.

In case you want to do Needle Setting, select

"NEEDLE" with  and press **SET**.

Jump to step 13.

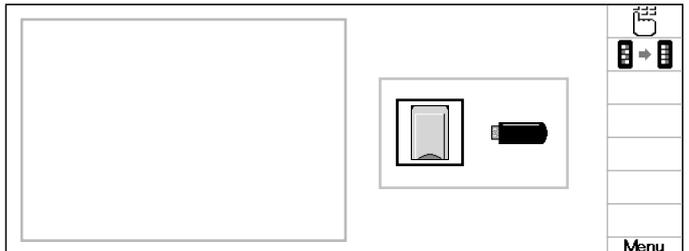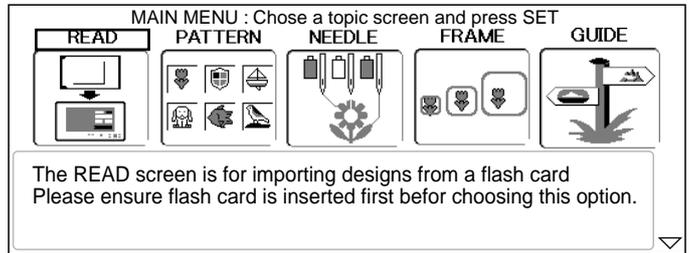

In case previous design is not finished completely and power machine off.


In case you want to continue same pattern, press **SET**.

Jump to step 24.

In case you do not want to continue same pattern, select "No" with  and press


SET.

The display will return to step 3.

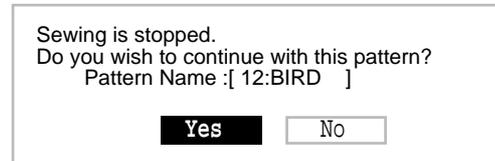

Read 5-6

4. Select memory card or USB memory with .

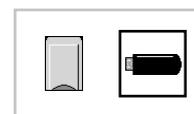


5. Press the **SET**.

Indicates pattern data of the memory card.

 Folder : Contents of folder will be displayed when you select this icon and press **SET**.


 Return : Once you move into the folder, this icon will be displayed at the top of the list. You will be able to move off from the folder by

select this icon and press **SET**. You will be also able to move off from the folder if you just press **ESC**.

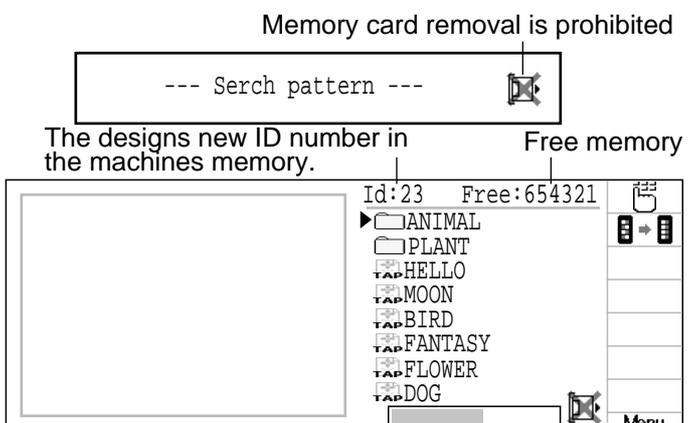

6. Select pattern with .

Display can be scrolled by pressing  left and right when there is a white part on the scroll display.

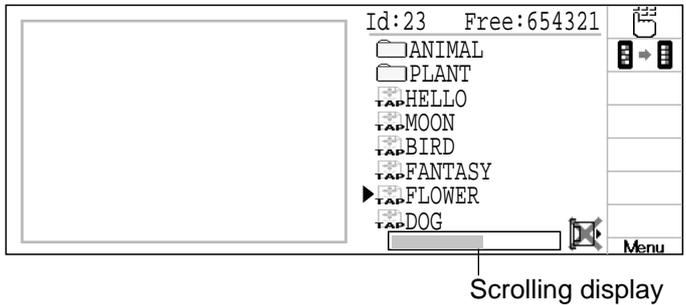

Scrolling display



7. Press the **SET** button.

Once design is read, enable to read next design continuously.

For reading another pattern data, select

"READ" by  and press **SET**.

You can select another data with step.6

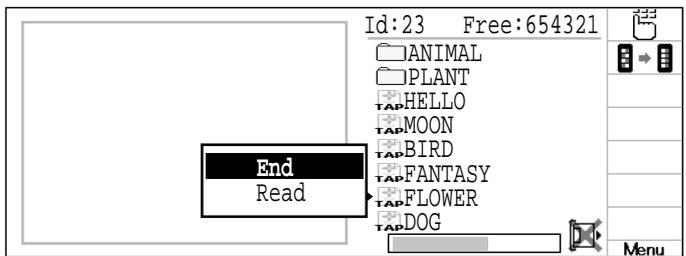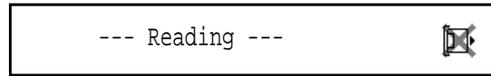


Pattern 5-A

8. Press the **SET**.

All saved pattern design is shown on display, and design saved at last is selected automatically.

Detail information of selected design is shown on left side of screen.

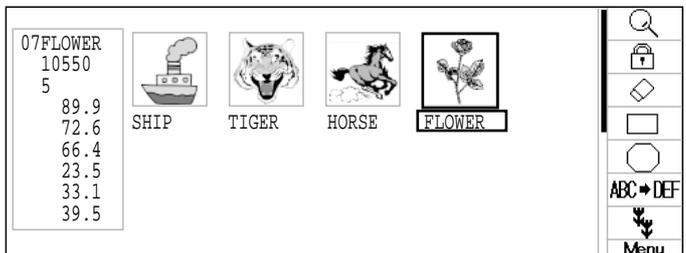

9. Press **SET** to start setting of design selected.

For selecting other design, by  select design and press **SET**.




10. In case you do not want to change direction of design, Press **SET**.

Jump to step.13.


In case you want to change direction of design, select  by  and press

SET.

Design turns 180 degrees and jump to step.13.

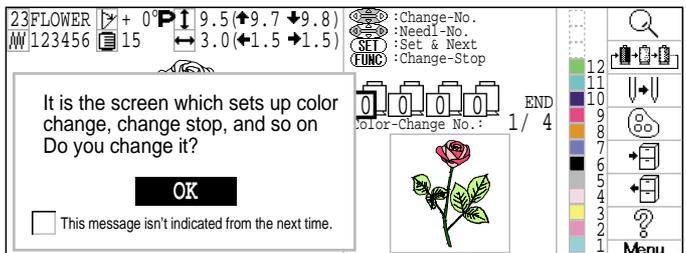


Direction of pattern

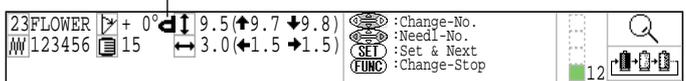

In case you want to change size and/or angle of design, select  by  and press **SET**.


Jump to step.11.

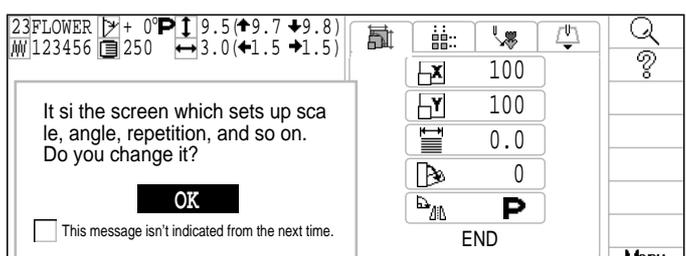


Pattern settings

11. Press **(SET)** and start pattern setting.

-  Adjust [P 12-2](#)
-  Repeat sewing [P 12-5](#)
-  Offset [P 12-8](#)
-  Frame out [P 12-D](#)

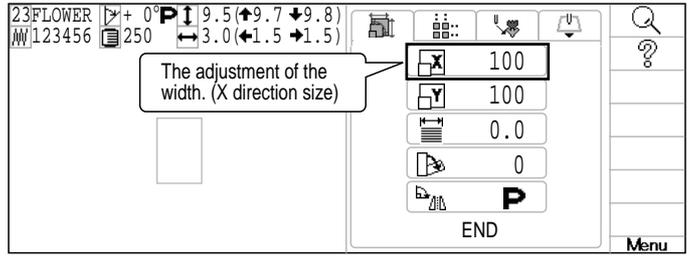


12. Select "END" with  and press **(SET)**.

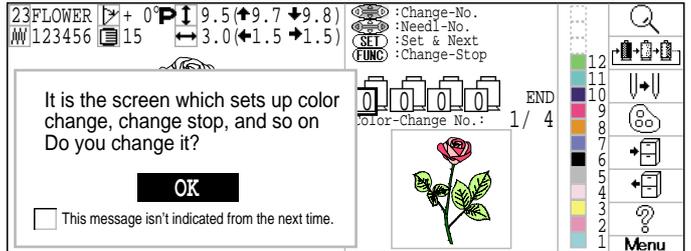

Needle bar selection [P 5-E](#)


13. Press the **(SET)**.

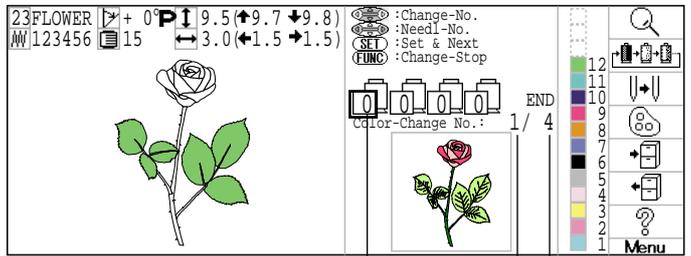

Needle number
Current color change number
Number of color change number


14. Press right /left of  to select the color change number.

The current color change number is showed in the pattern data display portion.

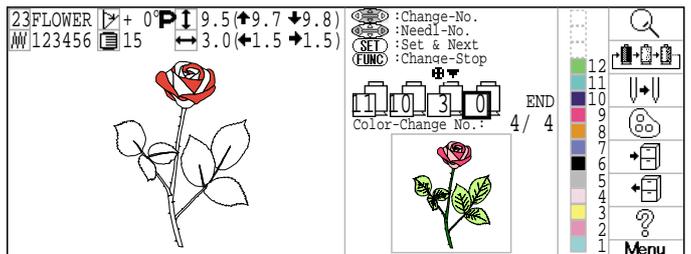


15. Press up/down of  to select the needle number.

The setting is fixed.

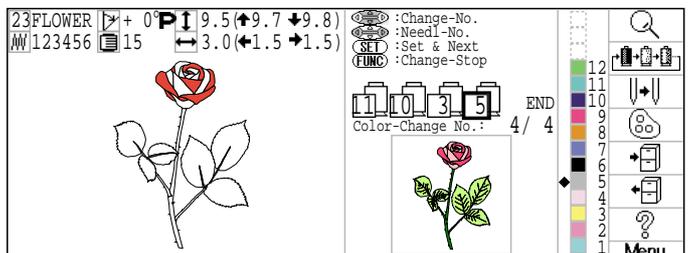


16. Repeat Step 14-15 and set needle to all color change number.

17. Press right of  to select "END" and press **(SET)**.

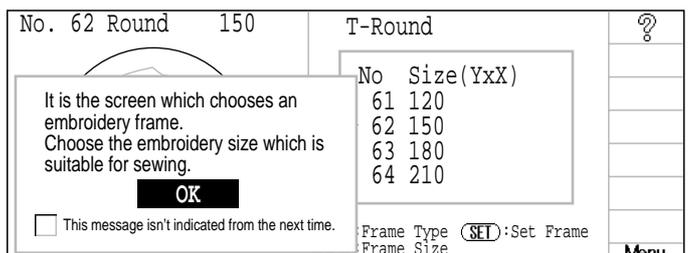


Frame confirmation 20-1

18. Press the **SET** button.
Indicates the select frame.

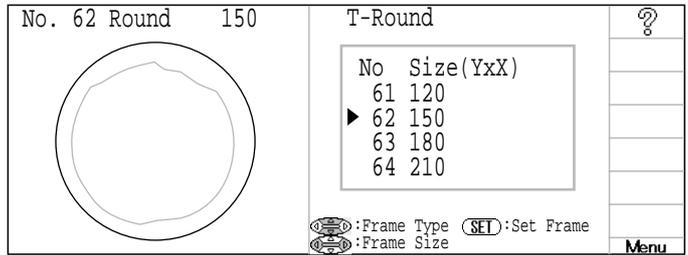


19. Press right /left of  to select the type of frame.

Press up/down of  to select desired size of frame.

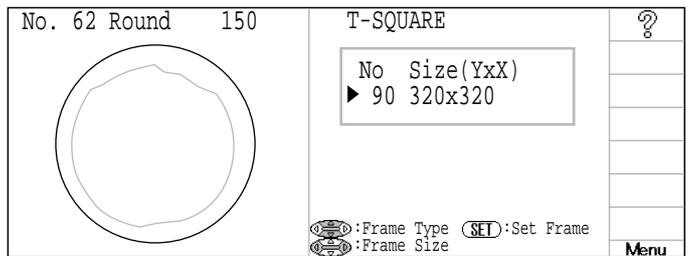


20. Press the **SET** button.
The type and shape of the frame is in black and embroidery area and outline of the pattern itself appear in red. All are displayed on the left together.

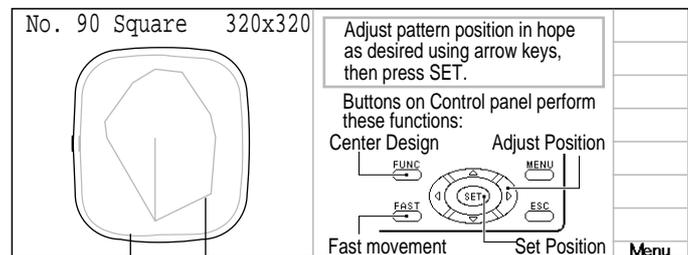


Embroidery area Outline of pattern

21. By  position of design can be moved, press the **SET** button.

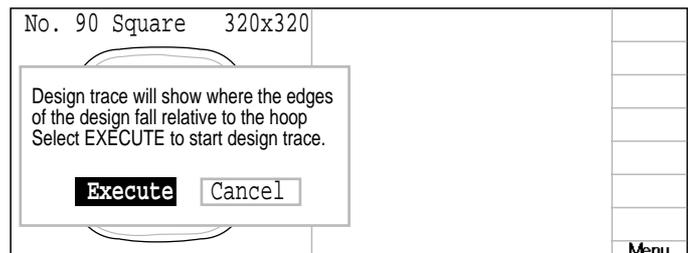


22. Press the **SET** button.
Select "Cancel" with  and press **SET**.
The display will return to step 20.

 **CAUTION: To prevent accidents.**
The frame moves quickly.
Keep your hands away from the frame.

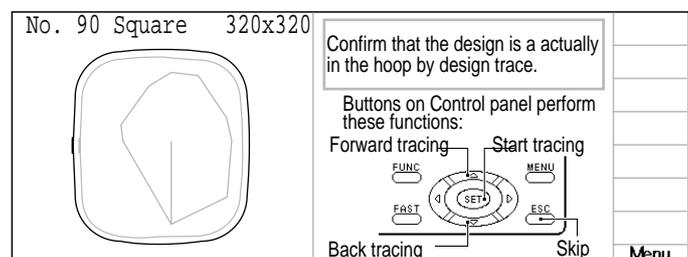


23. Press the **SET** button.
Frame starts to move for tracing.
Please confirm that pressure foot and needle do not hit to frame.
If press **ESC**, skip trace operation.
To stop tracing, press **ESC**.

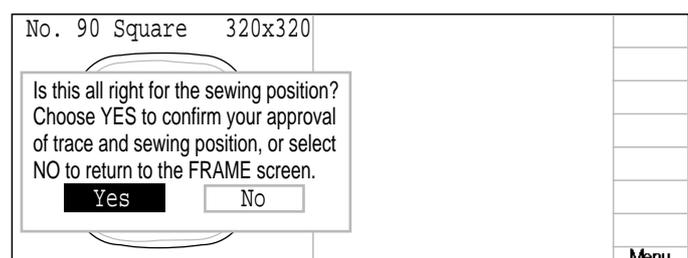

24. Press the **SET** button.

Select "No" with  and press **SET**.
The display will return to step 20.


Sewing could be prepared Push the start button to start sewing Push a menu key if you want to do re-setup.

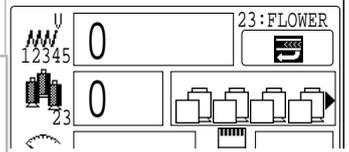

Start sewing

25. Press the **START** button.
The embroidery will start.

By button **MENU**, you can jump to step 3..

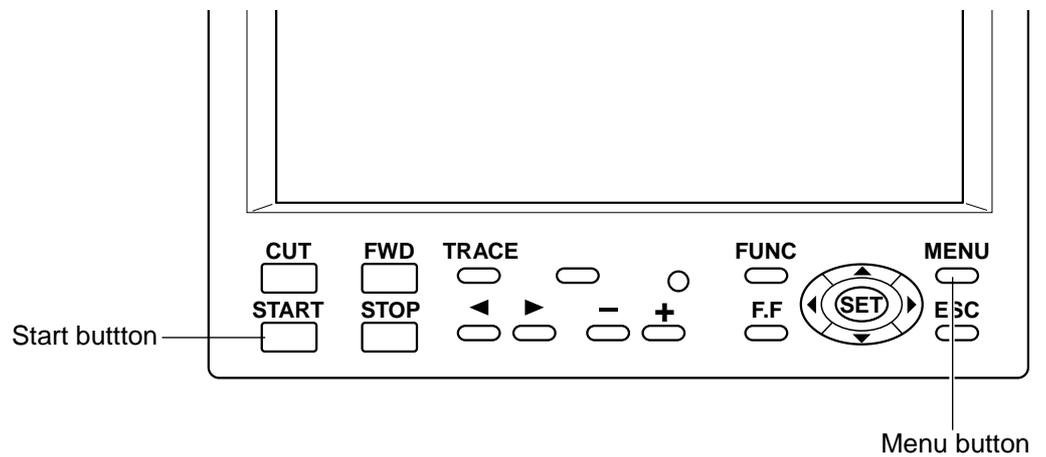

MACHINE SETTINGS

5-1

Before embroidering, check the basic settings of the machine.

Be sure to set #14 (232C speed) if setting up a PC serial connection.

The rest of the settings can be left at default values (as indicated by underline below).

No. Display	Setting <small>Default is underlined</small>	Contents
1 TRD. break back	<u>Yes</u> No	On thread breaks, this causes sewing position & frame to move backwards by several stitches before the detected break before stopping.
2 All head mending	Yes <u>No</u>	The machine mends threads only on heads with detected thread break. The machine mends threads for all heads irrespective of thread
3 Width data limit	1 - <u>13</u> mm (13=12.7)	When stitch length exceeds this length, the machine divides it by this jump length and creates multiple movements. Width data limit becomes 12.7mm only when setting value is set to 13. Please use a smaller number when you use thick and heavy material.
4 Quick start mode	. . <u>Yes</u> No.....	If you set to "No", the machine will increase speed slowly. Please select "No." when you have a problem with skipped stitches on the beginning stitch after thread trim. • The machine sews up to 3 stitches slowly after thread cut. • The machine sews up to 5 stitches slowly after thread cut.
5 Auto thread cut	<u>Yes</u> No	This performs automatic thread cut after color change and stop.
6 Cut at jump data	1 ~ 8 (<u>3</u>)..... 0.....	When a set number of continuous jumps exists in pattern data, the machine cuts threads before jumping. • Machine trims the thread on setting number of constant jump. • Does not trim.
7 Cut at null jump	<u>Yes</u> No.....	This sets thread cuts before null jumps (isolated jumps with no net movement) • Does trim on empty jump data. • Does not trim on empty jump data.
8 CHG. always cut	Yes..... <u>No</u>	Forces a trim at every color change. • Always thread trim before color change. • If data does not have trim function at color change point, machine does not trim.
9 Length of TRD. cut	Max. Long <u>Normal</u> Short Min. Needle	The machine cuts upper threads to a longer length. • The upper threads of each needle will be cut off by registered length. 5-2b
10 Thread back long	Yes..... <u>No</u>	Select long lock stitch. • At time of thread cutfi1.2mm, At time of startfi1.6mm • At time of thread cutfi0.8mm, At time of startfi1.2mm
11 Slow (mend out)	<u>Yes</u> No	When mending finishes and all heads start to embroider again, machine speed to be decelerated for safety purpose.
12 STR. Lock stitch	<u>Yes</u> No	Adds lock stitch automatically.
13 Width data all	-1.0 ~ 1.0mm <u>0.0</u> mm.....	This is to alter the widths of all satin stitches for all the designs in the memory. • Adjust satin stitch width by selected amount. • Does not adjust width.
14 232C speed	2400 ~ ~ <u>38400</u> ~ ~115200bps	Please select the Communication speed (baud rate) of the machine's serial port. Adjust the communication speed to the same speed as your PC. If the baud rate is set to a larger amount, the data of the design will be read faster. However, there is a greater potential for error at higher rates.
15 TRD. break detect	Quick 3 ~ ~ <u>Normal</u> ~ ~ Slow 3 Off	Sensitivity selection of the thread break detect sensor. By default it is set to "Normal".
16 Convert cap	Yes <u>No</u>	When you install the cap drive frame on the machine, the machine will convert (rotate) your design automatically.
17 Revers frame move	Yes <u>No</u>	Frame will be moved in the opposite direction of the arrow key.
18 Revers move fast	Yes <u>No</u>	Frame movement will be faster by pressing arrow key. Frame movement will be slow down by using with fast key.
19 STR. Auto Position	<u>Yes</u> No	Machine remembers & returns to last sewn position after sewing interruption even if operator has moved the frame after interrupt.
20 Embroidery weight	<u>Light</u> Middle Heavy	This setting for heavy duty material depends by material weight. Normally, please select "middle" or "Heavy" for Border frame. Machine speed is decreased automatically, when you select "middle " or "heavy".

No. Display	Setting <small>Difult is underlined</small>	Contents
21 Expand cap limit	1 ~ 10mm <u>0</u> mm.....	The direction of Y-axis of the embroidery area (standard) is extended in the direction of the brim of the cap. If the embroidery area is extended too much, there is a possibility that a needle and pressure foot may hit a frame and may be damaged. Before start sewing, please check carefully the embroidery area by trace function etc.. • The embroidery area is extended with the set-up size. • The embroidery area is not extended.
22 Frameout position	0 ~ 100 ~ 780mm	Set movement of frameout in the drive menu. 3-B
23 Operation mode	Basic 2 Basic 1 <u>Advanced</u>	Change operation mode. • Auto cursor move, Menu explanation, Auto menu change • Auto cursor move • Advanced mode
24 Display by inch	Yes <u>No</u>	• Display the unit of dimensions at an inch. • Display the unit of dimensions by millimeters meter.
25 Trace speed	0 ~ 100 ~ 300	You can change the Tracing speed. "100" mean the normal speed. If you change the number more bigger, the speed decrease.
26 USB Communication	USB-COM <u>Normal</u>	• Please select when you make USB connection with 64bit type PC to the Machine. • By default it is set to "Normal".

1. When the machine is stopped, press and Select "OPTION" with .

2. Press the .

Comes indicate (Machine settings) or (Pattern read settings).

3. Select with and press .

You select , setting for design data read.
 14-4



4. Select desired setting item with .

5. Press and press up/down of to change the setting.

6. Press the .

Each item will be indicated in green if it has changed from its default setting. It will revert to black if setting has returned to default. Other settings can be changed by following procedures 4 through 6.

Press to return to Menu mode.
Press once again to return to Drive mode.

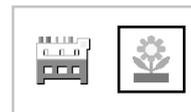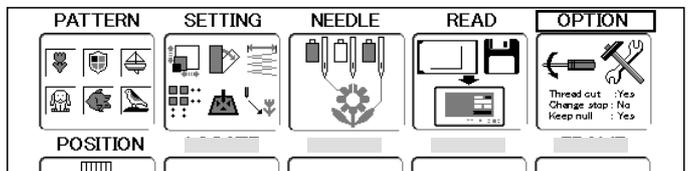

▶ 1 TRD. break back :Yes	11 Slow (mend out) :Yes	
2 All head mending :No	12 STR. Lock stitch :Yes	
3 Width data limit :13	13 Width data all : 0.0	
4 Quick start mode :Yes	14 RS-232C Baud late:38400	
5 Auto thread cut :Yes	15 TRD. break detect:Normal	
6 Cut at jump data :3	16 Convert cap :No	
7 Cut at null jump :Yes	17 Revers frame move:No	
8 CHG. always cut :Yes	18 Revers move fast :Yes	
9 Length of TRD.cut:Normal	19 STR.Auto Position:Yes	
10 Thread back long :No	20 Embroidery weight:Light	

1 TRD. break back :Yes	11 Slow (mend out) :Yes	
2 All head mending :No	12 STR. Lock stitch :Yes	
3 Width data limit :13	13 Width data all : 0.0	
4 Quick start mode :Yes	14 RS-232C Baud late:38400	
▶ 5 Auto thread cut :Yes	15 TRD. break detect:Normal	
6 Cut at jump data :3	16 Convert cap :No	
7 Cut at null jump :Yes	17 Revers frame move:No	

1 TRD. break back :Yes	11 Slow (mend out) :Yes	
2 All head mending :No	12 STR. Lock stitch :Yes	
3 Width data limit :13	13 Width data all : 0.0	
4 Quick start mode :Yes	14 RS-232C Baud late:38400	
▶ 5 Auto thread cut :No	15 TRD. break detect:Normal	
6 Cut at jump data :3	16 Convert cap :No	
7 Cut at null jump :Yes	17 Revers frame move:No	

1 TRD. break back :Yes	11 Slow (mend out) :Yes	
2 All head mending :No	12 STR. Lock stitch :Yes	
3 Width data limit :13	13 Width data all : 0.0	
4 Quick start mode :Yes	14 RS-232C Baud late:38400	
▶ 5 Auto thread cut :No	15 TRD. break detect:Normal	
6 Cut at jump data :3	16 Convert cap :No	
7 Cut at null jump :Yes	17 Revers frame move:No	


Detailed explanation of machine settings

9 Length of TRD.cut

If you select "Needle" with this setting, the upper threads of each needle will be cut off by registered length.

The length of each thread can be set up taking the following steps.

1. Follow the steps 1.- 3. on the previous page and the display shows machine setting page.

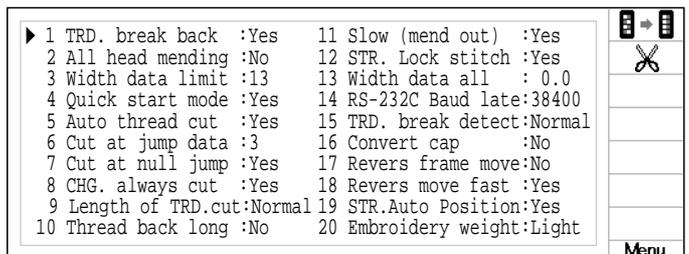


2. Press **(MENU)** and select  from right submenu with .




3. Press the **(SET)**.



4. Select desired needle number with .

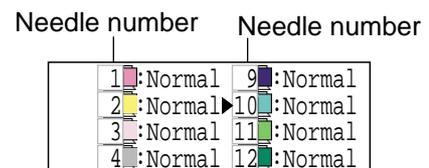


5. Press **(SET)** and press up/down of  to change the setting.

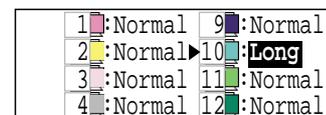


6. Press the **(SET)**.

Each item will be indicated in green if it has changed from its default setting. It will revert to black if setting has returned to default. Other settings can be changed by following procedures 4 through 6.

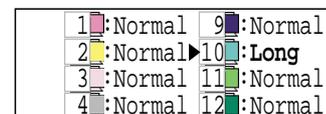

7. Press the **(ESC)**.

Press **(ESC)** to return to Menu mode.
Press **(ESC)** once again to return to Drive mode.

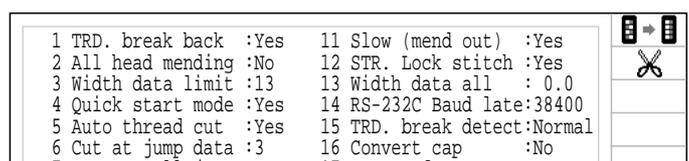


Detailed explanation of machine settings

13 Width data all

This function adds additional width to all satin stitches in a design.  12-3

This is otherwise set in the "Settings" function, in which case any changes made to the setting from this screen will have no effect.  12-3

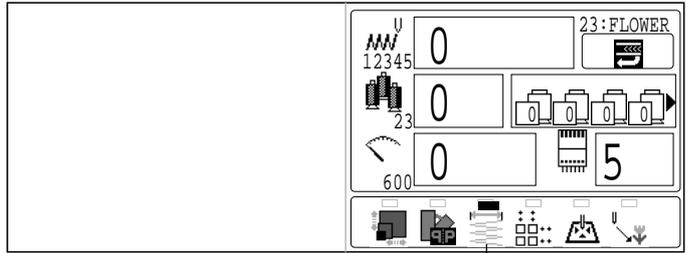

The "Width adjustment" icon will be turn turn blue.


●Connecting to a PC by Serial or USB connection

This embroidery machine will allow you to read design data from a connected PC. A Serial cable or a USB cable can be used for the connection.

Serial connection

Connect the serial cable between the serial port (RS-232C) of the machine and the serial port of the PC.

⚠ CAUTION: To avoid problems.
Make sure that power source of machine and PC are off when connecting serial cable.

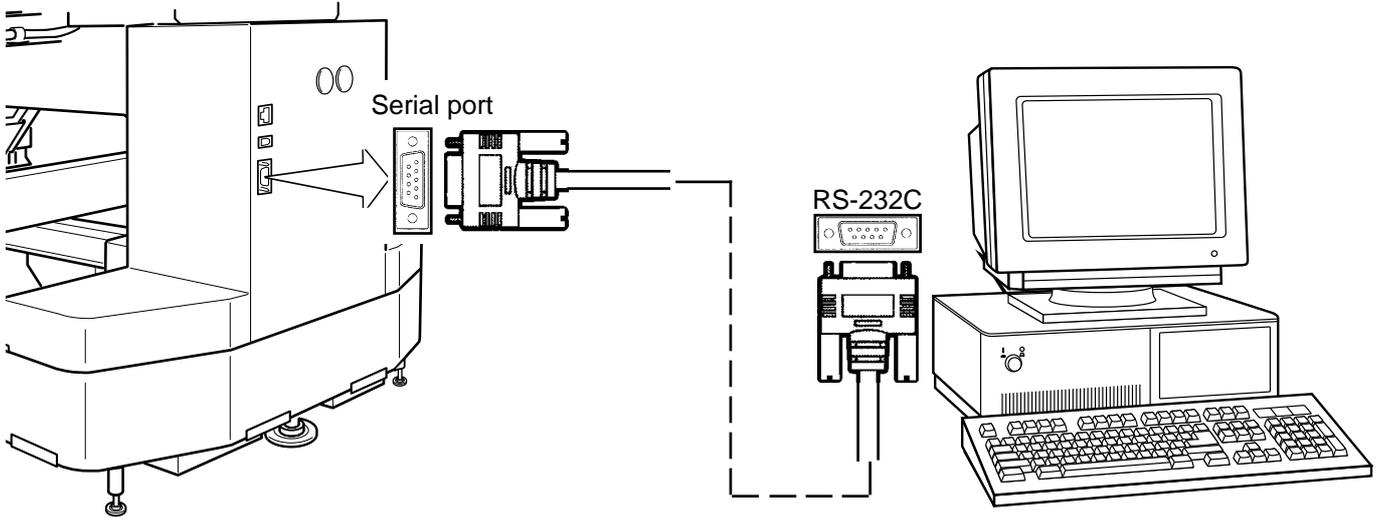



USB connection (based on the USB 1.1, 2.0)

Connect by USB cable between USB port of the machine and USB port of the PC.

When you connect the USB cable, make sure that the machine is powered and set into drive mode (lamp will be green), and that the PC is also turned on.

After recognizing USB in your PC, start-up the "Happy Link".

Please refer to instruction book of "Happy Link" for more precise information.

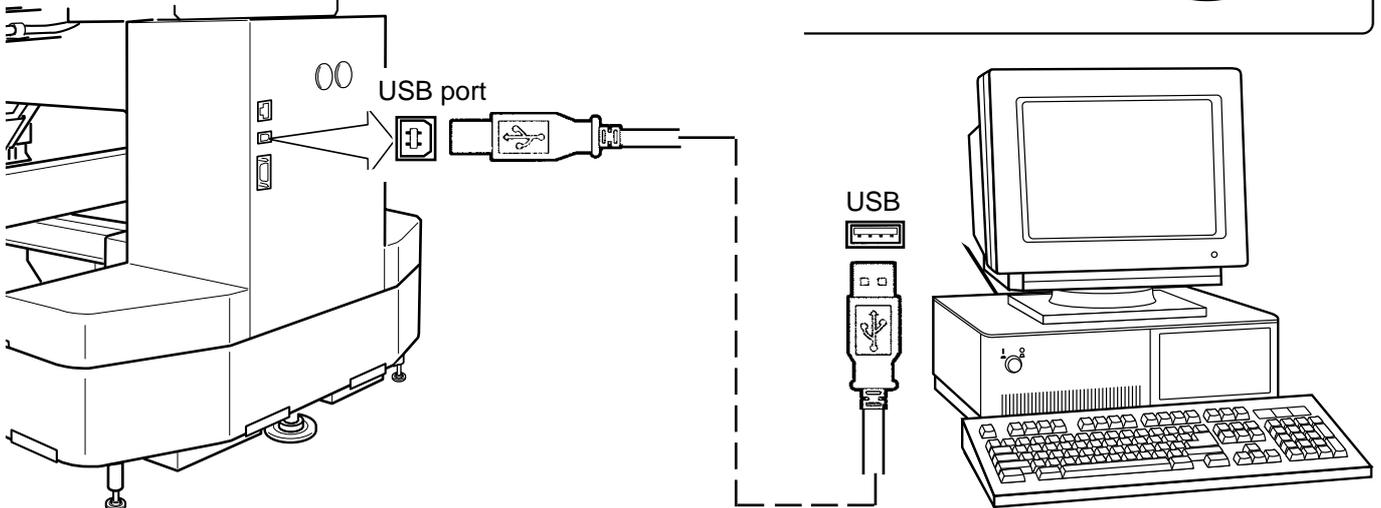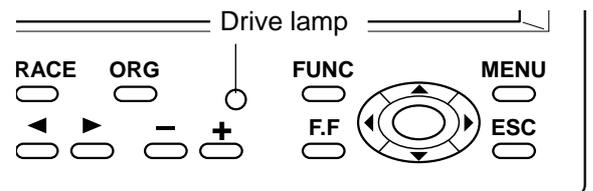

●Reading embroidery pattern data from the PC

Designs can be transferred to the machine along with some functions by using the "Happy Link" software.

Please refer to the "Happy Link" software manual for instructions.

● Read embroidery pattern data

Read the pattern to be embroidered from the memory media.

These types of memory media can be used. This machine is able to read different kinds of memory cards, which are generally used for digital cameras.

- Compact flash card
- Smart media card
- Memory stick
- SD card
- USB memory

■ Capacity of memory media has to be over 16MB. This machine doesn't correspond if the capacity of memory media card is under 8MB.

■ If you initialize the memory media with your PC, please proceed with FAT format form. Proceed with FAT 32 format in case of memory media is over 1GB.

This machine doesn't correspond if the memory media is initialized by electrical appliances (Ex. digital camera) exclude PC.

⚠ Note for using Memory Card:

It is only possible to use only memory cards (compact flash card, smart media card, memory stick, SD card) which are inserted into a PCMCIA card adapter.


If you use a LAN or PCMCIA card other than those than noted above, it is possible to damage the machine.

⚠ Handling note of Memory Cards and USB memory.

Do not bend, drop, disassemble, charge or heat the memory card and USB memory. Keep away from humidity or direct sunlight.


Inserting memory cards:

1. Insert the memory card into its PCMCIA adapter.
2. Insert the PCMCIA card adapter all the way into the memory card slot of the machine. The Eject button will come out.
3. Read embroidery design data according to following "Memory card reading" in the next section.

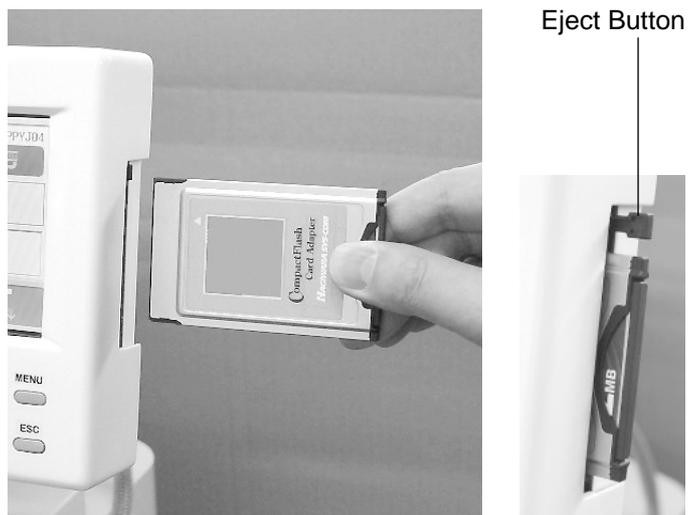

Removing memory cards

1. Check that the "Do Not Remove" icon is not showing and press the eject button. Pull memory card and adapter all the way out.
2. Handle the memory card carefully.

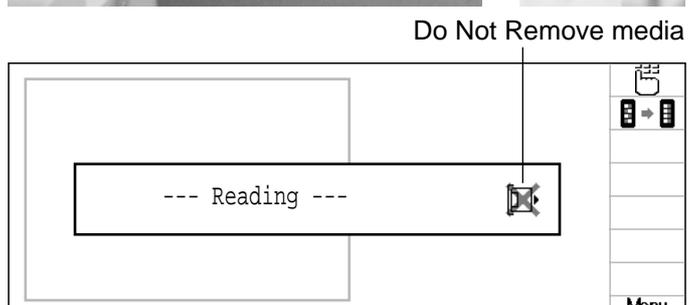


To insert a USB memory

1. Insert the USB memory all the way into the USB memory port of the machine (right side of controller).
2. Read embroidery design data according to following "Memory card reading" in the next section.




To remove a USB memory

1. Please check that the "Do Not Remove" icon is not shown.
2. Please handle USB memory carefully.

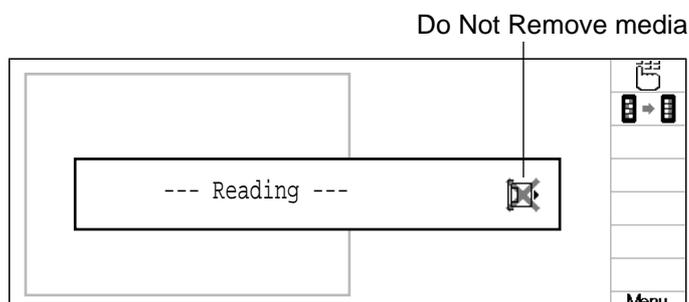


Memory media reading


1. Insert the memory card into the machine as described in "Inserting memory cards".
2. When the machine is stopped, press **(MENU)** and Select "READ" with .

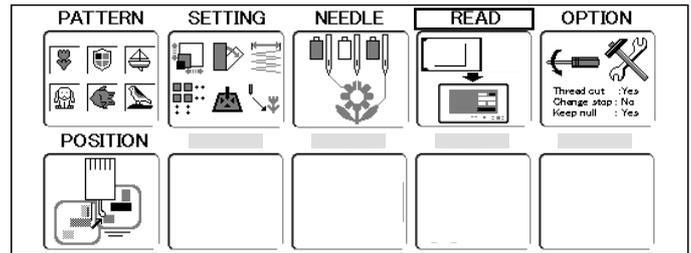

3. Press the **(SET)**.
Section for select of memory card reading and USB memory reading.

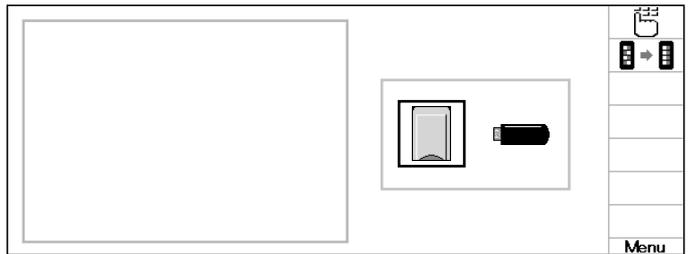


4. Select memory card or USB memory with .

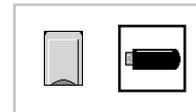

5. Press the **(SET)**.
Indicates pattern data of the memory card.

 Memory card removal is prohibited
Pattern data in the memory card or machine can be destroyed if you remove the memory card at this time.

-  TAP : HAPPY
-  DST : Tajima
-  DSB : Tajima (Barudan)
-  DSZ : Tajima (ZSK)
-  FDR : Barudan (style 30)
-  MEL : Melco (type 320K)
-  EXP : Melco (type exp)
-  ZSK : ZSK
-  DAT : Barudan (style 32)

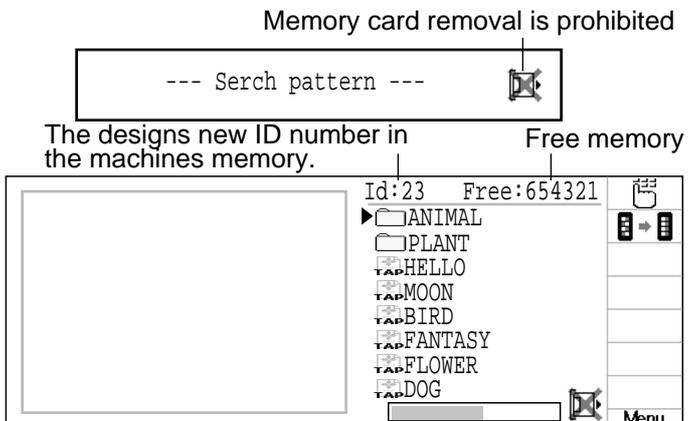

 Folder : Contents of folder will be displayed when you select this icon and press **(SET)**.


 Return : Once you move into the folder, this icon will be displayed at the top of the list.

You will be able to move off from the folder by select this icon and press **(SET)**. You will be also able to move off from the folder if you just press **(ESC)**.

6. Select pattern with .

Display can be scrolled by pressing  left and right when there is a white part on the scroll display.

Before writing, check that there is more remaining space than the number of stitches that are going to be written.
If there are more stitches than remaining space, you may need to delete some designs to make room for the new patterns.

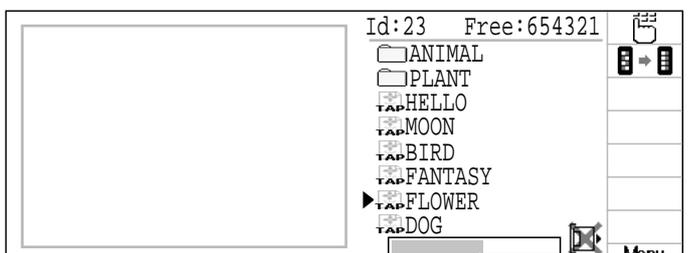

Scrolling display


7. Press the **SET** button.

Once design is read, enable to read next design continuously.

If you wish to read another design, continue to follow the items in step 4.

--- Reading --- 

--- Check pattern data ---

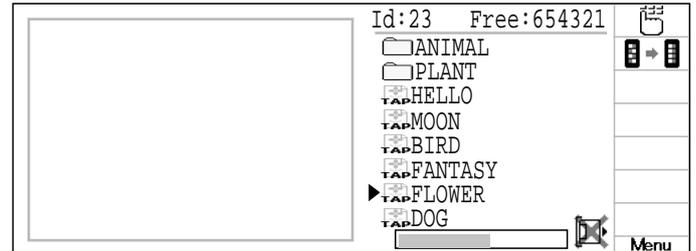

By pressing **ESC**, enable to move off from the folder ( is shown at the top of the list) or enable to move back to MENU ( is not shown at the top of the list).

Even if you are inside the sub-folders, enable to back to MENU directly by holding down the **ESC**.

Press **ESC** to return to Menu mode.

● Reading pattern data from 3.5" disks (Option)

This reads pattern data from 3.5" disks and writes into memory.


When the HAPPY format pattern data with *various function settings are read in memory, various functions such as needle bar selection, pattern data adjustments and etc. will be set automatically. (It is necessary to set "etc.func read". 14-4)

- If the 3.5" Happy or Tajima disk has Barudan or ZSK *data and you can't read the pattern properly, change data format according to "Settings" in "Reading" and try again. 14-4


1. Insert the diskette into the disk drive on the left of the control box.




2. When the machine is stopped, press and Select "READ" with .

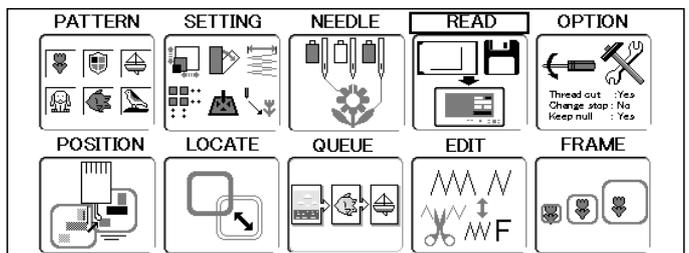

3. Press the .
The selected diskette or memory media will be indicated.

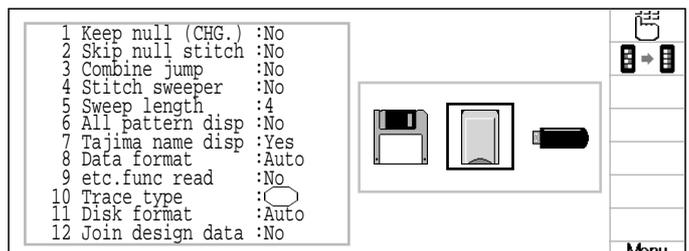

4. Select the diskette with .

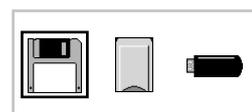

5. Press the **SET**.

Indicates pattern data of the diskette.


 Memory card removal is prohibited. Pattern data in the diskette or machine can be destroyed if you remove the diskette at this time.

-  TAP : HAPPY
-  DST : Tajima
-  DSB : Tajima (Barudan)
-  DSZ : Tajima (ZSK)
-  FDR : Barudan (style 30)
-  MEL : Melco (type 320K)
-  EXP : Melco (type exp)
-  ZSK : ZSK
-  DAT : Barudan (style 32)

Do Not Remove diskette

--- Serch pattern --- 

The designs new ID number in the machines memory. Free memory

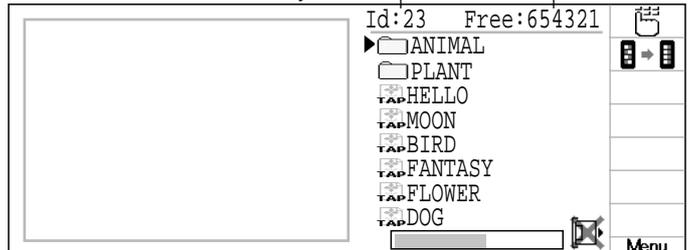

 Folder : Contents of folder will be displayed when you select this icon and press **SET**.


 Return : Once you move into the folder, this icon will be displayed at the top of the list.

You will be able to move off from the folder by select this icon and press **SET**. You will be also able to move off from the folder if you just press **ESC**.

6. Select pattern data with .

Before writing, check that there is more remaining space than the number of stitches that are going to be written.

If there are more stitches than remaining space, you may need to delete some designs to make room for the new patterns.  5-B

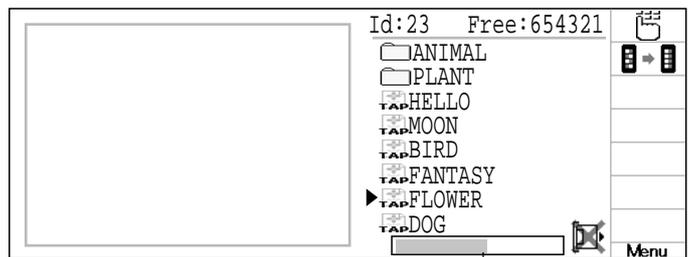

Scrolling display


7. Press the **SET**.

Once design is read, enable to read next design continuously.

If you wish to read another design, continue to follow the items in step 6.

--- Reading --- 

--- Check pattern data ---

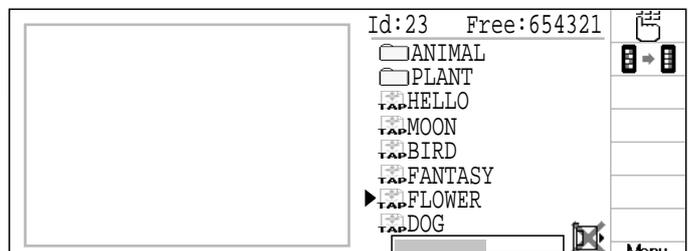

By pressing **ESC**, enable to move off from the folder ( is shown at the top of the list) or enable to move back to MENU ( is not shown at the top of the list).


Even if you are inside the sub-folders, enable to back to MENU directly by holding down the **ESC**.

Press **ESC** to return to Menu mode.

● Selection of folders


The pattern data memory is consist of five individual folders.
Select desired folder to choose or input pattern data.

1. When the machine is stopped, press **(MENU)** and Select "PATTERN" with .

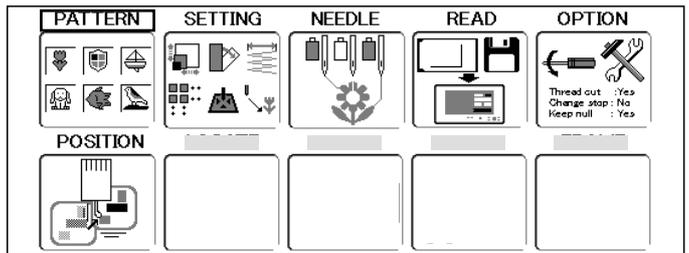


2. Press the **(SET)**.


The pattern data of the selected folder will appear on the display.

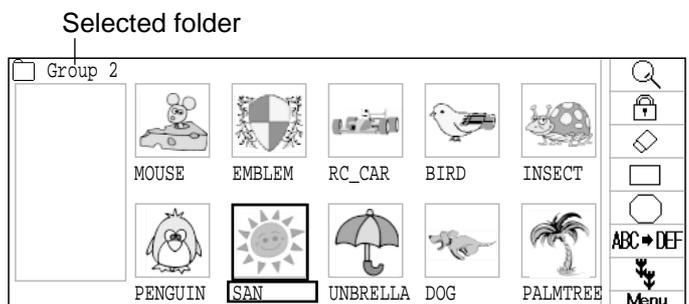

3. Press the **(FUNC)**.

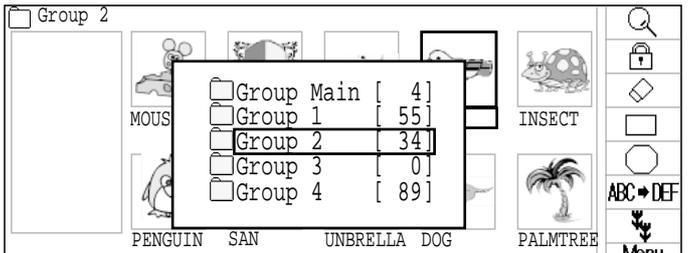


4. Select desired folder with .

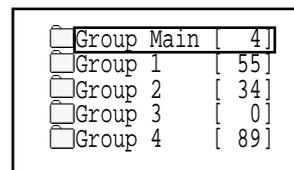

5. Press the **(SET)**.

The selected folder has been switched.

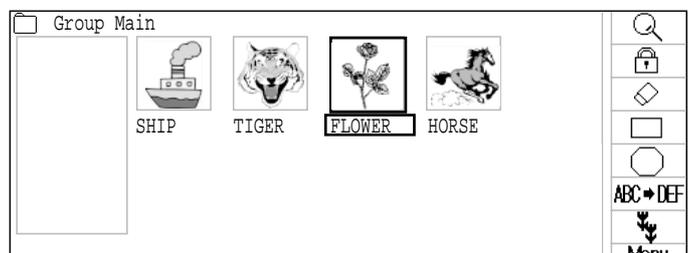


Press **(ESC)** to return to Menu mode.
Press **(ESC)** once again to return to Drive mode.

● How to select patterns from memory

To select an embroidery design previously stored into the machine memory.


1. When the machine is stopped, press **MENU** and Select "PATTERN" with .

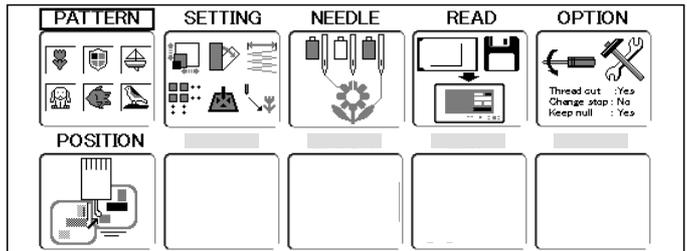

2. Press the **SET**.

The display indicates the current pattern.
The left side of display shows the number, name and details for the current pattern.


-  Number of stitches
-  Number of Color change number
-  Height
-  Width
-  Size between start point and the top of pattern
-  Size between start point and the bottom of pattern
-  Size between start point and the extreme right of pattern
-  Size between start point and the extreme left of pattern

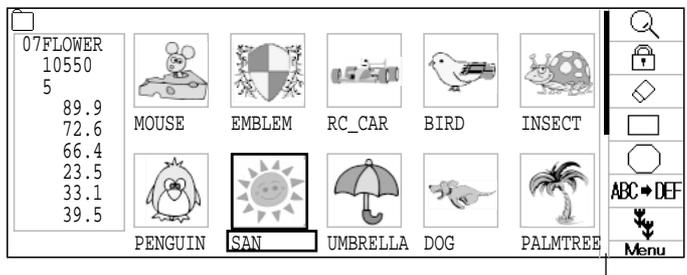

Scrolling display

3. Select pattern data with  and press **SET**.

This pattern will be selected.

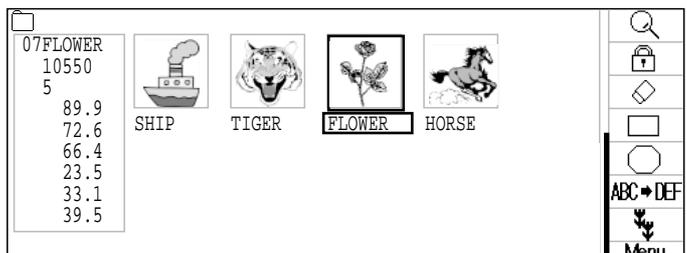


Press **ESC** to return to Menu mode.
Press **ESC** once again to return to Drive mode.

●Erasing patterns from memory


This is to erase an unnecessary design data from the machine memory.

 Pattern data cannot be erased if the lock is set.

1. When the machine is stopped, press **(MENU)** and Select "PATTERN" with .

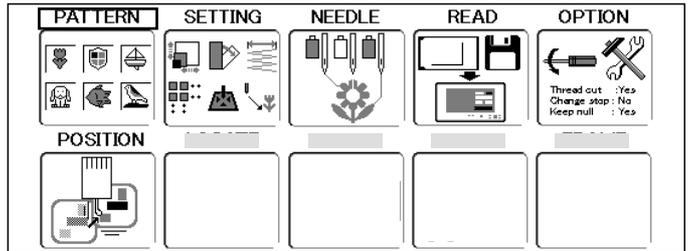


2. Press the **(SET)**.

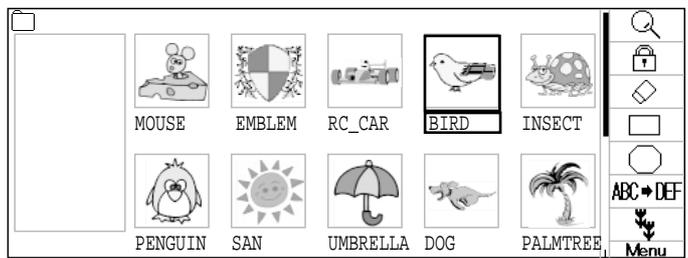


Scrolling display


3. Press **(MENU)** and select  from right submenu with .

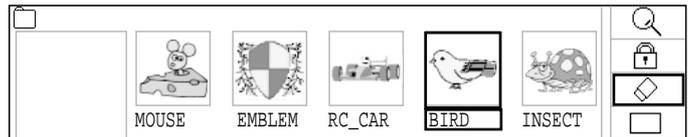


4. Press the **(SET)**.

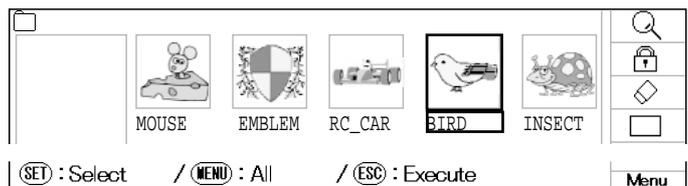


5. Select desired pattern data with .

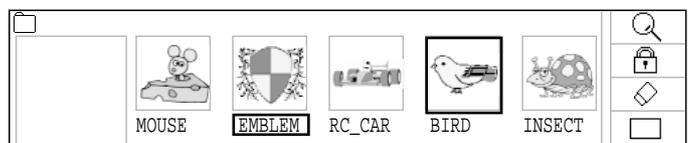

6. Press the **(SET)**.
"[" will appear left of the pattern name.
Make will be cleared by press it again.
To erase the other data, repeat steps 6 and 7.

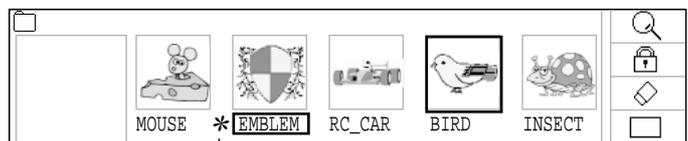


Mark

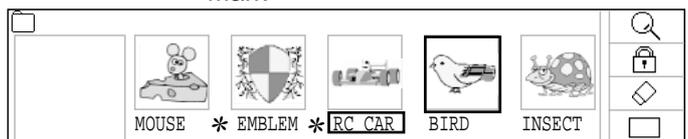

Example : when you selected plural designs

7. Press the **(ESC)**.

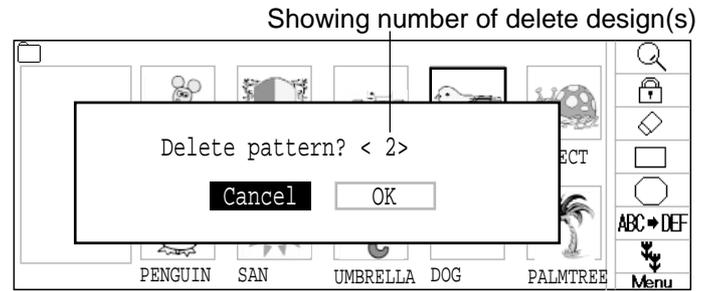


8. Select "OK" with  and push **(SET)** to delete.

The item will be deleted.

To delete other patterns, repeat steps 3 to 8.

Press **(SET)** to cancel the delete.

The display will return to step 2.

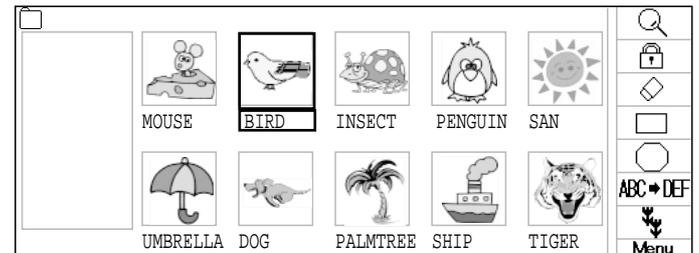


Press **(ESC)** to return to Menu mode.

Press **(ESC)** once again to return to Drive mode.


● How to delete pattern data in the folder

Deleting all the data in the folder at once.  Pattern data cannot be erased if the lock is set.


1. When drive lamp is on with green color, press **(MENU)** and Select "PATTERN" with .

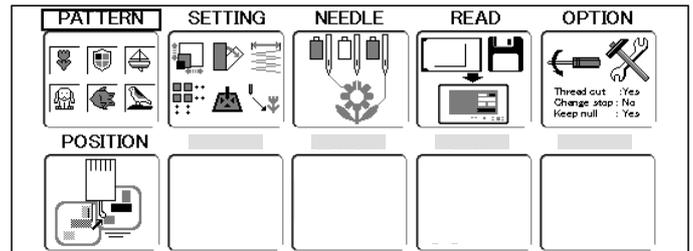


2. Press the **(SET)**.

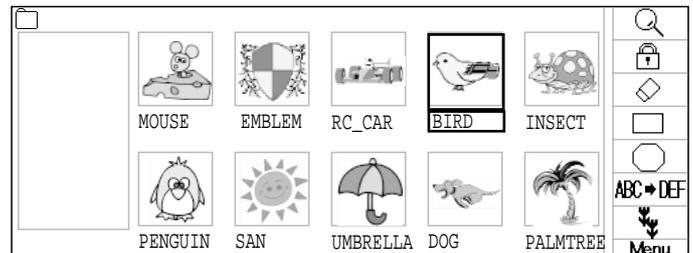


3. Press **(MENU)** and select  from right submenu with .

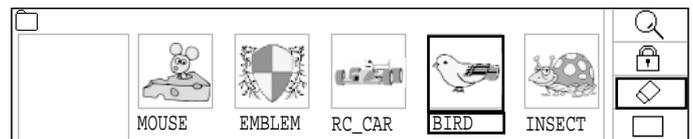

4. Press the **(SET)**.

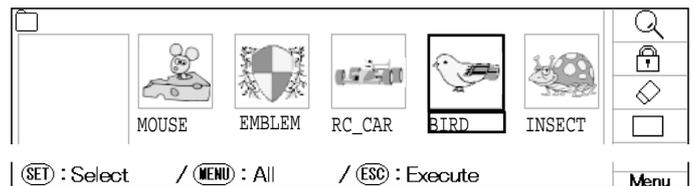


5. Press the **(MENU)**

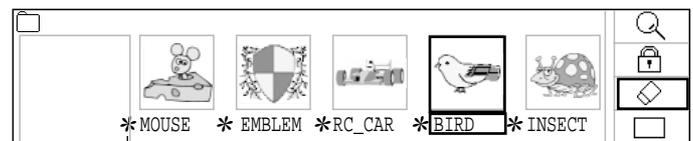


"*" is added to all the memory pattern data.

6. Press the **(ESC)**

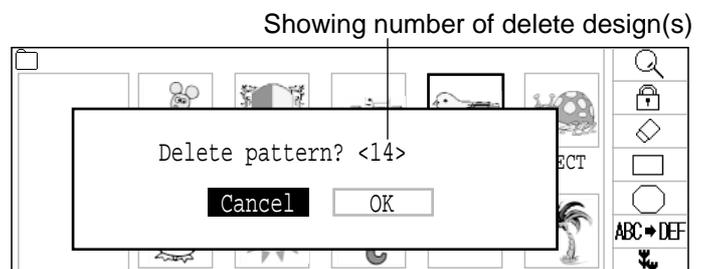

7. Select "OK" with  and push **(SET)** to carry out to delete.
All the data will be deleted and the display will return to MENU.

Press **(SET)** to cancel the deletion.
The display will return to step 2.

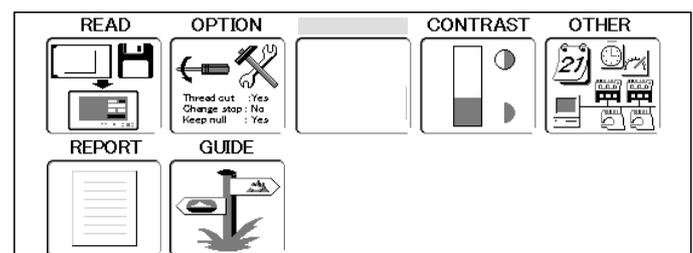

MENU while all the patter data is being erased.

NEEDLE BAR SELECTION


5-E

For each color change in a given pattern, the needle number loaded with the correct color thread is assigned by the operator. When this is set, the machine automatically changes to the programmed needle when the design reaches that point in the course of sewing the design.

You can not setting "NEEDLE" for selected "LOCK" design.

Please release "LOCK" from design. 11-1


- When the machine is stopped, press **(MENU)** and Select "NEEDLE" with .

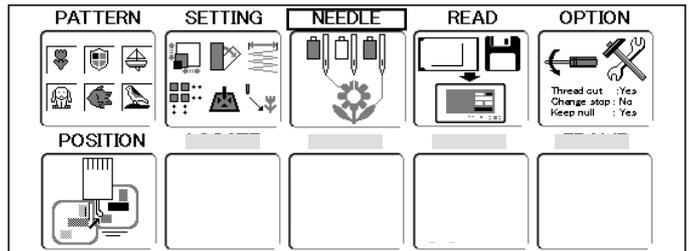

- Press the **(SET)**.

The left side of the display shows the number, name and details of the current pattern.

- Number of stitches
- Angle
- P** Convert
- Number of Color change number
- Height
- Width
- Size between start point and the top of pattern
- Size between start point and the bottom of pattern
- Size between start point and the extreme right of pattern
- Size between start point and the extreme left of pattern

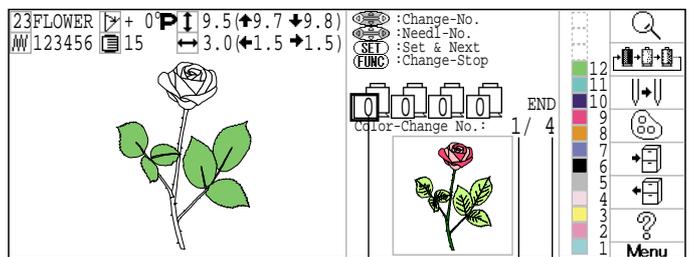


Needle number

Current color change number

Number of color change number

- Press right /left of to select the color change number.


The current color number is showed in the pattern data display portion.

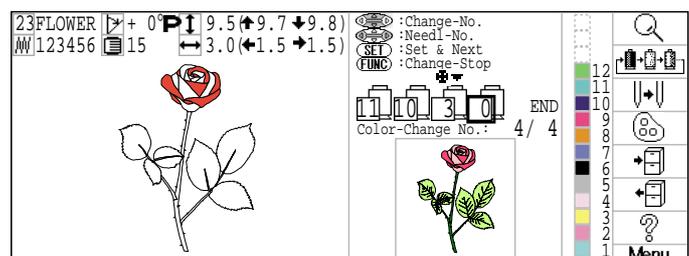

- Press up/down of to select the needle number.

The setting is fixed.

When is displayed at right side of the needle number, frame out is set. 12-E

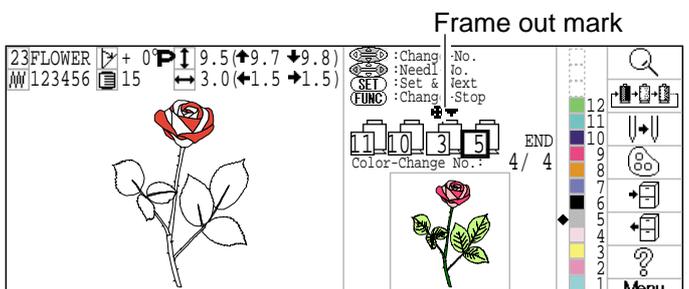

Frame out mark


For return to main menu press right of to select END and press **(SET)** or Press **(ESC)**. Press **(ESC)** once again to return to Drive mode.

Color change stop


funcio

When a color change stop is set to a color change number, the machine will stop after it finishes sewing the marked needle number, then following message will be shown:

When you wish to start again, Press the **START** button.

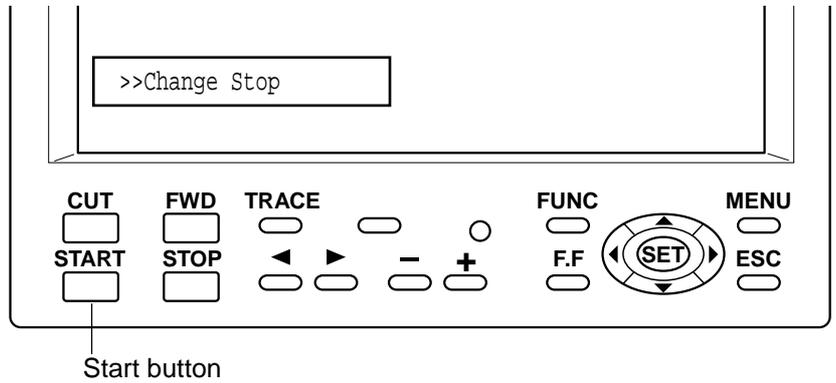


1. When the machine is stopped, press **MENU** and Select "NEEDLE" with

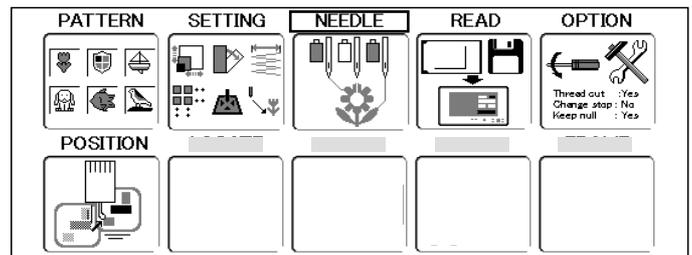

2. Press the **SET**.

The left side of display shows the number, name and details of the current pattern.

- Number of stitches
- Angle
- Convert
- Number of Color change number
- Height
- Width
- Size between start point and the top of pattern
- Size between start point and the bottom of pattern
- Size between start point and the extreme right of pattern
- Size between start point and the extreme left of pattern

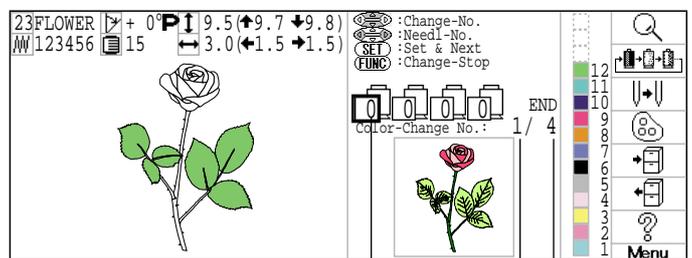

Needle number

Current color change number

Number of color change number

3. Press right /left of to select the Color change number.


The current color number is shown in the pattern data display portion.

4. The color change stop function is set by pressing **FUNC**.


The function is also cancelled by the **FUNC**.
The setting is fixed.

Color change stop function cannot be used if there is (Frame out) indication at right side of needle no.

Please cancel at Frame out setting. 12-E

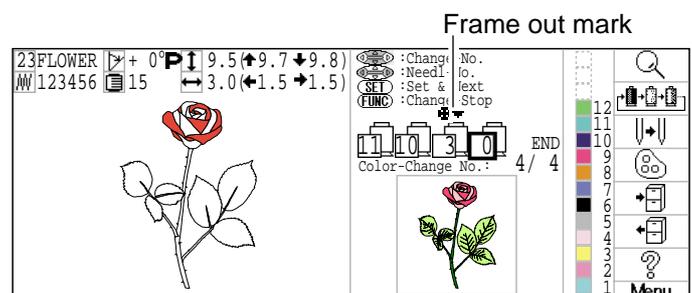

Frame out mark

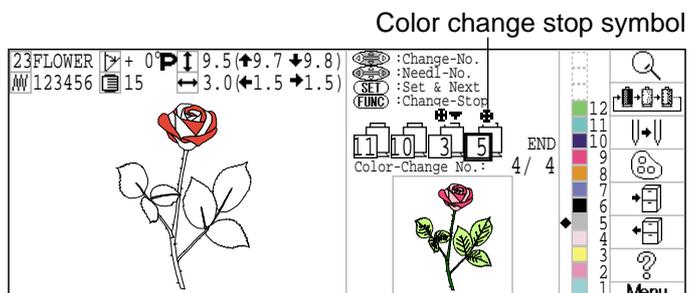

Color change stop symbol


For return to main menu press right of to select END and press **SET** or Press **ESC**. Press **ESC** once again to return to Drive mode.

● Installing and removing the frame base


Please attach the frame base to the carriage when you wish to use a tubular embroidering hoop. Please remove it in the reverse order of installation.

1. When the machine is stopped, press **(FUNC)**.

The drive menu will be shown.

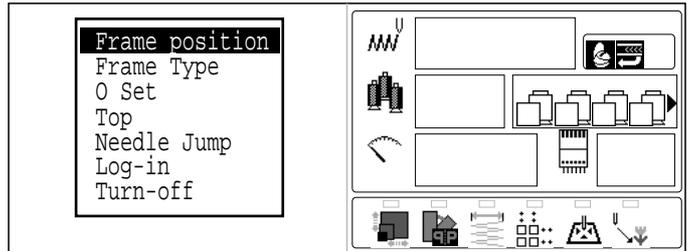


2. Select "Frame type" with  and press **(SET)**.

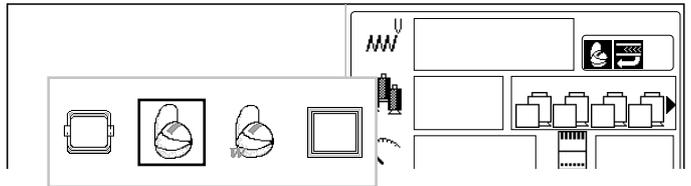


3. Select "Tubular frame" with .

-  : Tubular frame
-  : Standard cap frame
-  : Wide cap frame
-  : Border frame

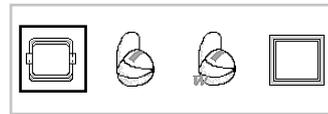


4. Press the **(SET)**.


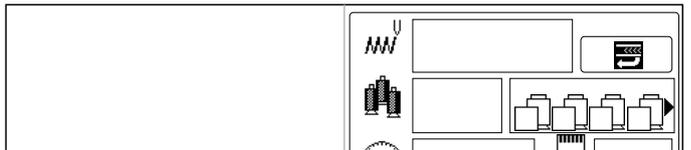


5. Move the carriage to the position shown by press  on the control box.

6. Fix the tubular frame holder under the bracket of the X carriage and tighten the knob bolts completely.

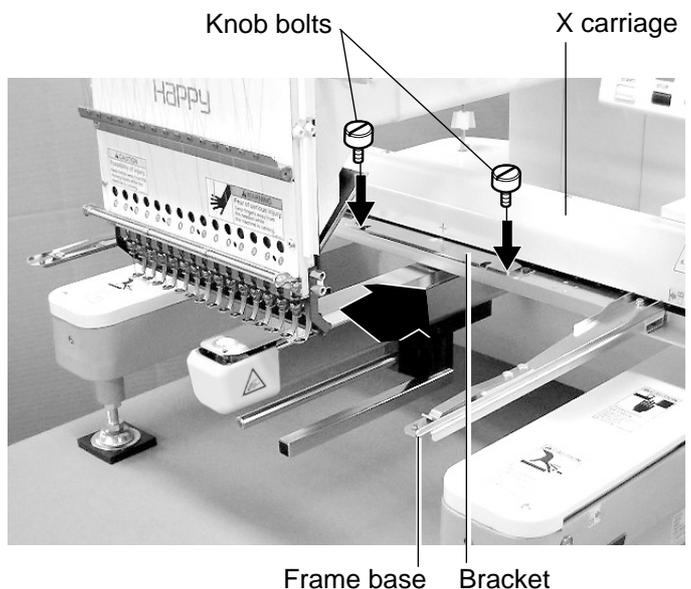

●How to hoop

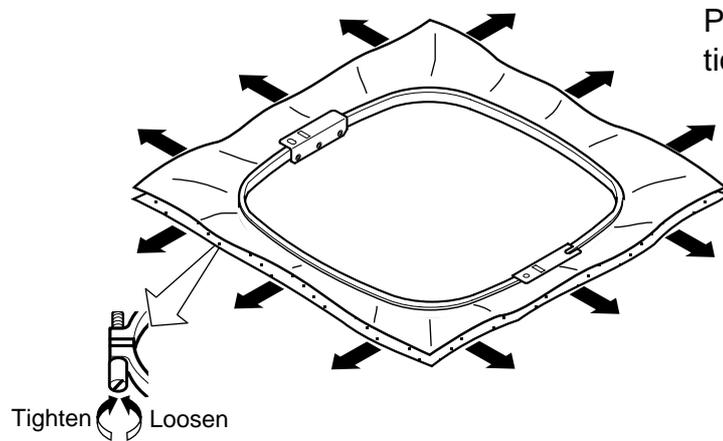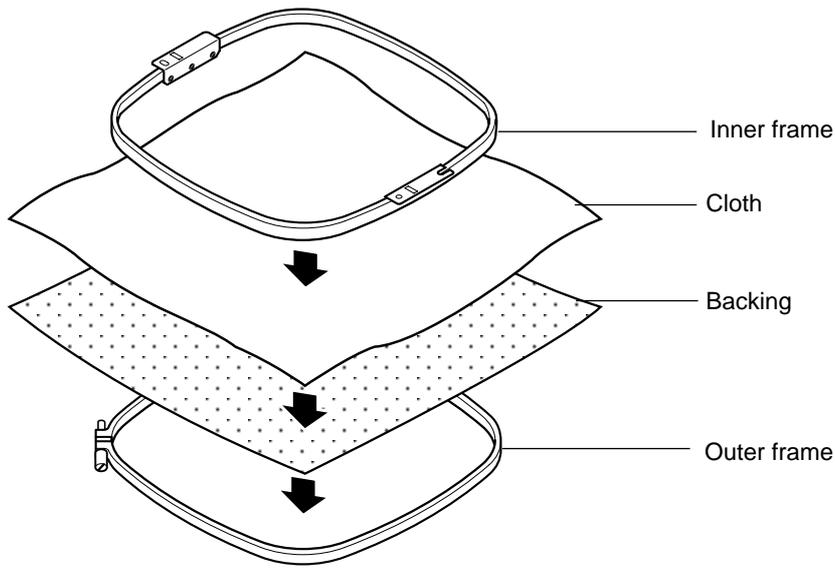

Please smooth the embroidery cloth in all directions, but do not stretch it.

Please smooth the embroidery cloth before tightening.

● Mounting the hoop on the machine



1. Move the frame base to the approximate center position before inserting the tubular embroidering frame.



Frame base

2. Insert the embroidery frame.

Make sure that the holder pins are inserted into the positioning holes of the frame base on each side.

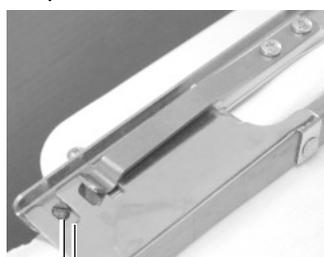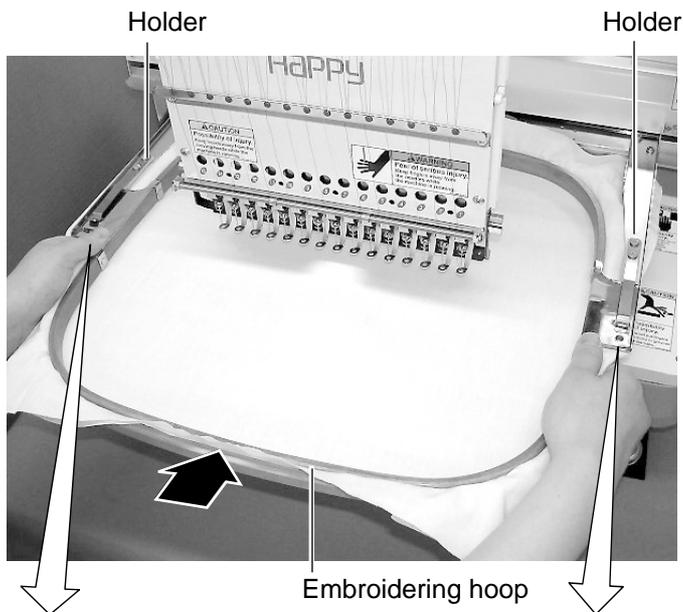

Positioning hole
Positioning pin




Positioning hole
Positioning pin

● Starting to embroider

1. Move the frame to the original point with the




- : Original point (Start point)

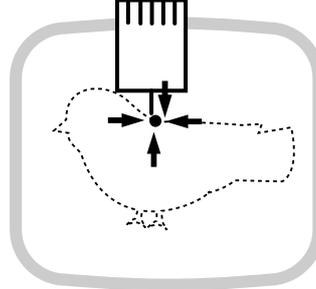

2. Press the **TRACE**.

The embroidering frame moves for the design trace. 14-5
 Make sure that the pressure foot and needle do not touch the frame.
 You can make tracing speed slow by pressing **TRACE** during tracing.
 If you keep pressing the **START**, the machine will discontinue tracing and move to the original point to start embroidering.

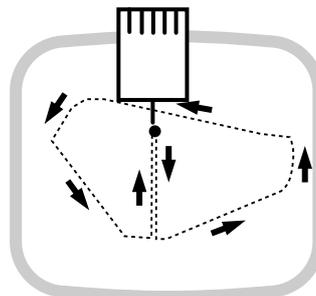


You can confirm outline trace and the position of the design.

Go on to step 4 if you want to start embroidering without tracing.

3. The display will show ">>Trace end" and the embroidery frame will stop moving.

The embroidering frame has moved to the first stitch point of the pattern.


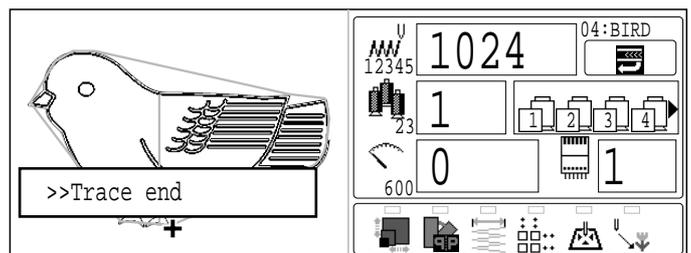


4. Press the **START**.

The embroidery will start.

5. After finishing your design, the display will show ">>End" and the machine will stop.

The embroidery frame returns to the original point automatically if the auto origin function has been activated.

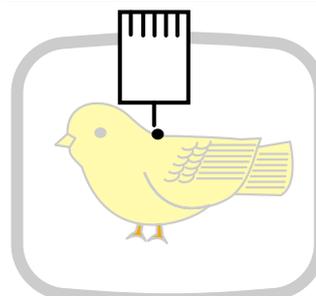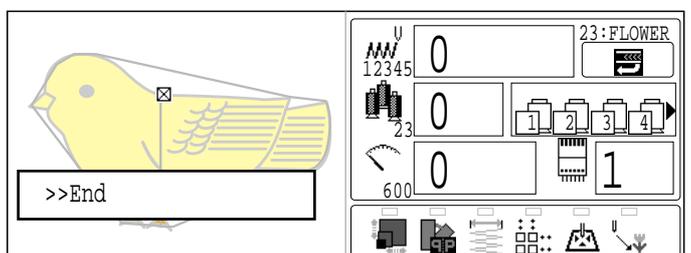


● Cap frame settings

2 types of cap frames, Normal and Wide, are available with this model. When you embroider by using a cap frame, please ensure that a correct setting is selected according to each.

⚠ CAUTION: To avoid problems.
The machine and/or cap frame may be damaged if the incorrect frame settings are used.


1. When the machine is stopped, press **(FUNC)**.

The drive menu will be shown.

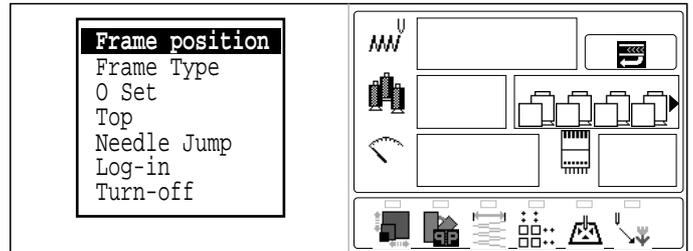

2. Select "Frame type" with **(←→)** and press

(SET).

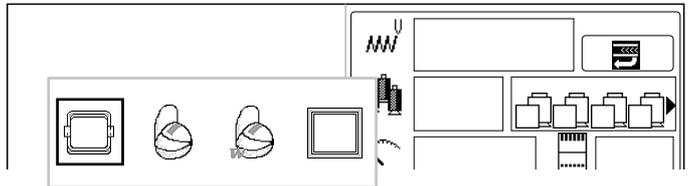

3. Select the desired cap frame with **(←→)**.



: Tubular frame




: Standard cap frame



: Wide cap frame




: Border frame

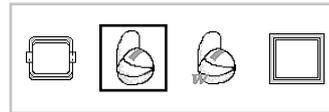

4. Press the **(SET)**.

Icon of  (Standard cap) or  (Wide cap) will be shown in the upper right corner of the screen.


Then Cap frame will be set.

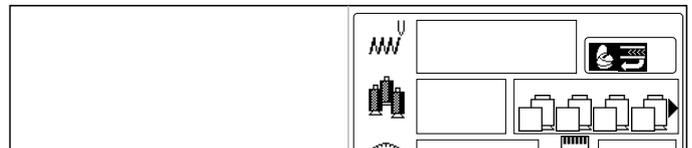


● Changing the needle plate

You need to change the needle plate when you embroider a cap.

1. Remove the set screw (2 pieces) by offset driver and remove the needle plate.

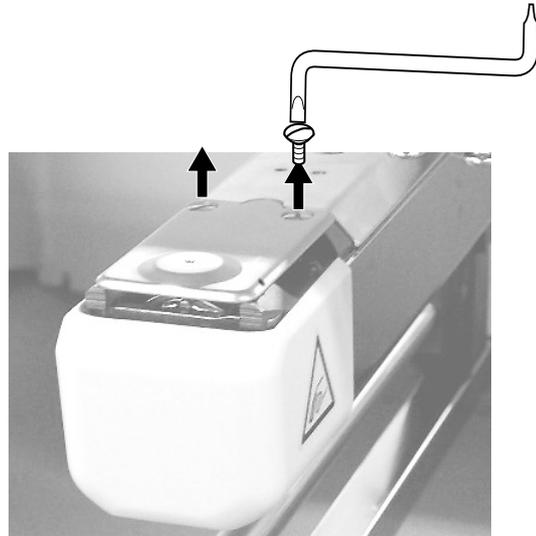


2. Put the needle plate for cap on the bed.
Please insert positioning pin to hole of the needle plate.

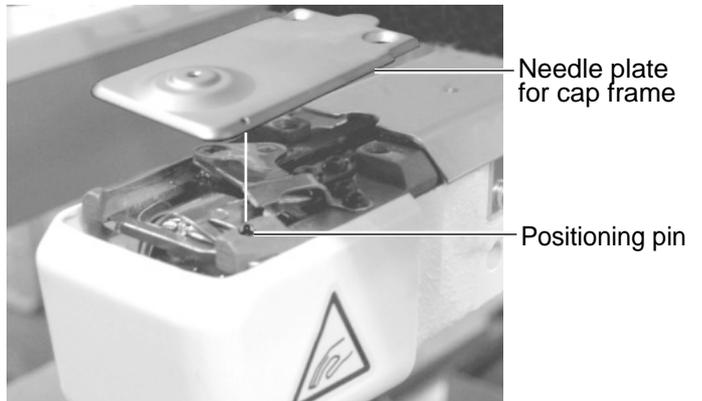


3. Tight set screws (2 pieces) for fix the needle plate.


4. When the machine is stopped, press **(MENU)** and Select "OTHER" with

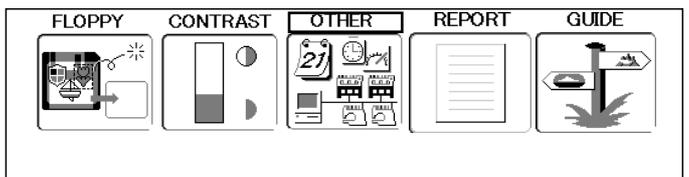

5. Press the **(SET)**.

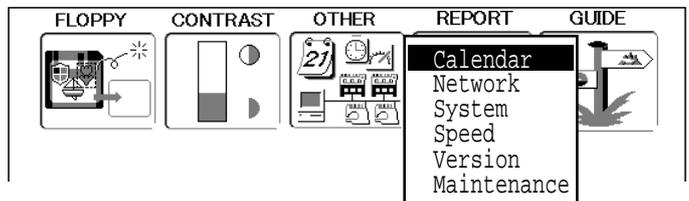

6. Select "Maintenance" with and press **(SET)**.

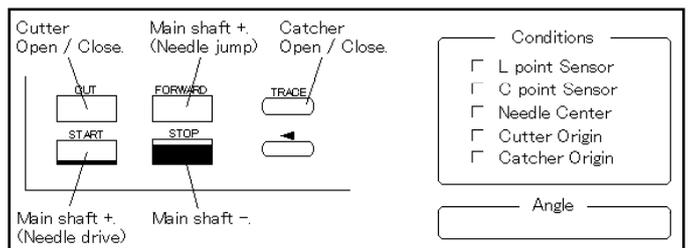


CAP FRAME option

7-1c


7. Press and keep **START** until a fixing screw for pressure foot appears at the position as photo.

CAUTION: To prevent accidents.
The needle will down.
Please keep your hands clear for your safety.

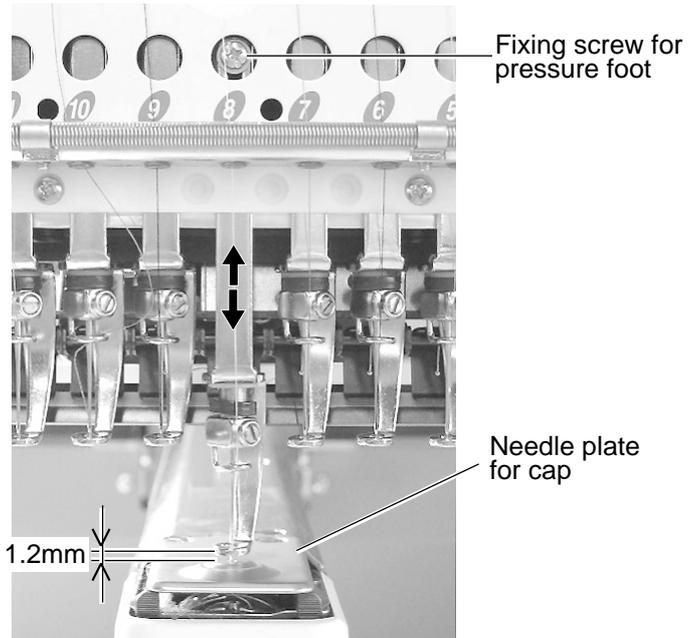

8. Loosen a fixing screw for pressure foot.

9. Using a 3 mm hexagonal driver, Please turn the main shaft and adjust it to the "L" point.

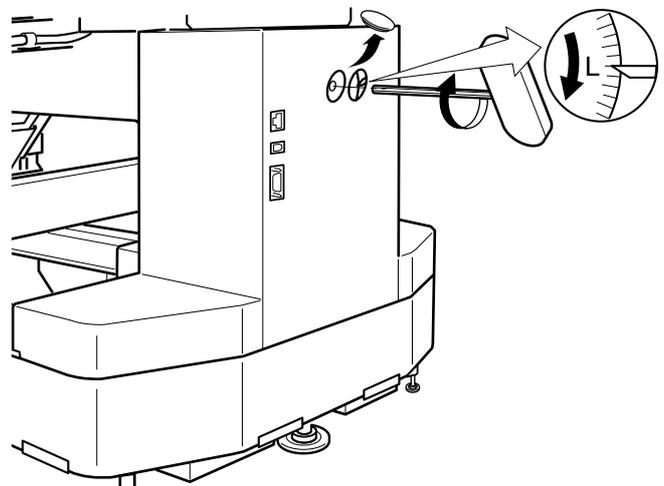


10. Adjust distance between pressure foot and a needle plate for cap to 1.2 mm as picture no. 7.

11. Using a 3 mm hexagonal driver, Please turn the main shaft and adjust it to the "C" point.



12. Press **ESC** several times until display returns to Drive mode.

13. Press **◀** or **▶** and change to other needle no.

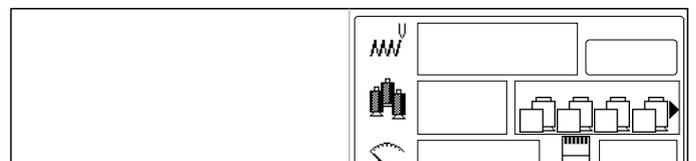

14. Repeat operation 4. - 13. and adjust height of all other pressure foot.

■ Please return to a standard needle plate, when you do not use cap frame.

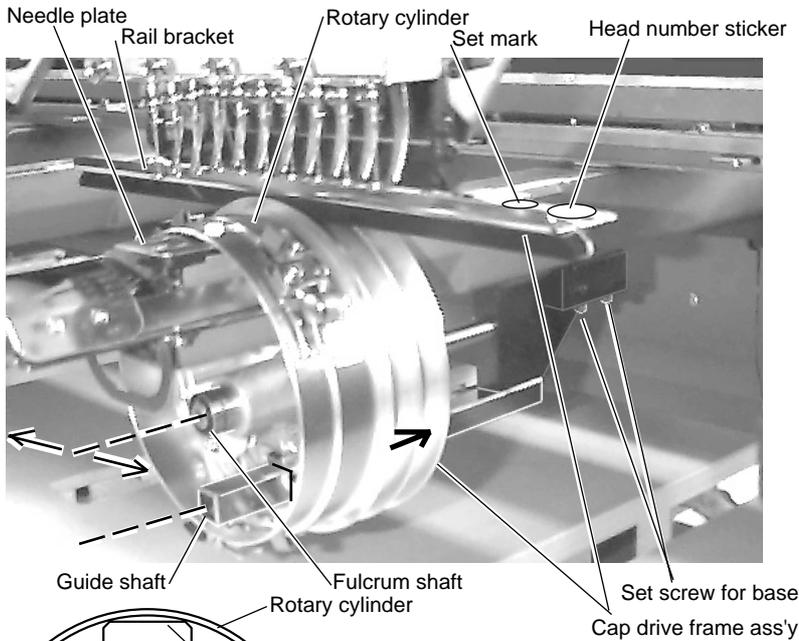


Fig. 1



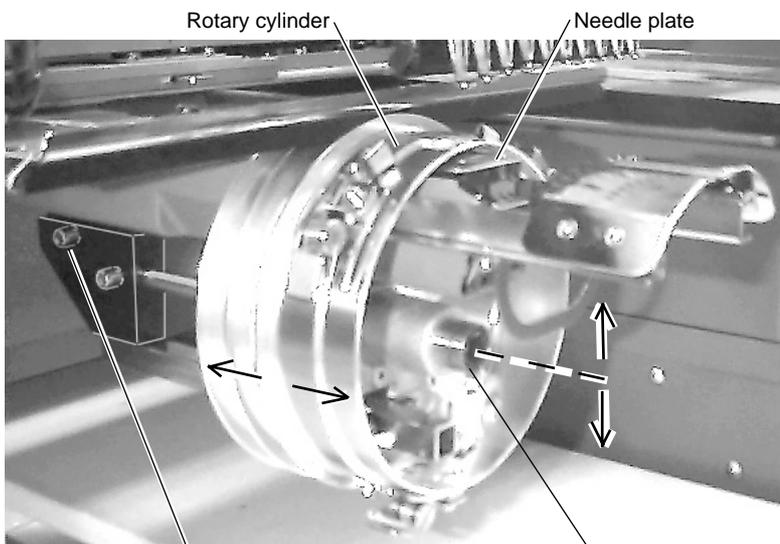


Fig. 2
Fig. 3

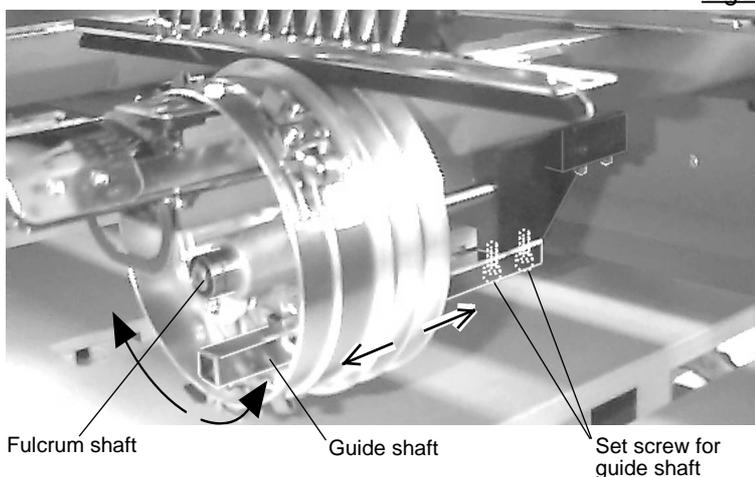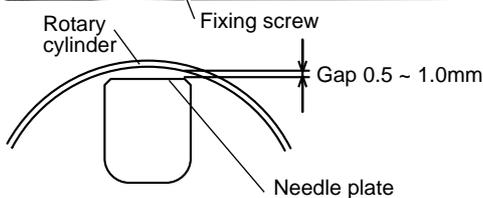

Fulcrum shaft is adjusted together with cap drive frame as a set when the machine leaves the factory.

When you mount cap drive frame, skip this page and proceed to "Mounting of cap drive frame" on the next pages.

However if you moved fulcrum shaft for some reason or if you exchanged fulcrum shaft or cap drive frame, adjust fulcrum shaft in the following manner.

※ When you hold cap drive frame assembly, be sure to hold part of rotary cylinder.

If you hold rail bracket, fingers will be put between rail bracket and rotary cylinder or rail bracket will get out of place.

1. As shown in Fig. 1, insert cap drive frame assembly with head number sticker labeled for respective head in fulcrum shaft and guide shaft.
2. As shown in Fig. 1, place cap drive frame assembly with set screw for base so that upper inside of rotary cylinder hits needle plate without producing gap.
3. As shown in Fig. 2, move fulcrum shaft up and down with hand and adjust so that gap between upper inside of rotary cylinder and needle plate comes to gap shown in Fig. and fix with fixing screw.
 - ※ Move rotary cylinder back and forth to confirm that gap in front and back of needle plate is same.
4. As shown in Fig. 3, move rotary cylinder back and forth with hand within limit of length of fulcrum shaft to confirm smooth movement. If it doesn't have smooth move, loosen set screw for guide shaft on guide shaft slightly to adjust, then fix after adjustment.
5. When you finished adjustment of fulcrum shaft by each head, remove cap drive frame assembly from fulcrum shaft. After you finished adjustment of fulcrum shaft an all heads, proceed to "Mounting of cap drive frame" on the next page.


● Installing and removing the cap drive frame

The cap drive frame must be installed onto the carriage to embroider a cap.
Please remove by reverse order of these step.

1. With machine powered off, move the X carriage back and forth by hand and note the resistance before mounting the cap drive frame.

2. Fix the cap frame base under the bracket of the X carriage and tighten the knob bolts completely.

3. Turn on the power switch.
Push the power switch firmly so it will remain on.

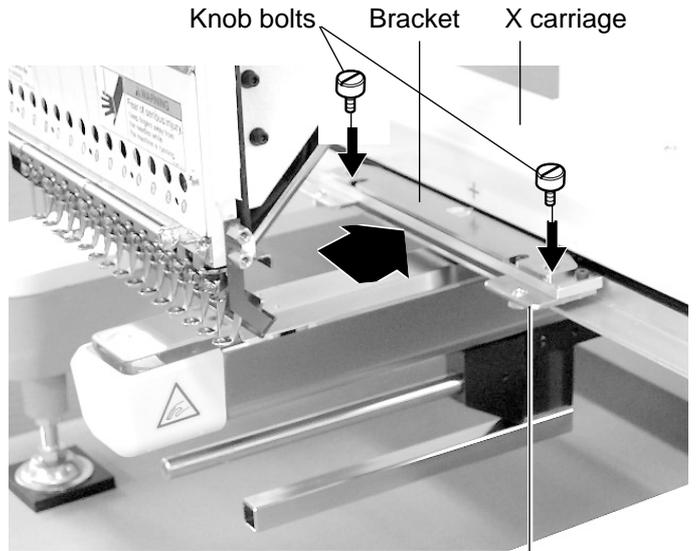


CAUTION: To prevent accidents.
The frame moves quickly.
Keep hands away from the frame.



4. Press the **[SET]**.
The carriage and frame will move slightly and then the embroidery frame will return to the previous position automatically.

5. Confirm that there are  (Normal cap) or  (Wide cap) in the display.
If these icons are not in the display, please return to "Cap frame settings" on previous page and change setting.


6. Press the **[FUNC]** and select "Frame position" with .

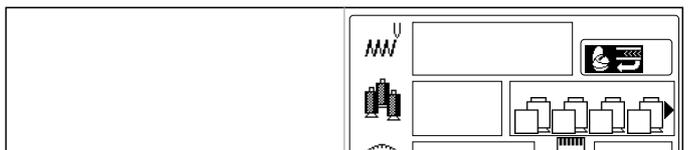

Frame position
Frame Type
0 Set
Top
Needle Jump
Log-in
Turn-off

7. Press the **[SET]**.

CAUTION: To prevent accidents.
The frame moves quickly.
Keep hands away from the frame.

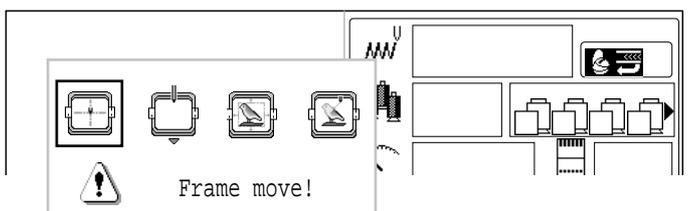


8. Select  "Center" with  and press .
- The embroidery frame will move to the center .


9. Turn off the machine.

10. Mount the cap drive frame assembly on the fulcrum shaft and guide shaft.

When holding the cap drive frame assembly, be sure to also hold onto the rotary cylinder. If you hold the rail bracket, fingers may be caught between the rail bracket and rotary cylinder or the rail bracket may be knocked out of place.

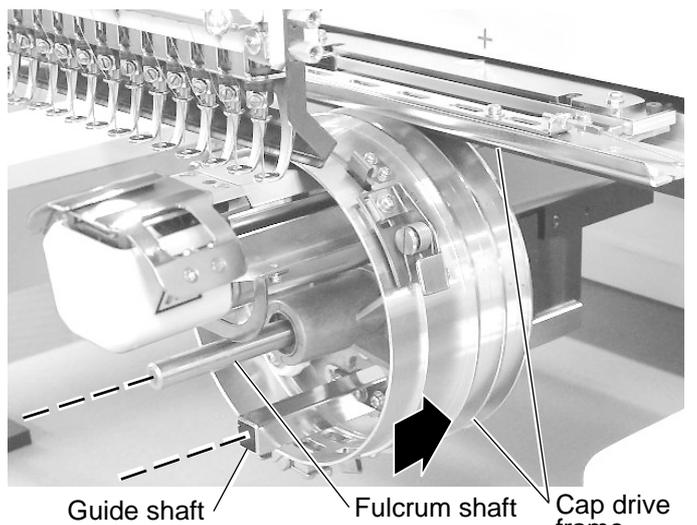


11. Move the cap drive frame towards the X carriage to place it on cap frame base, then tighten the set screw lightly to secure.

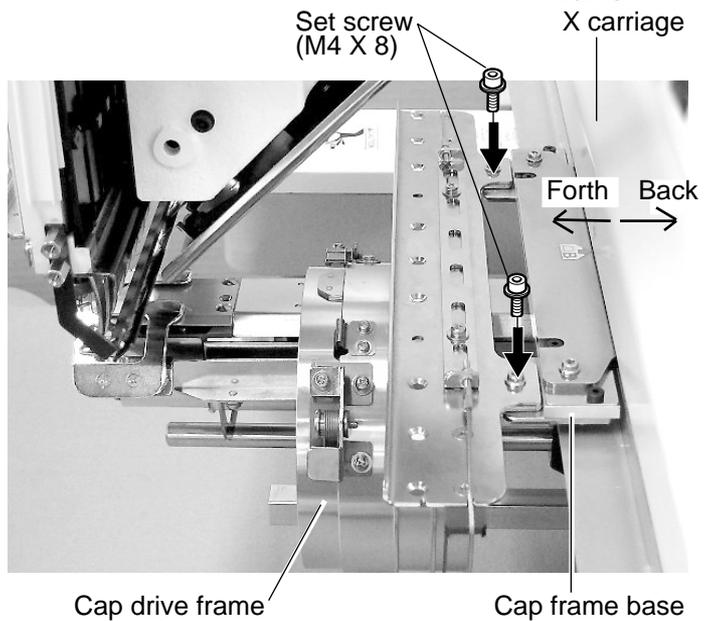

12. Move the rail bracket completely right and left to confirm that the rails are in the grooves of the rotary cylinder.

13. Tighten the set screw on cap frame base firmly.

14. As shown in Fig. 1, manually move the X carriage back and forth to ensure that it moves freely throughout its range of movement without catching. There may be some additional resistance but the frame should not be difficult to move. If you have a problem, start over from the beginning.

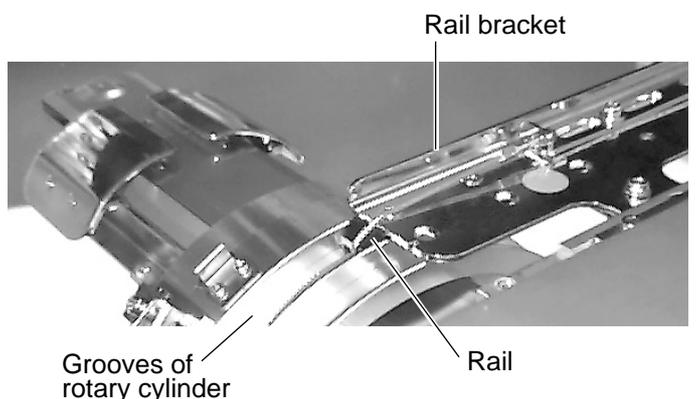

● Normal cap frame

Adjustment

When you hoop a cap on the cap frame, please adjust in the following manner:

1. Adjust position of clamp support to the height of the cap. (Fig. 1)
Adjust the height by removing the inner screws at left and right.

If you adjust position of clamp support and shorten distance H, embroidery area will be reduced in Y direction (depth).

2. Adjust the clamp to fit the clamp support. (Fig. 2)
Loosen wing nuts at left and right to adjust.

3. Adjust up and down position of the hook according to the thickness of the cap to adjust clamp tension. At this moment, the hook should open and close without feeling too tight. (For adjustment, proceed to procedure 5 below).
Use the wing nuts for adjustment. (Fig. 3)

If the hook is extremely tight, it will damage the cap frame permanently.

4. Put the cap frame without a cap to cap drive on the machine. (Please refer to operation 8 "Hooping caps" on next page for mounting).
At this time, adjust so that guide on cap drive frame doesn't strike clamp support and gap is reduced as small as possible. Remove screws at left and right to adjust. (Fig. 4)

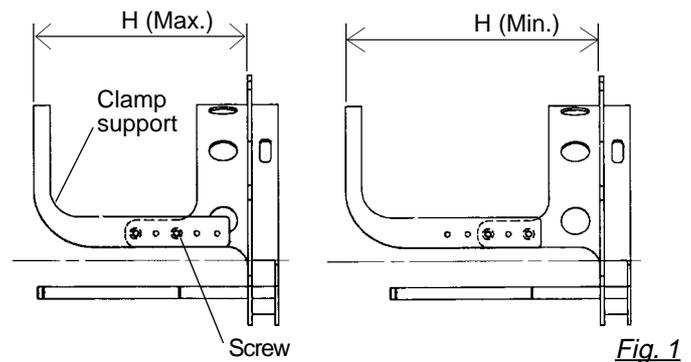


Fig. 1

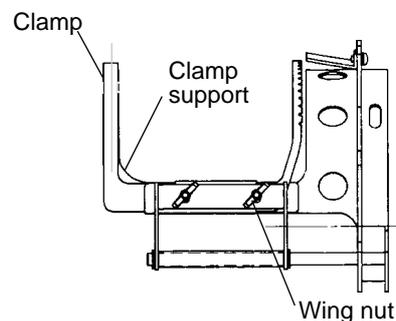


Fig. 2

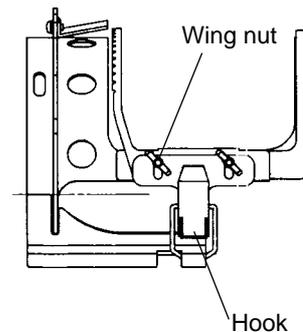


Fig. 3

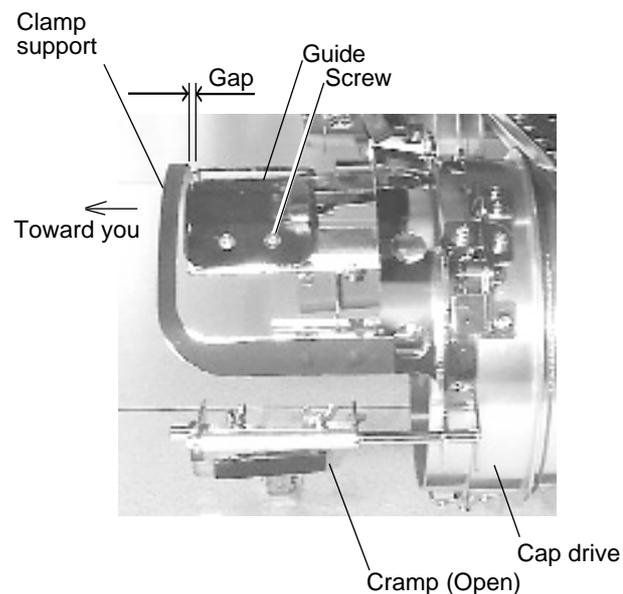


Fig. 4

CAP FRAME (OPTION)

7-6

Hooping caps

1. Place cap stretcher securely on a sturdy work bench.
2. As shown in Fig. 5, hold cap frame with both hands and place on cap stretcher. By pushing locking levers at 2 places with fingers, place cap frame so that center guide of cap stretcher fits in concave area of cap frame.

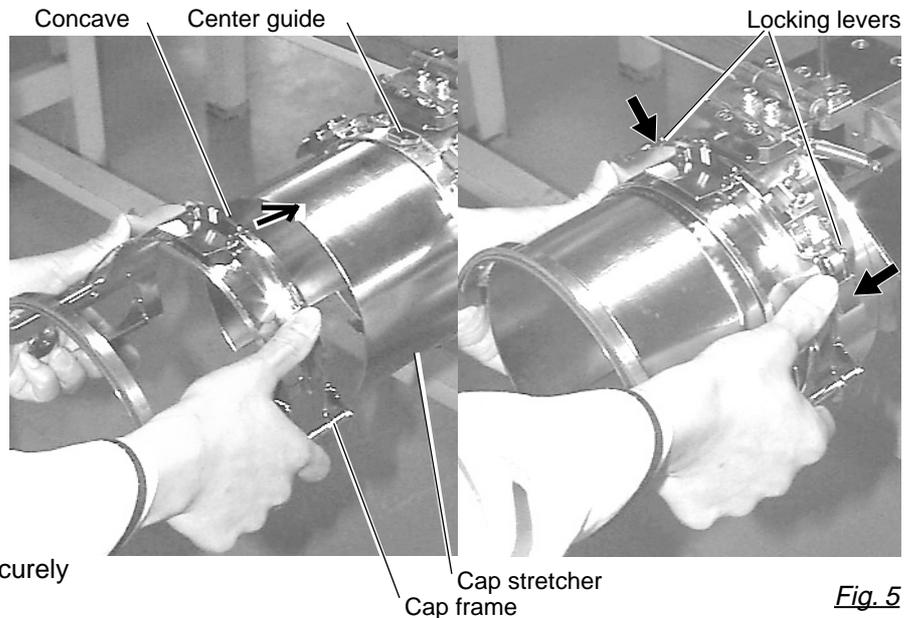


Fig. 5

Confirm that the cap frame is securely placed on cap stretcher.

3. As shown in Fig. 6, open clamp and keep open to the right.
4. Turn the sweatband of the cap inside out a slide onto the cap frame as shown. Place it so that the edge of the sweatband contacts the flange of the cap frame.

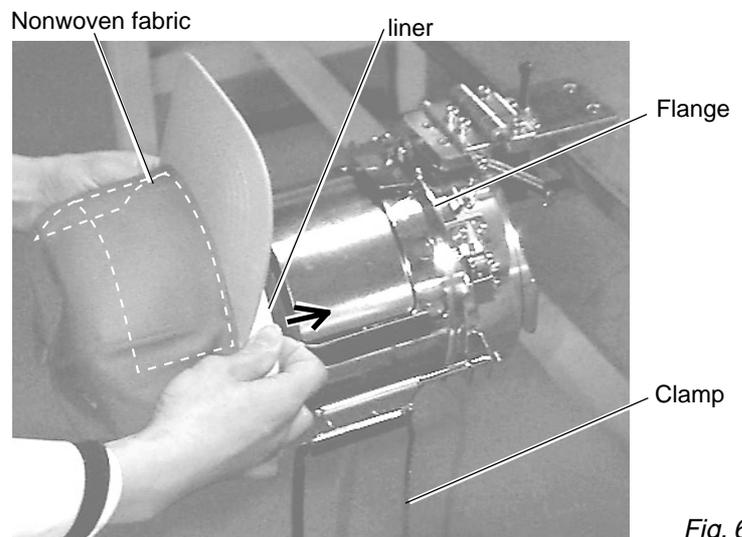


Fig. 6

Please place one or two sheets of non-woven fabric (backing) of standard thickness under unstructured caps.

5. As shown in Fig. 7, pull back part of cap and hook it on the hook and smooth out creases on cap. At this time, align the center of the cap to the center mark on the cap frame so that notched portion of the clamp fits into the seam of the visor.
6. Latch the hook, taking care not to cause wrinkles in the cap.

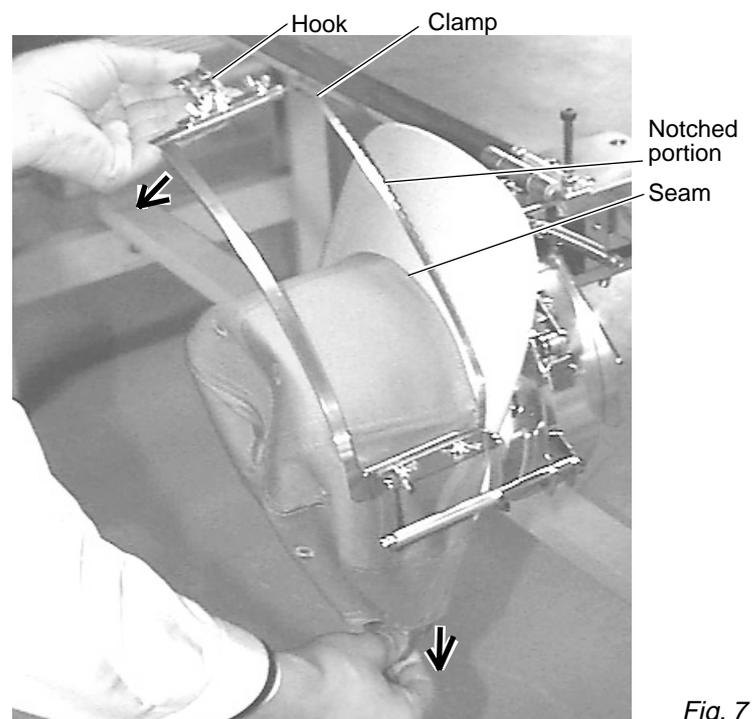


Fig. 7

If you can't get rid of wrinkles on the cap, adjust the cap frame again according to "Adjustment" on the previous.

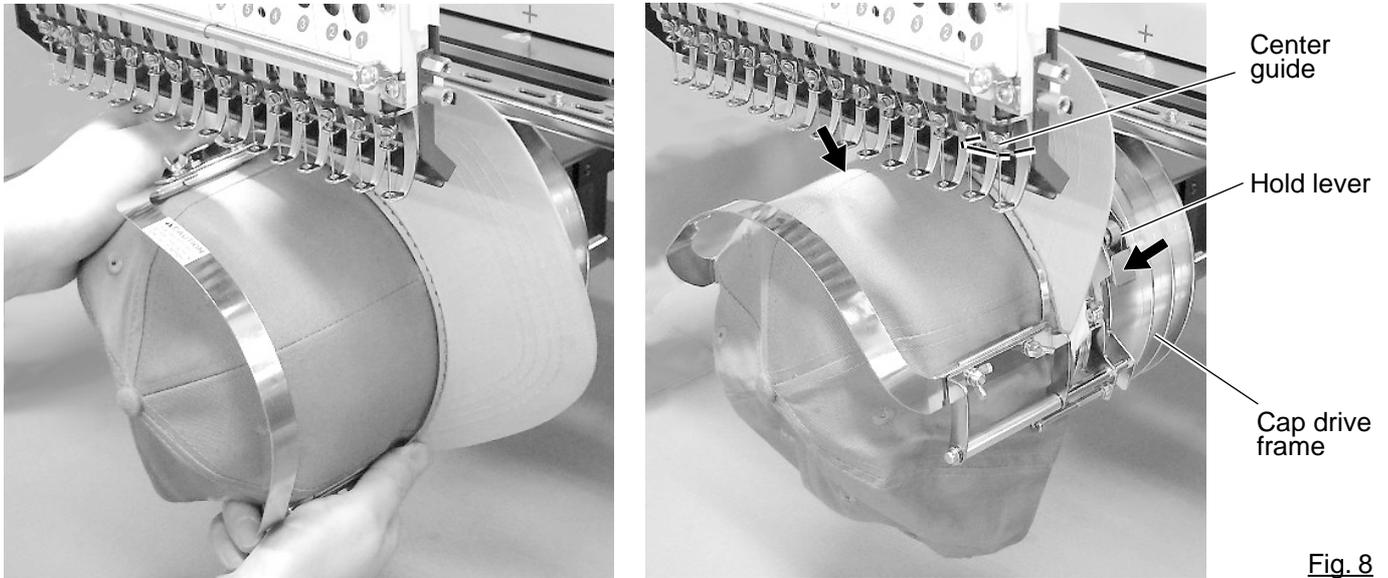


Fig. 8

7. Remove the cap frame from the cap stretcher.
8. As shown in Fig. 8, place the cap frame on cap the drive frame.
You will have to rotate the brim of the hat to the side in order to get past the needle case.
Then, push the holder lever in the 2 places shown, and place the cap frame on so that the center guide of the drive frame assembly fits into the cap frame notch.

Confirm that the frame is firmly seated on the cap drive frame assembly without any gaps.
If there is a gap between the cap frame or the cap drive holding lever doesn't go into the hole of the cap frame, loosen the set screw on the hold lever for adjustment.

● Wide cap frame

Adjustment

When you fix cap to cap hold frame, please adjust in the following manner.

Make sure to do the adjustment of the cap hold frame. If it is not adjusted properly, it may cause the deformity, damage of the cap, damage of the cap hold frame and break of the cap grip.

After adjusting the cap hold frame, make sure the cap to be set properly.





1. Adjust the length of the cap grip to suit the thickness of the fabric. At this moment, hook should open and close without feeling heavy. (For the adjustment follow the next page "Hooping caps" item 1 to 5.) The adjustment to be done by three adjusting screws. (Fig. 1)

If the cap grip is loose, even after hooked the cap is not fixed tightly and the cap is moving. (Fig. 2)

If the cap grip is too tight, you feel heavy when it is hooked and the grip bites into the cap too much. (Fig. 3)

If you feel hook extremely heavy in opening and closing, there is a case that cap hold frame will lose its shape or damage.

2. Adjust the guide position to suit the height of the cap. Remove screws at left and right to adjust. (Fig. 4)

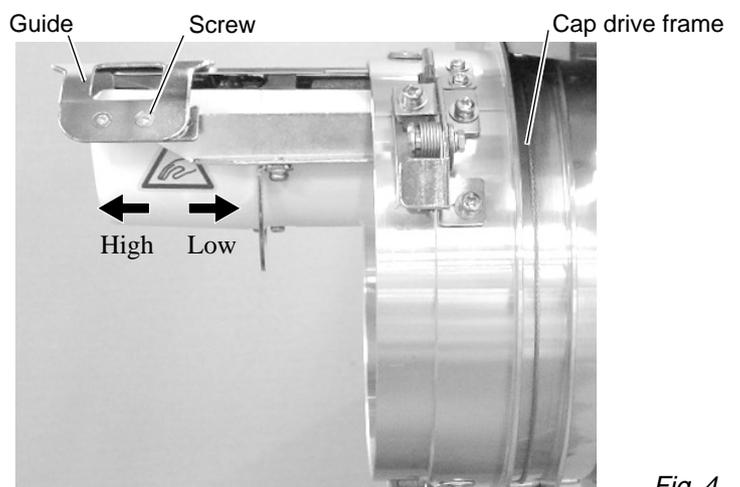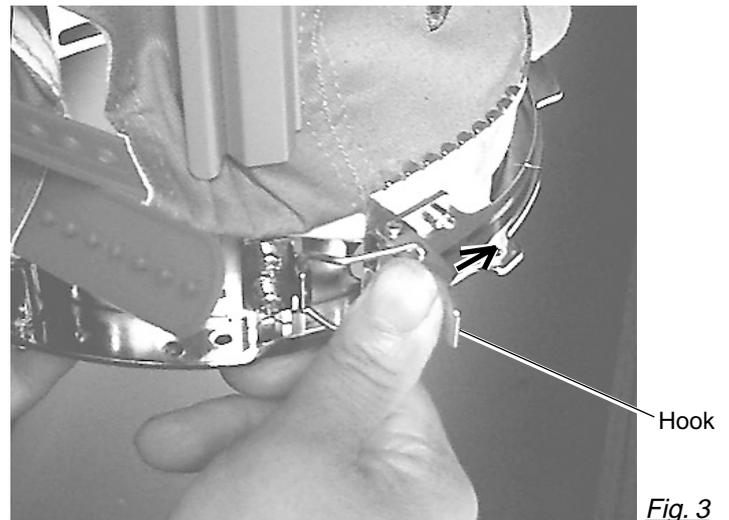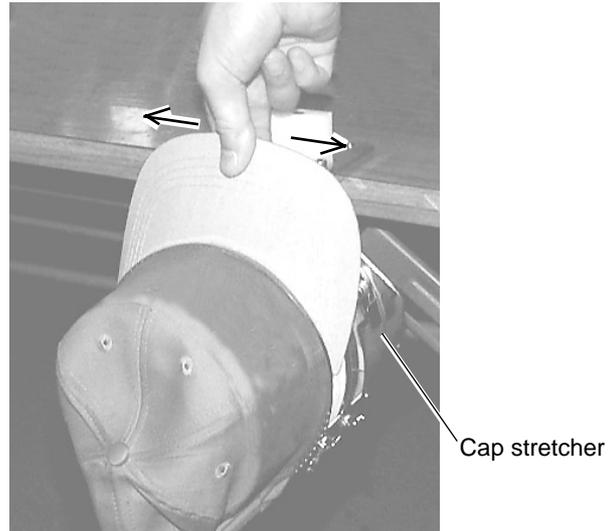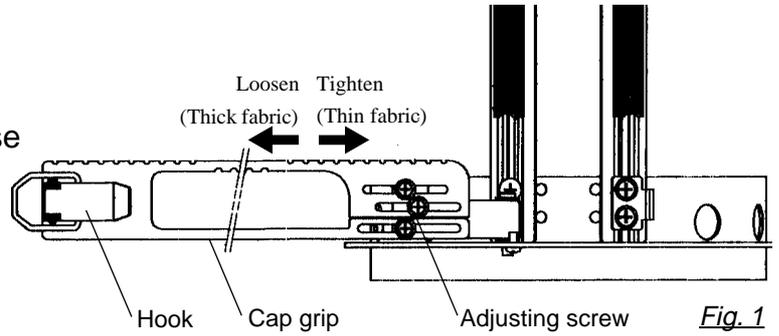

CAP FRAME (OPTION)

7-9

Hooping caps

1. Place cap stretcher securely on sturdy work bench.
2. As shown in Fig. 1, hold cap hold frame with both hands and place on cap stretcher. By pushing hold lever at 3 places in arrow marks with fingers, place cap hold frame so that center guide of cap stretcher gets in concave of upper cap hold frame.

Confirm that cap holder frame is securely placed on cap stretcher without gap.

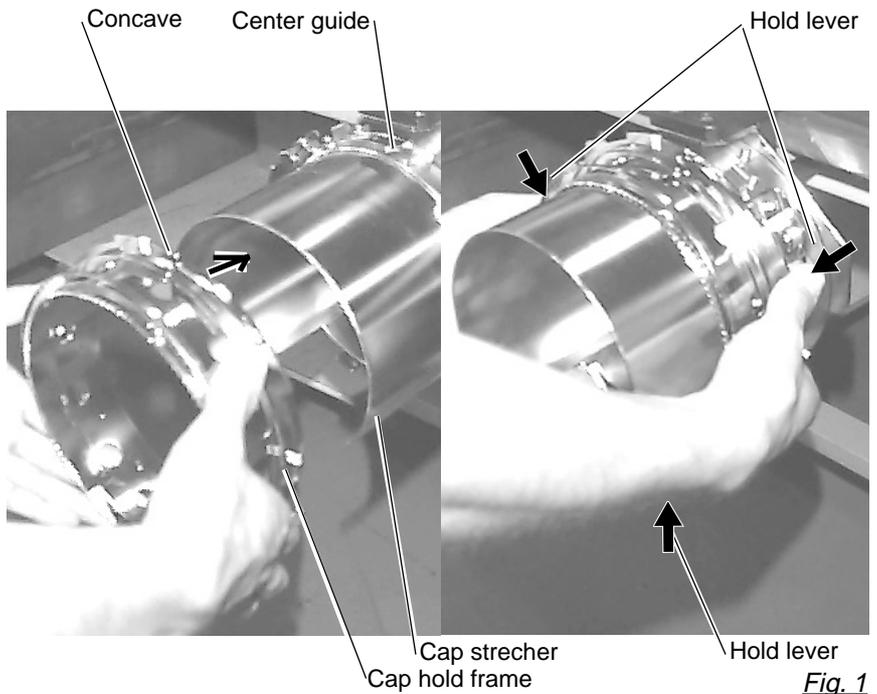


Fig. 1

3. As shown in Fig. 2, remove cap grip and keep open to the left.
4. Extend fore half of liner inside cap toward outward and place on cap stretcher. At this moment, place it so that tip of liner contacts flange of cap hold frame.

Please place one or two sheets of nonwoven fabric (backing) of standard thickness under unstructured caps. The length of nonwoven fabric should be some as one of round of cap.

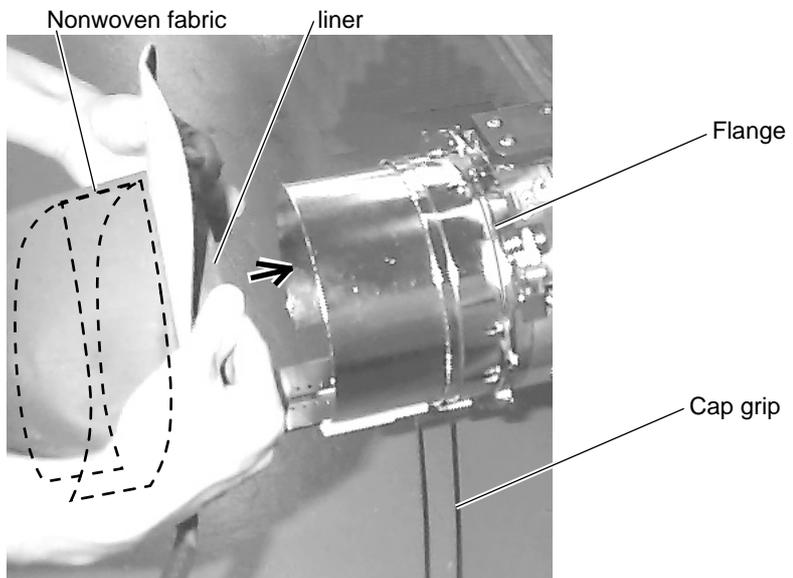


Fig. 2

5. As shown in Fig. 3, place hook so as to have visor of cap get in gap between cap grips. At this moment, set center of cap to center mark on cap hold frame so that notched portion of clamp gets into seam of visor. Close hook.

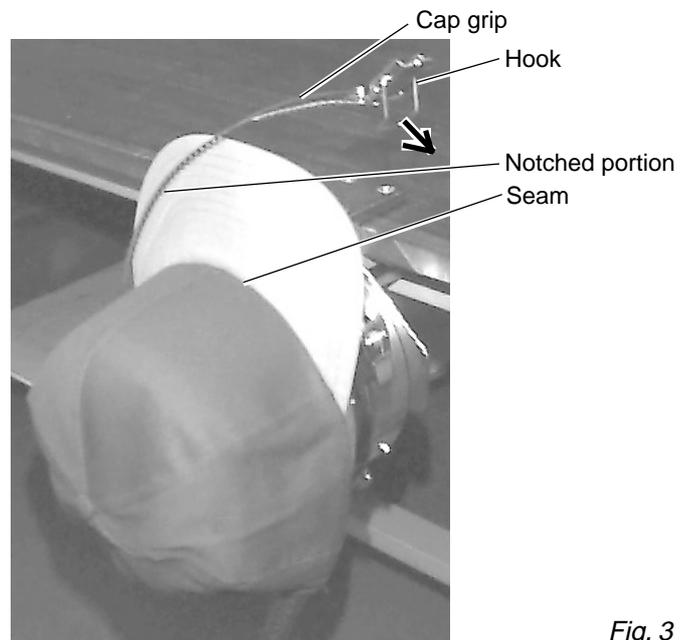


Fig. 3

CAP FRAME option

7-A

6. As shown in Fig. 4, tip the cap stretcher forward. Clip the back of the cap in two places by stretching the crease out as shown by the arrows.

Make the clip lever face the inside.

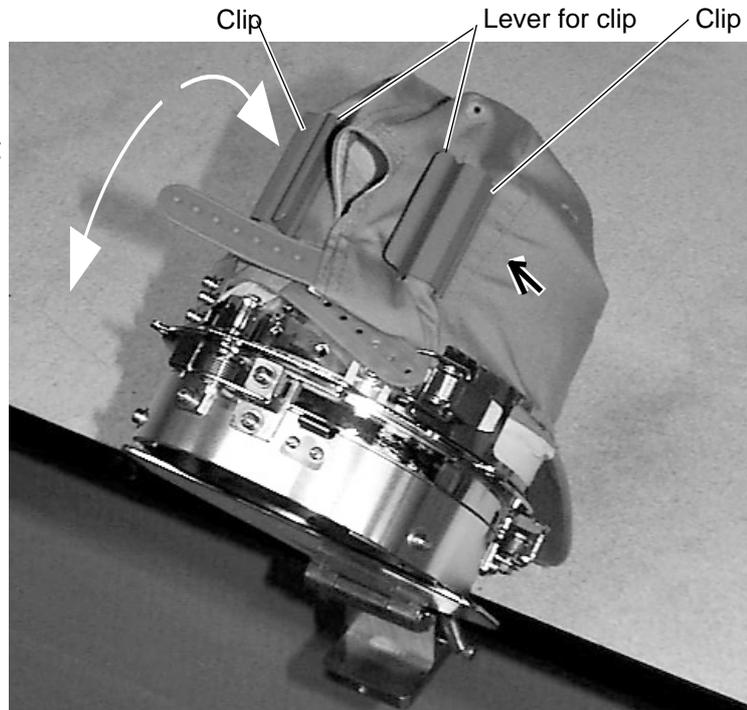


Fig. 4

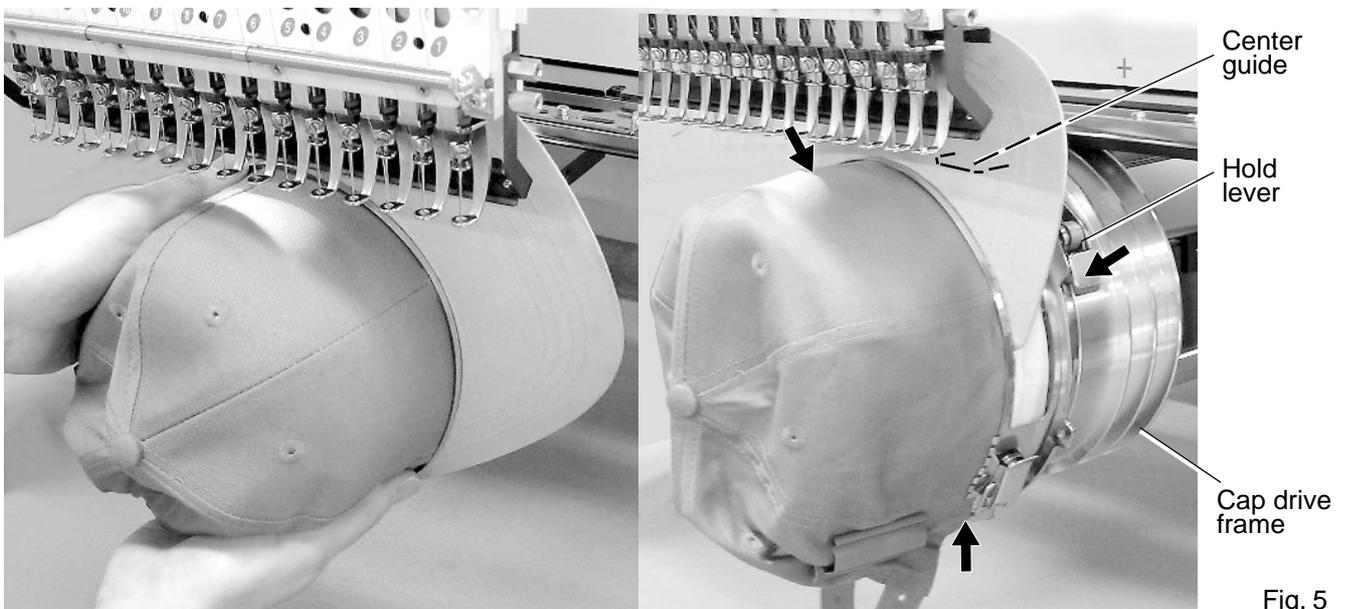


Fig. 5


7. Remove the cap holder frame from the cap stretcher.
8. As shown in Fig. 5, place the cap holder frame the cap drive frame assembly. Push the hold lever in at 3 places as shown by the marks and place the cap holder frame so that center guide of the drive frame assembly gets in the upper cap holder frame.

Confirm that the cap holder frame is firmly attached to the cap drive frame assembly without any gaps.

If there is a gap between cap holder frame and the cap drive frame, or hold lever doesn't go into hole on the cap holder frame well, loosen the set screw on the lever to adjust.


● Starting to embroider

1. When the machine is stopped, press **(FUNC)** and select "Frame position" with .

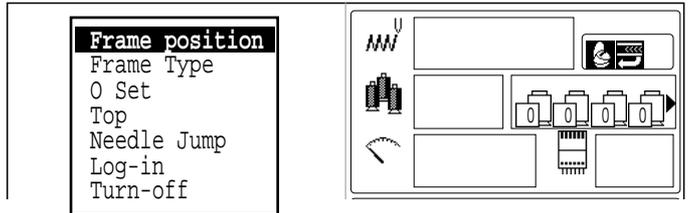


2. Press the **(SET)**.

CAUTION: To prevent accidents.
The frame moves quickly.
Keep hands away from the frame.

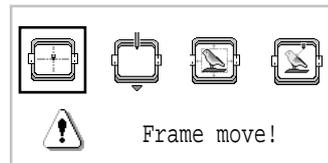


3. Select  "Center" with  and press **(SET)**.

The embroidery frame will move to the center of the embroidery area automatically.

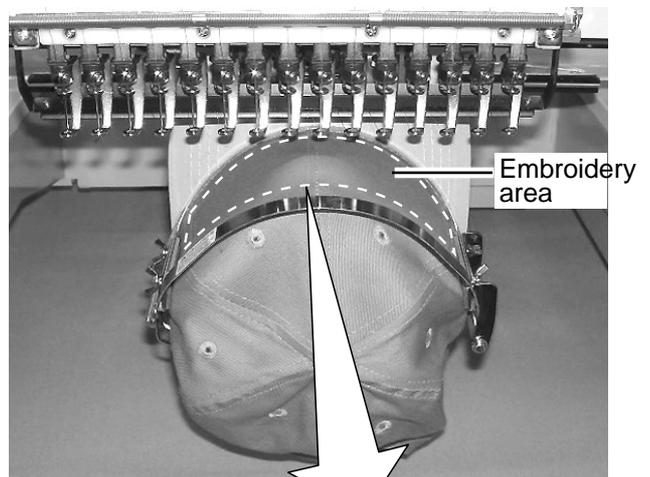

* The actual embroidery area will be restricted by the design and shape of a cap.

Embroidery area (Max. *1)

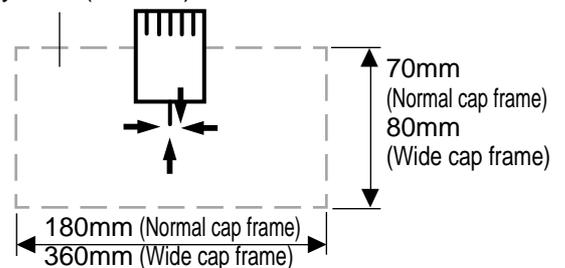

4. Move the frame to the original point of pattern data by .

●:Original point (Start point)

5. Press the **(TRACE)**.

The frame will start moving for the design trace.


P 14-5

Make sure that the pressure foot and needle does not touch the frame.

You can make tracing speed slow by pressing

(TRACE) during tracing.

If you hold the **(START)**, the machine will discontinue tracing and move to the original point to start embroidering.

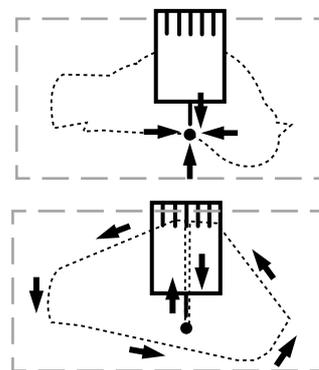

You can confirm the outline and position of design.


Go on to step 7 if you want to start embroidering without tracing first.

CAP FRAME option

7-C

6. The display will show ">>Trace end" and the embroidery frame will stop moving.


The embroidering frame will return to the first stitch point of the pattern.

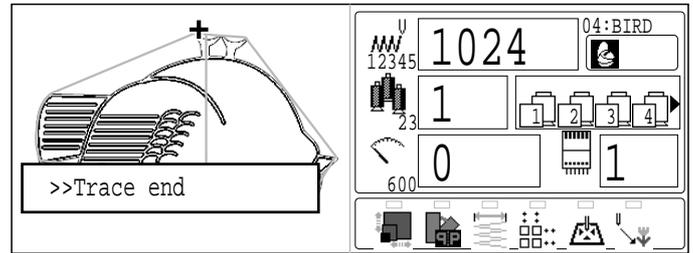


7. Press the **START**.
Embroidery will start.

8. After finishing your design, the display will show ">>End" and the machine will stop.

The embroidery frame will return to the original point automatically if the auto origin function has been activated.  12-7

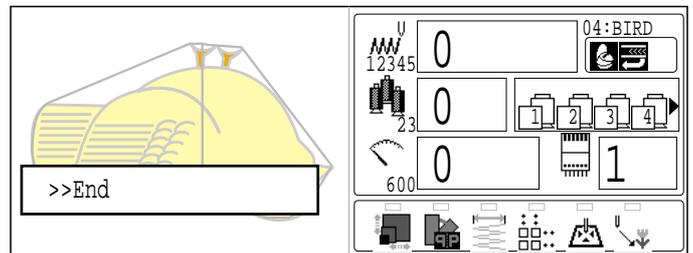



●:Original point (Start point)

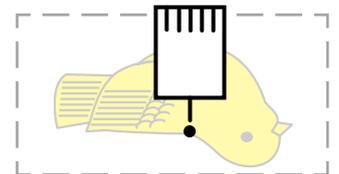

ADJUSTING THE THREAD TENSIONS



8-1

1. With the thread going through the hole of the pressure foot, pull it out slowly toward the front.

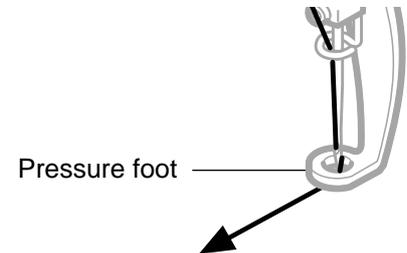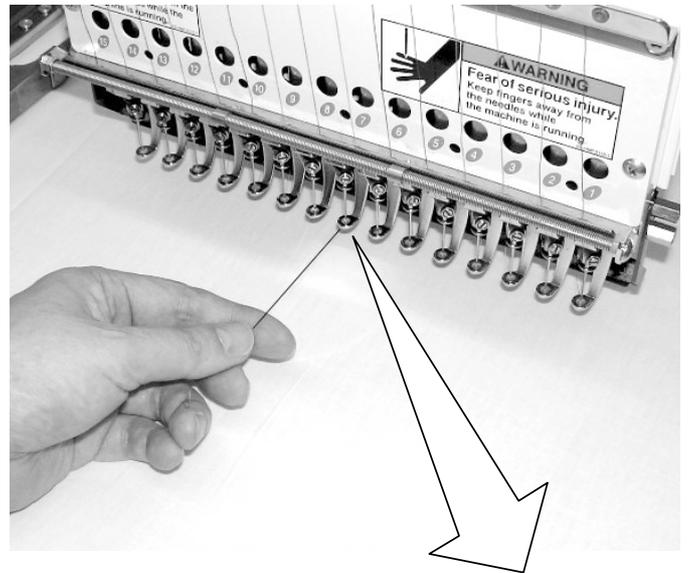

2. Adjust the Minor thread tension by the first tension knob and then the second Thread tension knob.

According to the type of upper thread and cloth.

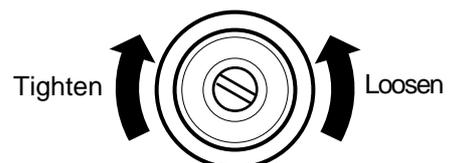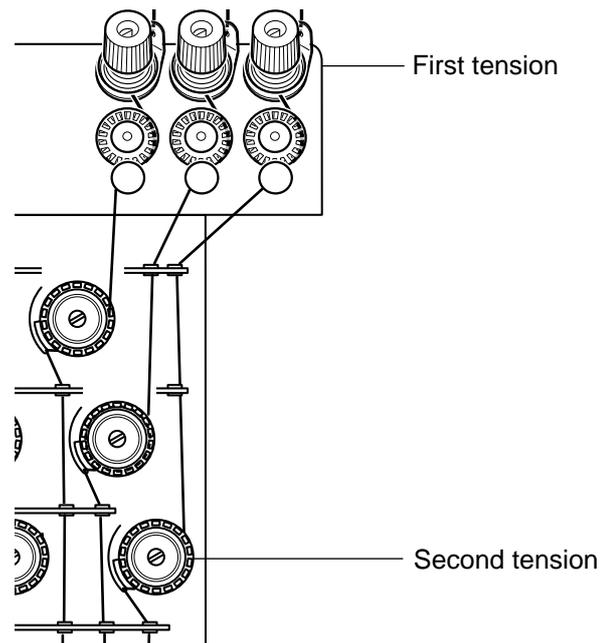

ADJUSTING THE LASER POINTER (OPTION)

8-2

Laser pointer indicates the needle position.

The beam of laser is coming from right upper side, thus the position of laser pointer can be changed depending on the height of surface of fabric.


Please adjust then angle of laser pointer depending on thickness of fabric and type of frame

1. For switch ON laser pointer, Press and Keep **(FUNC)** when the machine is not running.

For switch OFF laser pointer, Press and Keep **(FUNC)**.


2. Press **(◀)** or **(▶)** and set a position of moving head to needle No. 1.

3. Set fabric on the frame, then put white paper to the position of needle and fix by Scotch tape.

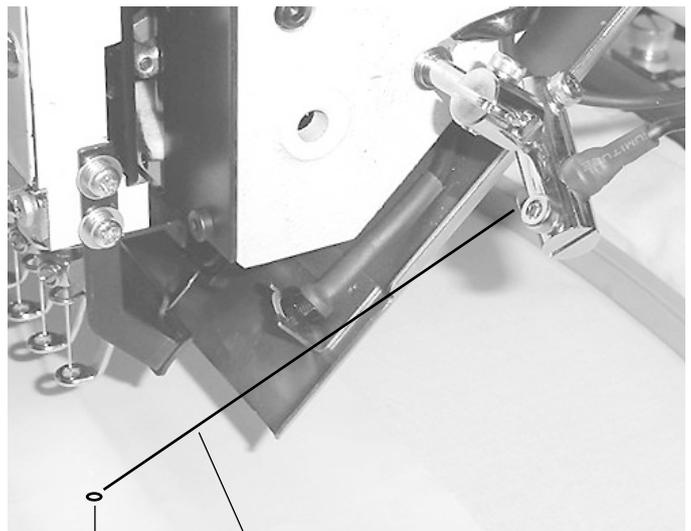


Needle position Laser beam


4. When the machine is stopped, press **(MENU)** and Select "OTHER" with **(◀▶)**.

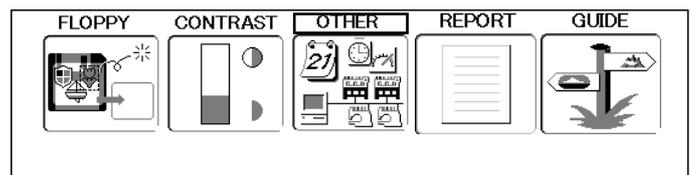

5. Press the **(SET)**.

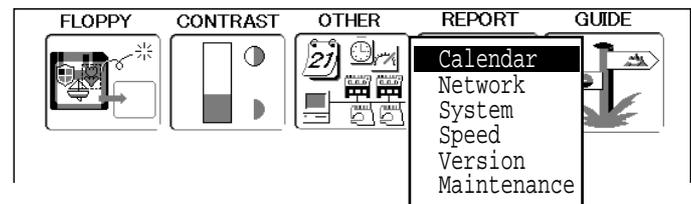

6. Select "Maintenance" with **(◀▶)** and press **(SET)**.

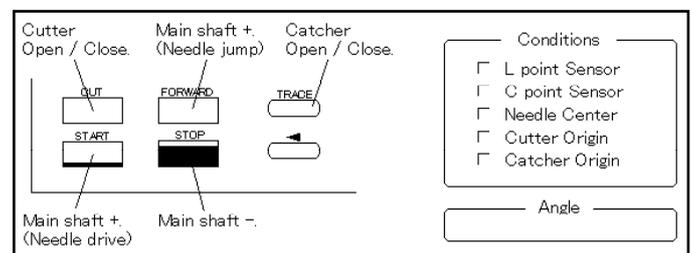

7. Press **(START)** and keep until needle reaches to the paper and makes hole.

CAUTION: To prevent accidents.
The needle will penetrate the fabric.
Please keep your hands clear for your safety.

ADJUSTING THE LASER POINTER (OPTION)

8-3



8. Unscrew a fixing screw for X direction slightly and change angle of support(X).

9. Unscrew a fixing screw for Y direction slightly and change angle of support(Y).

10. Fix the fixing screw for X and the fixing screw for Y.

11. Check the hole position on paper and the point of laser beam, and take paper out.

12. Press **(ESC)** several times until display returns to Drive mode.

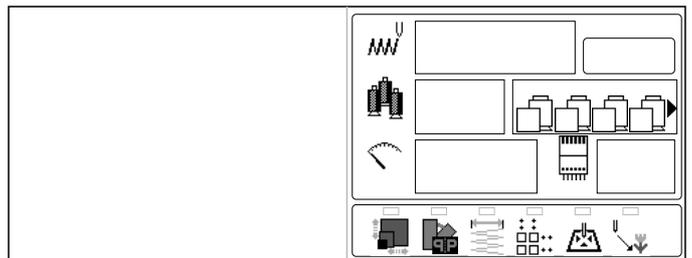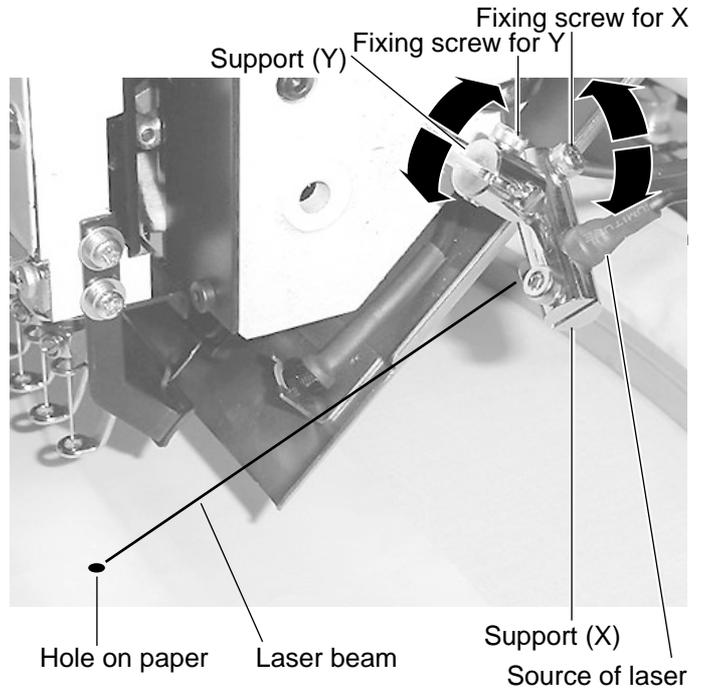

● What to do if the thread breaks while sewing

If the thread breaks or runs out while sewing, the machine senses the break, stops, and moves back several stitches from the break point.

(This prevents open sections in the design when sewing is resumed. See the thread break section. P5-1)

If the upper thread breaks

Thread the upper thread again.

(Refer to P4-6)

In case bobbin thread breaks

Thread lower thread again.


(See bobbin winding P4-5)

● Stopping and resuming sewing

If you need to turn off the machine in the middle of a design, you may resume from the stop point after turning on the machine back on.

■ If you leave the machine off for too long, the fabric may distort which will create gaps in the embroidery design.

Example: An unsatisfactory gap between lines because the machine stopped at a half point in embroidery and the material shrunk.

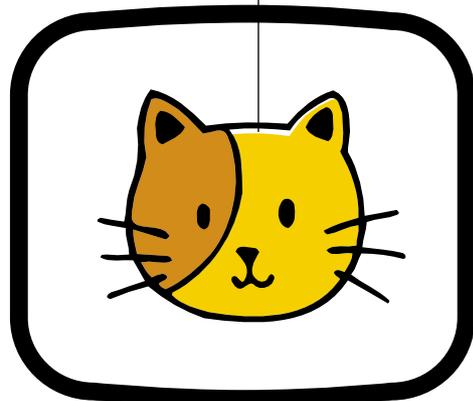

To suspend sewing

1. Stop the sewing by pressing the **STOP** button.

2. Press the **CUT** button.

The needle will go down and trim the thread.

3. Turn off the power switch.

To resume sewing again from the last sewn position:



4. Turn on the power switch.

5. Press the **SET** button.

After the carriage and frame move slightly, the embroidery frame will return to the previous position automatically.

6. Back up several stitches from the stop point by pressing the **STOP** 3-4 times.

7. Start sewing again by pressing the **START**.

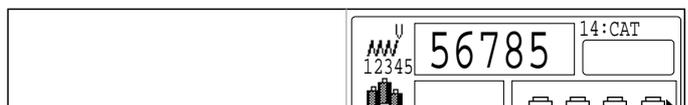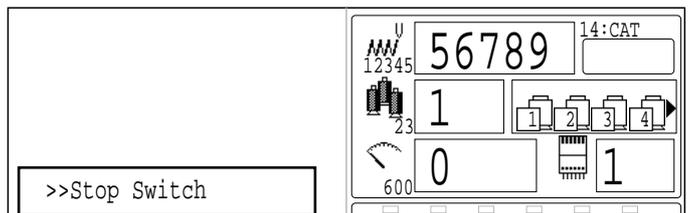

CAUTION: To prevent accidents.
When performing a thread trim, be careful of the needle which will pierce the fabric.

CAUTION: To prevent accidents.
The frame moves quickly.
Keep your hands and body clear of the machine.


● Loss of power while embroidering

If you have a power failure while embroidering, follow these instructions and you can restore the position of the frame and the pattern data to its state before the failure.

1. Turn on the power switch.



2. Press the **SET**.

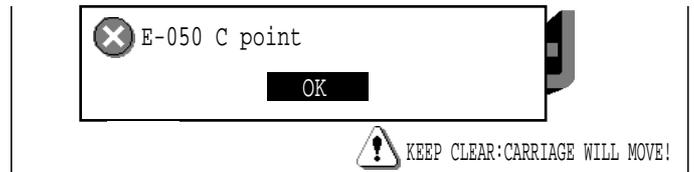

3. Press the **SET**.



4. Select "Auto" with  and press **SET**.
The main shaft will make one rotation and stop at the "C" point (proper stop position).

5. Press the **CUT**.
The needle will go down and trim the thread.

6. Press the **SET**.
After the carriage and frame move slightly, the embroidery frame will return to the previous position automatically.

7. Back up several stitches from the stopped point by pressing the **STOP**.

8. Start sewing again by pressing the **START**.


 **CAUTION: To prevent accidents.**
When performing a thread trim, be careful of the needle which will pierce the fabric.

 **CAUTION: To prevent accidents.**
The frame moves quickly.
Keep your hands and body clear of the machine.

● Moving the hoop while embroidering and then returning to the correct location (Position)


If you wish to move the embroidery frame in the middle of the design, follow these steps:

1. Stop the sewing by pressing the **STOP**.

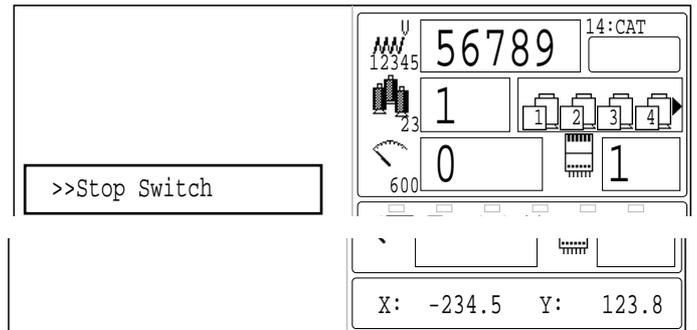


2. Move frame with .

3. Press **FUNC** and select "Frame position" with

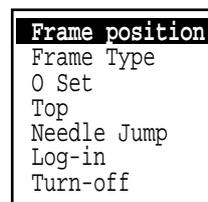

4. Press the **FUNC**.

CAUTION: To prevent accidents.
The frame moves quickly.
Keep hands away from the frame.

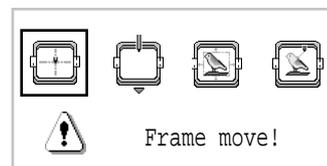

5. Select  "Position" with  and press



The frame will automatically return to the previous position.



● Moving back to the starting point (Origin)

The frame returns to the origin point (beginning position of design).

CAUTION: To prevent accidents.
The frame moves quickly.
Keep hands away from the frame.



1. Press the **ORG** while the machine is stopped.

The frame will move to the origin point and the pattern data will return to the start point.

 (Top) will be shown on the display.

Press **ORG** again to go return to the previous point **ORG**.

 (Top) will be cleared on the display.

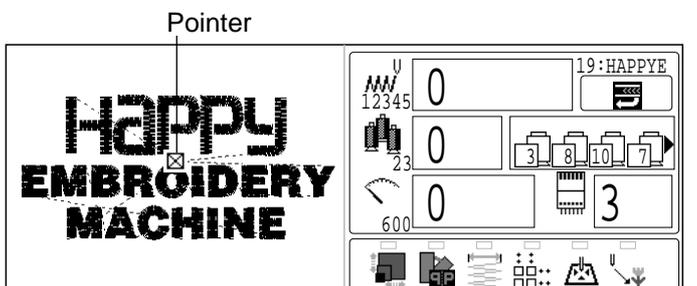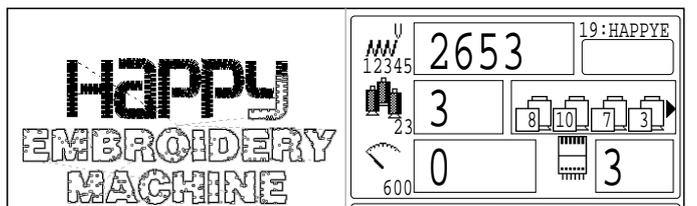


● Going back to the beginning of the design (Top)

Stopping sewing in the middle of a design, changing the design's location in the hoop, and then restarting from the beginning.

If you use "Top", you will return to the start point the frame position left where it is.


1. Press the **(FUNC)** while the machine is stopped.

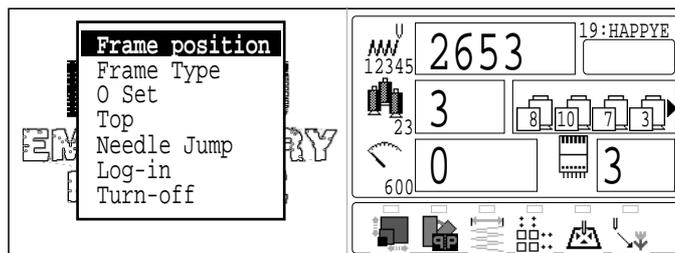

2. Select "Top" with  and press **(SET)**.
The pattern data will return to the start point.

 (Top) will be shown on the display.


If you want to go back to the previous point before "Top", repeat steps 1 and 2 again.

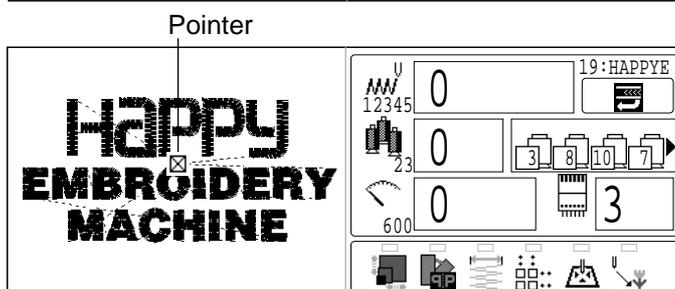

● Placing the design in the center of the selected embroidery frame (Center)


Move embroidery frame position to the center automatically.

1. When the machine is stopped, press **(FUNC)** and select "Frame position" with .

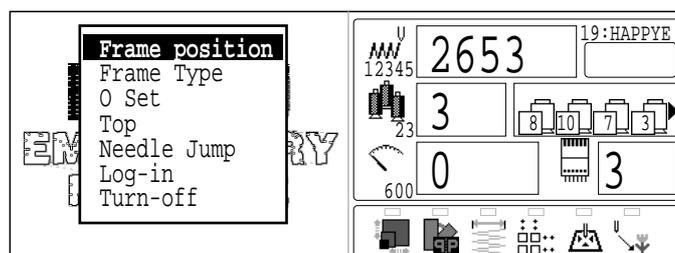

2. Press the **(SET)**.

 **CAUTION: To prevent accidents.**
The frame moves quickly.
Keep hands away from the frame.

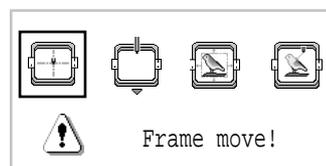


3. Select  "Center" with  and press **(SET)**.

The embroidery frame will move to the center of the embroidery area automatically.

If you want to get back to the previous status from "Center". Do procedure of "Position".

 9-3

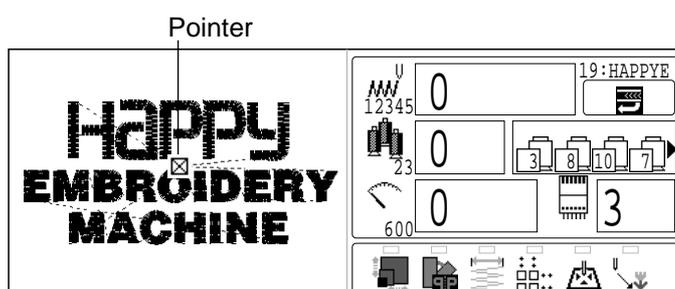

● Rotating and mirroring designs (Convert)

Convert selected pattern data.

Setting example




Normal

● : Start point of pattern




Mirror reverse + 90°


With the start point of pattern as a pivot, the machine changes the angle in 90 degree increments.

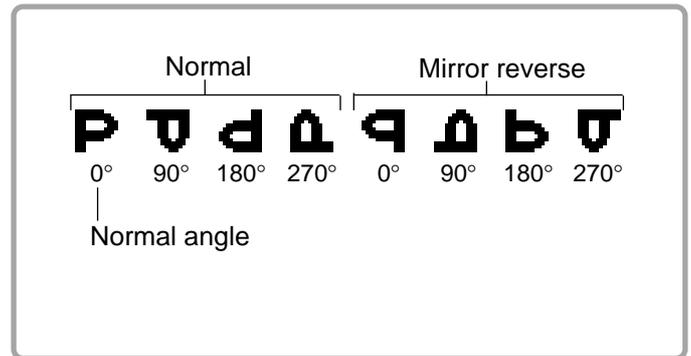


- When the machine is stopped, press **(MENU)** and Select "SETTING" with

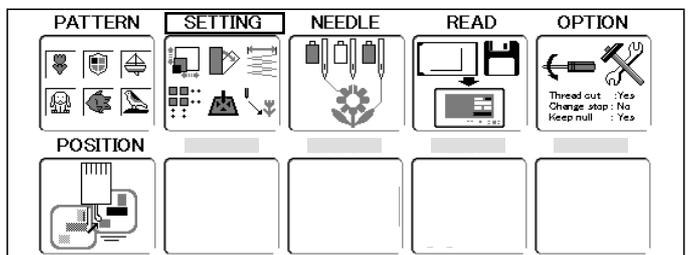


- Press the **(SET)** button.
The left side shows the number, name and details of the current pattern.

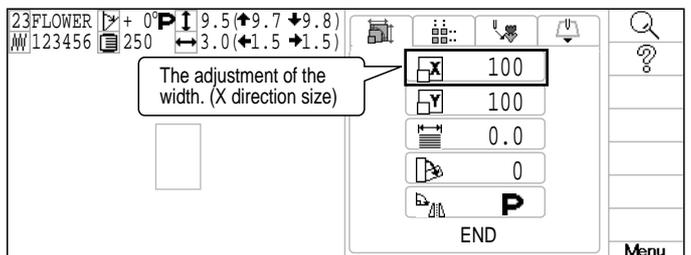

- Press up/down of to select and press **(SET)**.

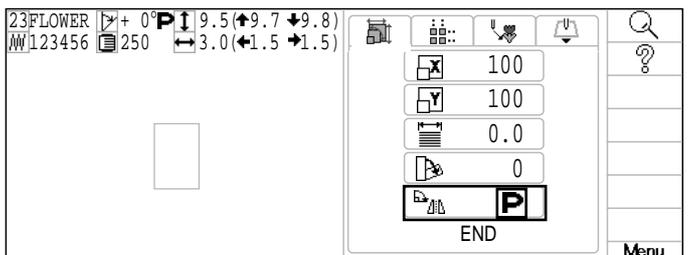


- Press up/down of to select conversion of position required.

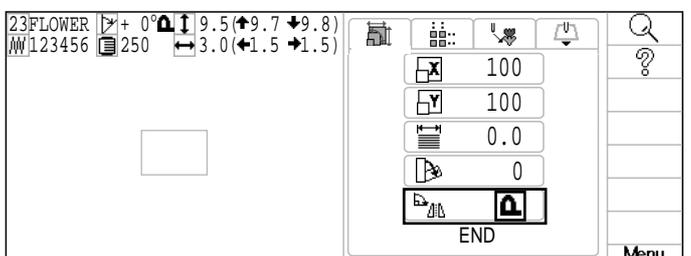

- Press the **(SET)**.
The setting is fixed.

For return to main menu press down of to select END and press **(SET)** or Press **(ESC)**. Press **(ESC)** once again to return to Drive mode.

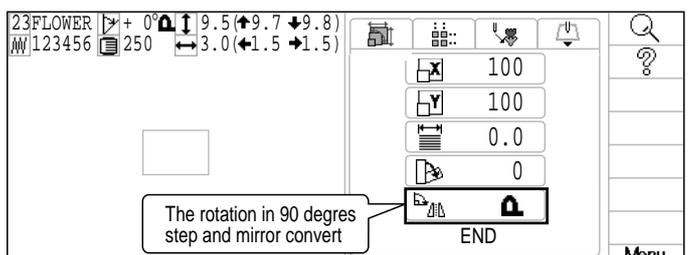


● Starting in the middle of a design (POSITION)

This function allows you to go directly to a stitch number or a color change and positions the hoop correctly.

Stitch (Number of stitches)


This moves the frame to any stitch number desired.

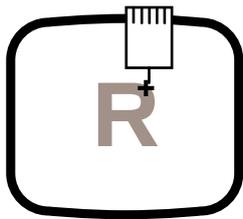

+ : Any stitches

Change (Color position)


This moves the frame to the beginning of any Color change number.

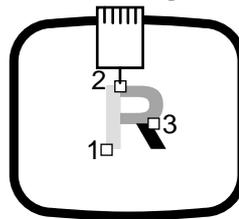


□ : Beginning of any colour number

Stitch

1. When the machine is stopped, press **(MENU)** and Select "POSITION" with

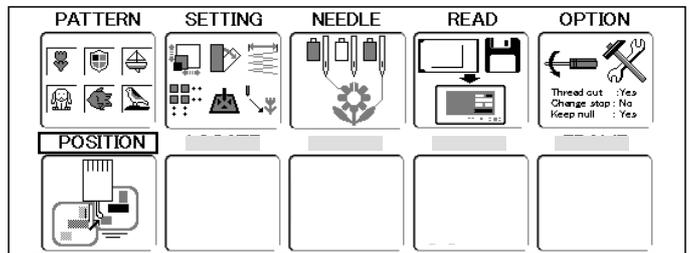


2. Press the **(SET)** button.

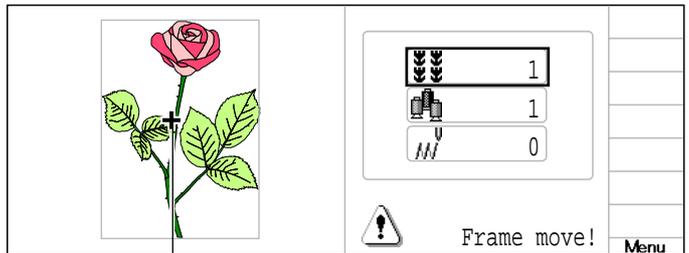


Pointer shows you the current position of the frame.

3. Press up/down of to select and press **(SET)**.

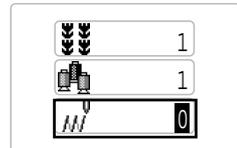


4. Press up/down of to select the number and press right /left of to select the digit.

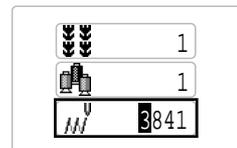

5. Press the **(SET)** button.

The frame will move to the selected stitch number position.

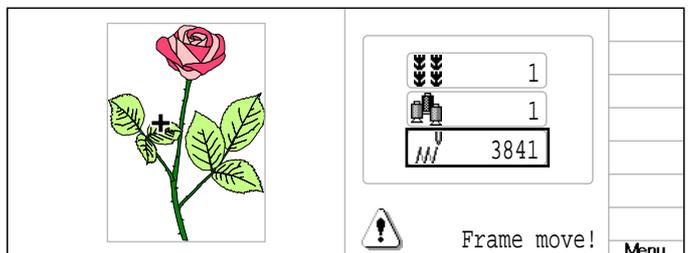


CAUTION: To prevent accidents.
The frame moves quickly.
Keep hands away from the frame.


Press **(ESC)** to return to Menu mode.
Press **(ESC)** once again to return to Drive mode.

Change

1. When the machine is stopped, press **MENU** and Select "POSITION" with .

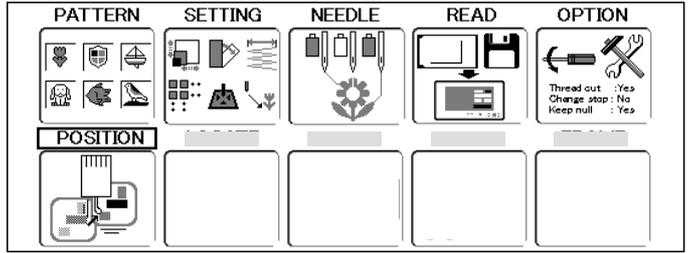


2. Press the **SET** button.

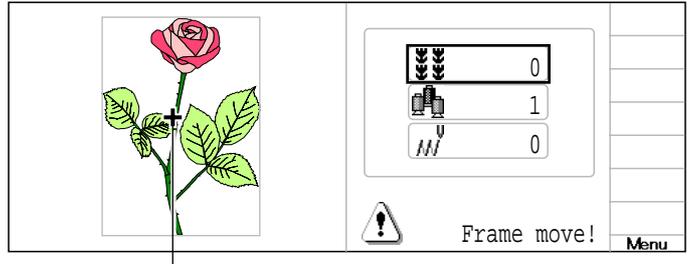


Pointer shows you the current position of the frame.

3. Select  with  and press **SET**.

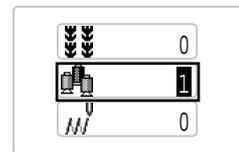


4. Press up/down of  to select the number and press right/left of  to select the digit.

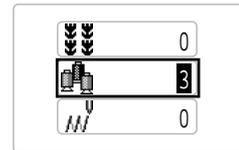

5. Press the **SET** button.
The frame moves to the selected color position.

 **CAUTION: To prevent accidents.**
The frame moves quickly.
Keep hands away from the frame.

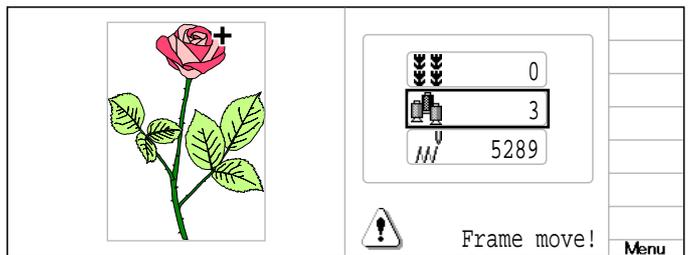


Press **ESC** to return to Menu mode.
Press **ESC** once again to return to Drive mode.

DISPLAYING THE PATTERN IN SETTING MODE 10-1

When there is  shows on the right side menu, the pattern data may be shown on the screen.

1. When the machine is stopped, press **(MENU)** and select desired setting item with .

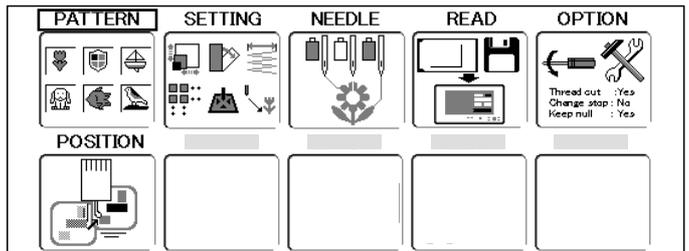


2. Press the **(SET)**.
Icon of  will be shown in sub-menu.



3. Press the **(MENU)** and select  with .



4. Press the **(SET)**.
Illustration of the pattern selected will be displayed.
Right side of display shows the detail information of the current pattern data.

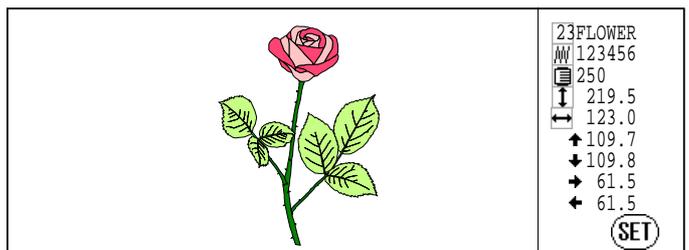

5. Press the **(SET)**.
The display returns to the view of Step 2.




Press **(ESC)** to return to Menu mode.
Press **(ESC)** once again to return to Drive mode.

HOW TO SEE THE EXPLANATION OF MUNE 10-2

When  is shown on the right side of the menu, the explanation of menu can be seen by the following step.

1. When the machine is stopped, press **MENU** and select desired setting item with .

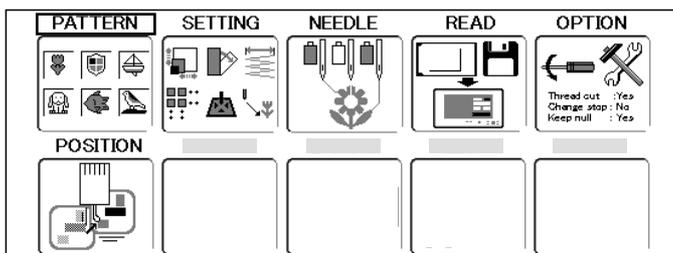


2. Press the **SET**.
Icon of  will be shown in sub-menu.



3. Press the **MENU** and select  with .



4. Press the **SET**.
The explanation of menu appears on screen.

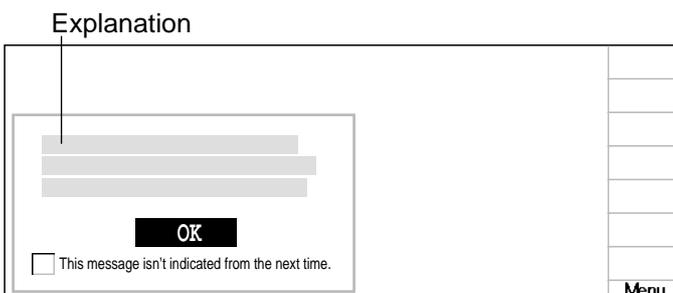

5. Press the **SET**.
The display returns to the view of Step 2.




Press **ESC** to return to Menu mode.
Press **ESC** once again to return to Drive mode.


● Locking pattern data

Locking pattern data stored in the machine memory will prevent deletion and changes in settings.


1. When the machine is stopped, press **(MENU)** and Select "PATTERN" with .

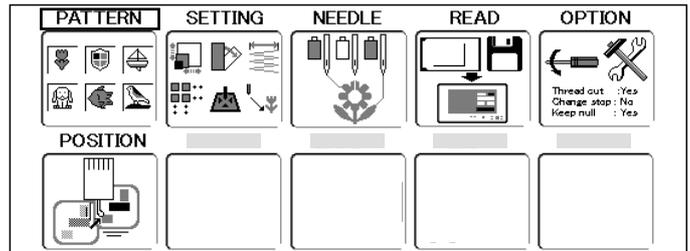


2. Press the **(SET)** button.

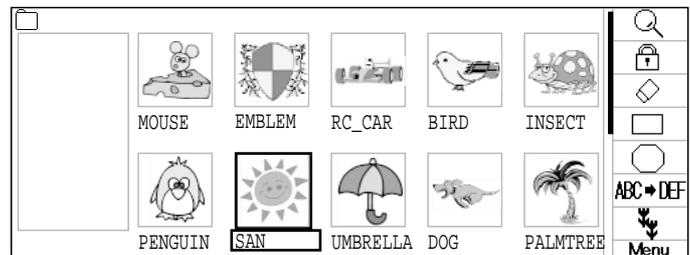

3. Select the pattern with .

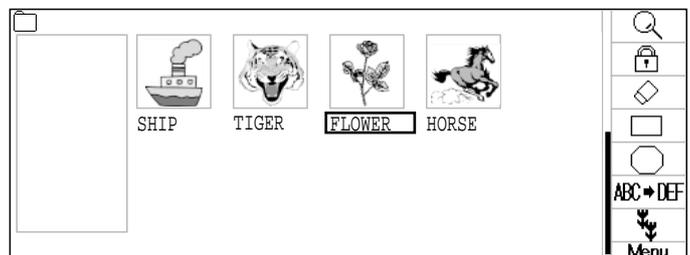


4. Press the **(MENU)** and select  with .

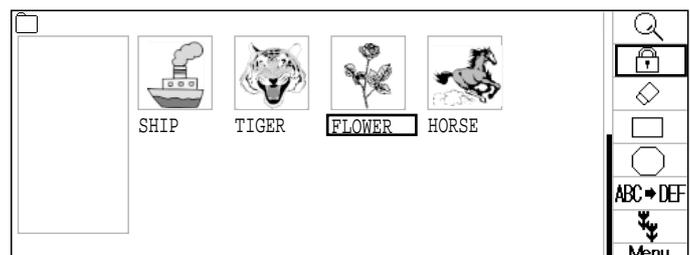

5. Press the **(SET)** button.

The symbol  will be shown on the left of the locked pattern.

Repeat steps 4 and 5 to unlock.

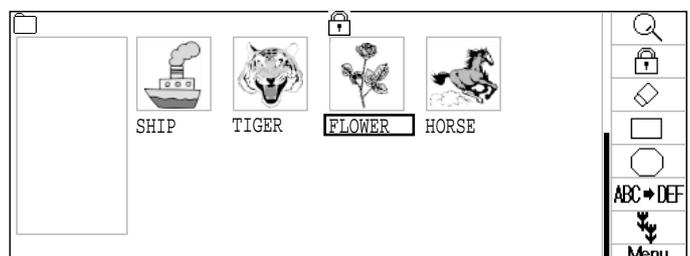


Press **(ESC)** to return to Menu mode.
Press **(ESC)** once again to return to Drive mode.


● Trace type

Changing the trace type of the pattern data in the machine memory. 14-5


1. When the machine is stopped, press **(MENU)** and select "PATTERN" with .

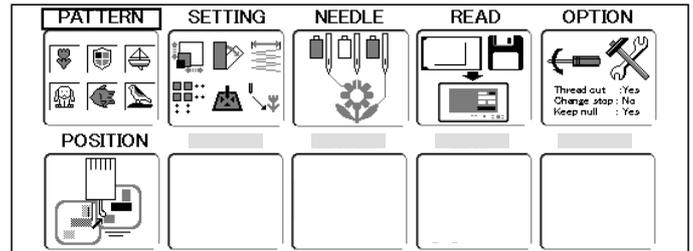

2. Press the **(SET)** button.

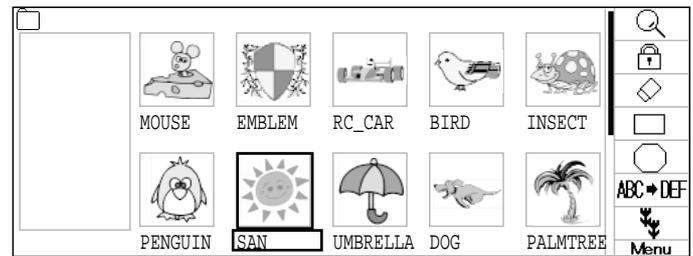


3. Select desired pattern with .

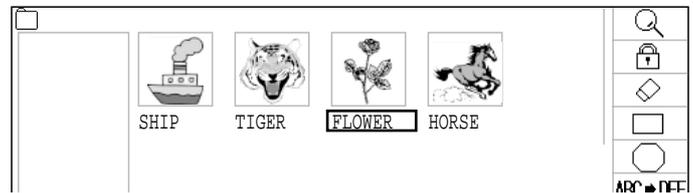

4. Press **(MENU)** and select or with .


Maximum embroidery area of pattern

Outline of pattern

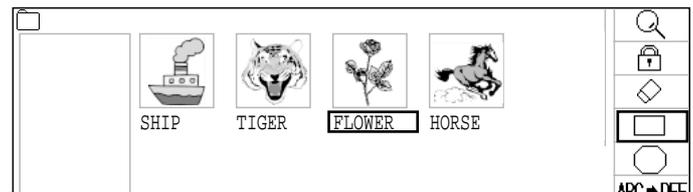


5. Press the **(SET)** button.
Trace type is changed.

--- Calculating ---

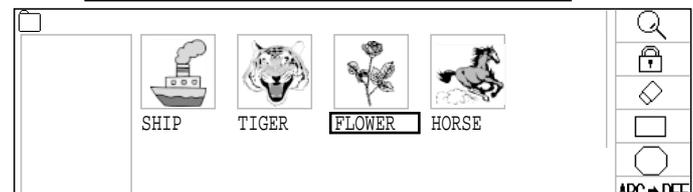

Press **(ESC)** and go back to Drive mode for confirmation.

Trace data

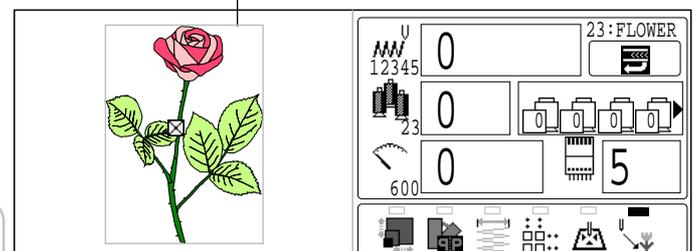

Press **(ESC)** to return to Menu mode.


Press **(ESC)** once again to return to Drive mode.

●Export


You can write out of machine memory to a memory media or 3.5" disk in HAPPY format.

1. Insert the memory media. 5-5
or Insert the data disk into the disk drive.
(Option) 5-8


2. When the machine is stopped, press **(MENU)**
and Select "PATTERN" with .

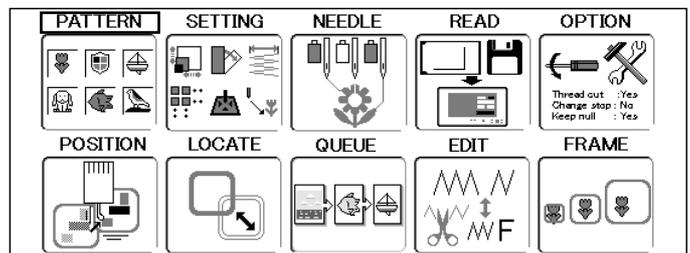


3. Press the **(SET)** button.

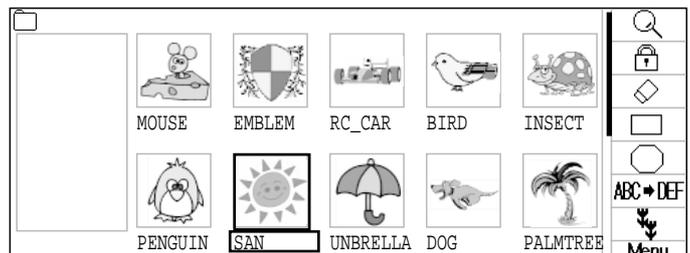


4. Select desired pattern with .

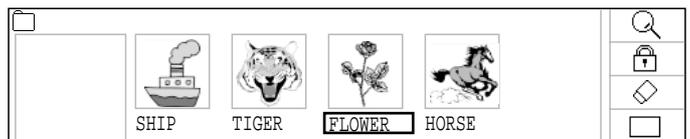


5. Press **(MENU)** and select with .

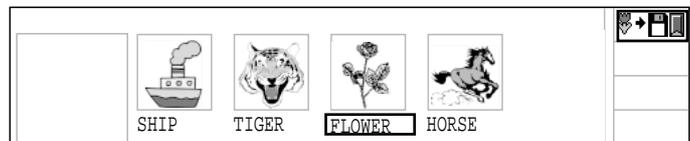


6. Press the **(SET)** button.
Selective page of memory media or data disk will be shown if the optional disk drive unit is installed.

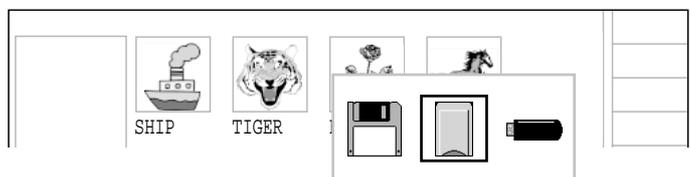

7. Select the memory media or data disk with .

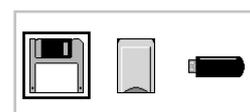


8. Press the **SET**.

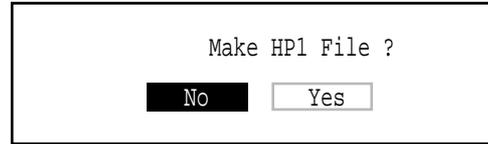

9. Select "No" or "Yes" with and press **SET**.

Choose "Yes" when you need the data adjustments or needle selections saved. They will be written together as "Other settings" and "HP1 file".

Select "No" when you do not need the "Other settings" to be saved.

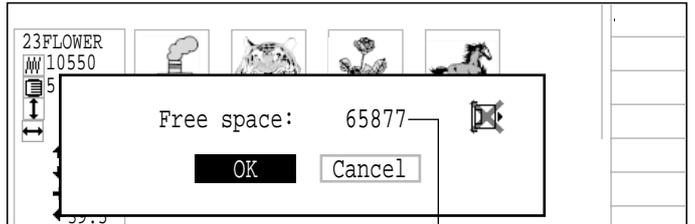



Free space on the data disk

Before writing, check that there is more remaining than the number of stitches to be saved.

If there are more stitches than remaining space, you need to erase data or write into a new media or disk.

10. Press the **SET** button.

The name of the pattern will be shown.

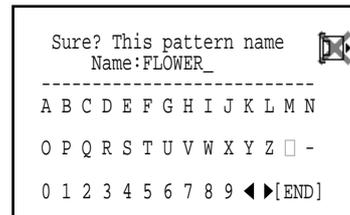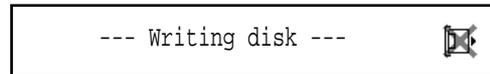

11. Press **SET** if the pattern name is not to be changed.


Choose "◀" or "▶" with and press

SET. Then select each digit in the existing name.

- ◀ To select digits on the left.
- ▶ To select digits on the right.



Select word with and press **SET**.

The maximum number of characters in a design name is eight letters or numbers.

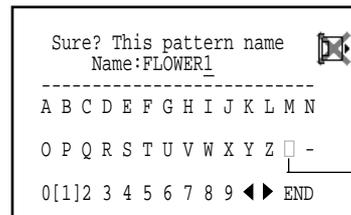

12. Select "END" with and press **SET**.

The pattern data will be written.

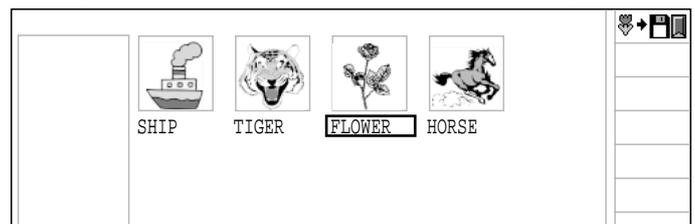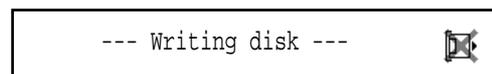


Press **ESC** to return to Menu mode.

Press **ESC** once again to return to Drive mode.


●Renaming patterns

Rename pattern in memory.


- When the machine is stopped, press **(MENU)** and Select "PATTERN" with .

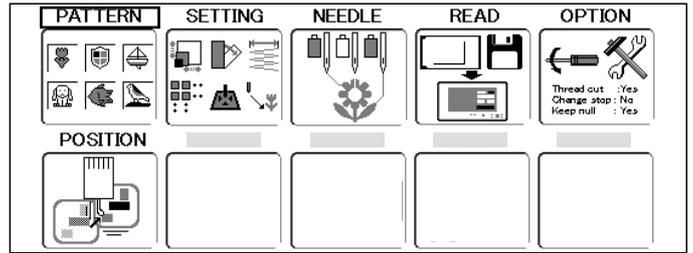


- Press the **(SET)** button.

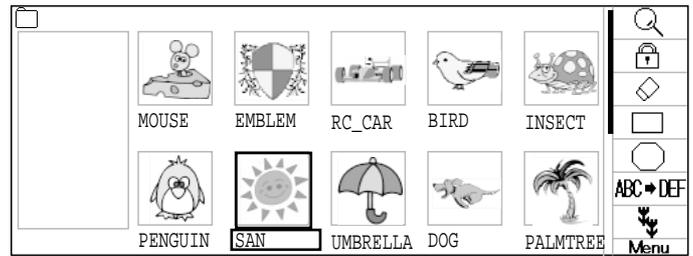

- Select desired pattern with .

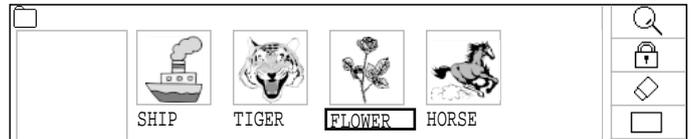

- Press **(MENU)** and select **ABC DEF** with .

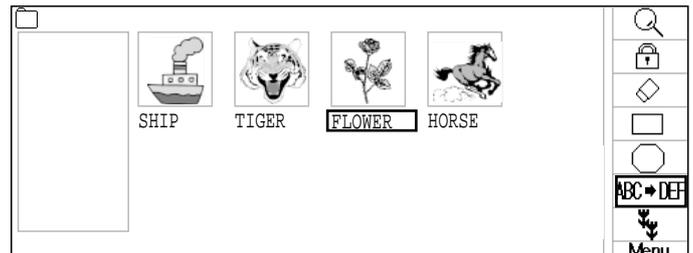

- Press the **(SET)** button.

- Choose "◀" or "▶" with  and press **(SET)**. Select each letter in the pattern name.

- ◀ To select digits on the left.
- ▶ To select digits on the right.

Pick a new name with  and press




(SET).

The maximum number of characters in a design name is eight letters or numbers.

- Select "END" with  and press **(SET)**. The pattern name will be changed.

Press **(ESC)** to return to Menu mode.


Press **(ESC)** once again to return to Drive mode.

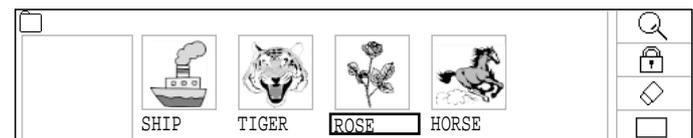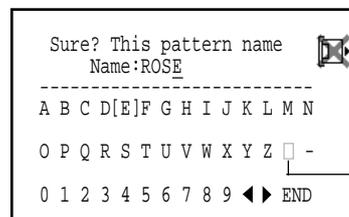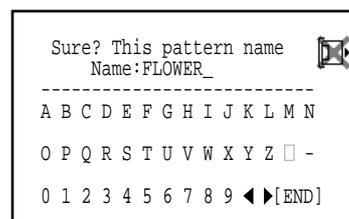


● Copying pattern data

Copying of the pattern data stored in the machine memory is available.


1. When the machine is stopped, press **(MENU)** and Select "PATTERN" with .

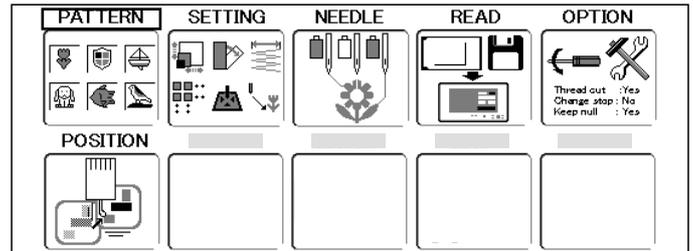


2. Press the **(SET)** button.

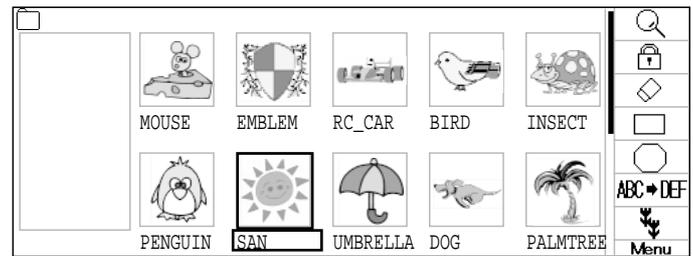


3. Select desired pattern with .

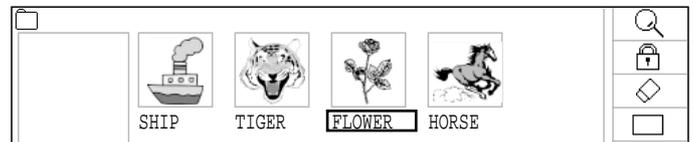

4. Press **(MENU)** and select  with .

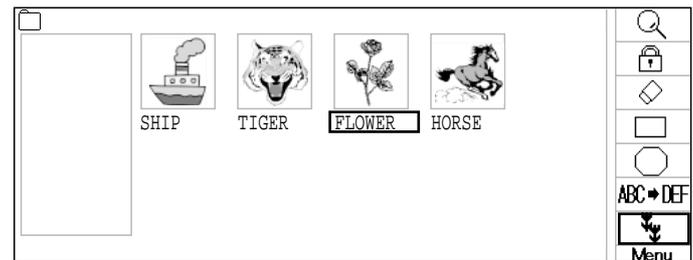

5. Press the **(SET)** button.
Copy of the selected pattern will be made.

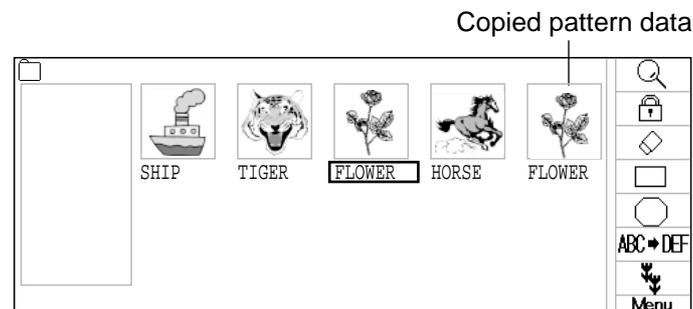


Press **(ESC)** to return to Menu mode.
Press **(ESC)** once again to return to Drive mode.


● Moving pattern data

Export pattern data into the other folder.

1. When the machine is stopped, press **(MENU)** and Select "PATTERN" with .

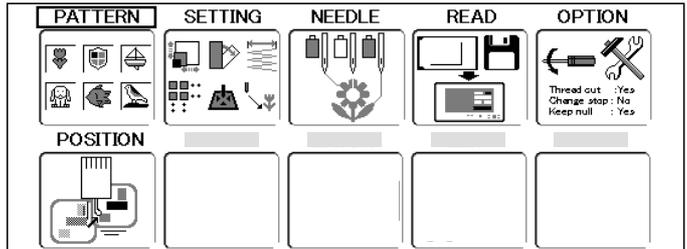


2. Press the **(SET)**.

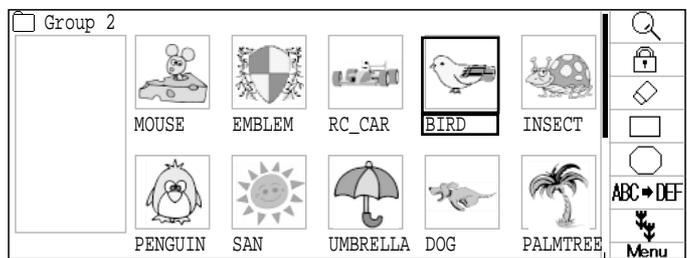


3. Press **(MENU)** and select   from right submenu with .


Scrolling display

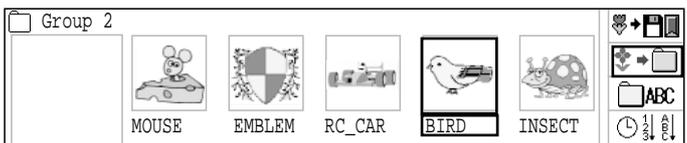


4. Press the **(SET)**.

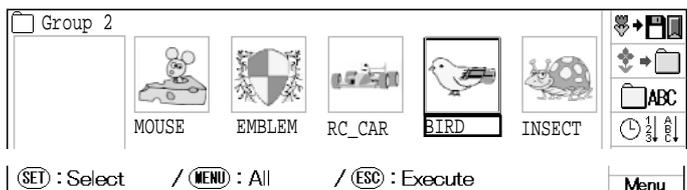


5. Select desired pattern data with .

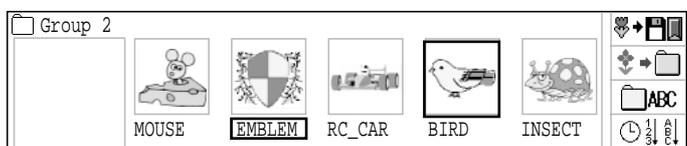

6. Press the **(SET)**.
 "*" will appear left of the pattern name.
 Mark will be cleared by press it again.
 To move the other data, repeat steps 6 and 7.

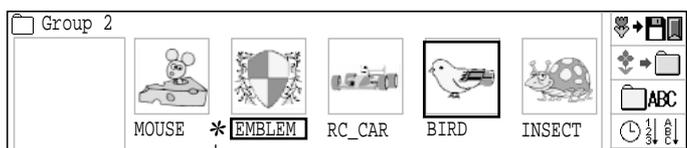


Mark

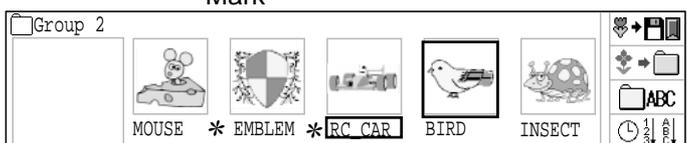


Example : when you selected plural designs

7. Press the **SET**.

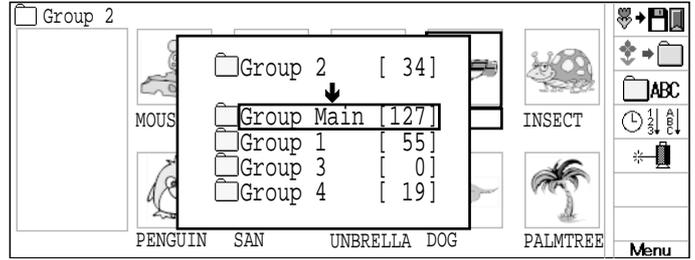


8. Select the importing folder with .

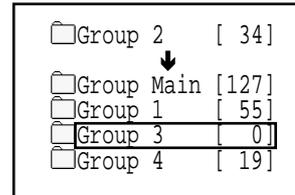

9. Press the **SET**.

The pattern data will be transferred.

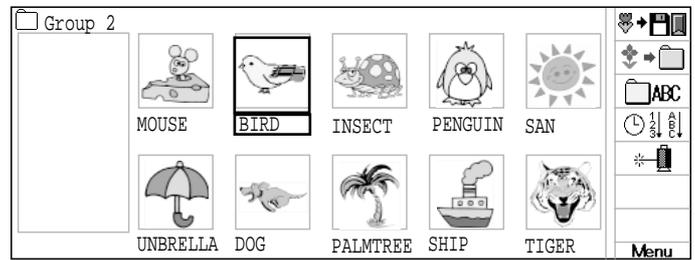


Press **ESC** to return to Menu mode.
 Press **ESC** once again to return to Drive mode.


●Renaming folders

Rename folder in memory.


- When the machine is stopped, press **(MENU)** and Select "PATTERN" with .

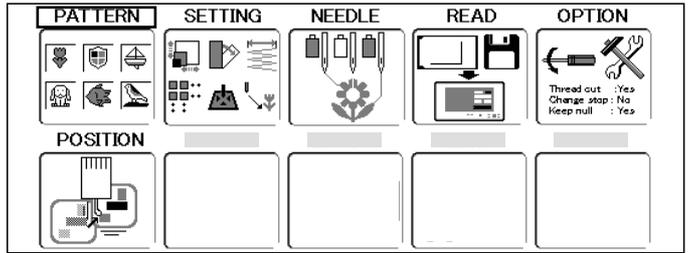


- Press the **(SET)**.

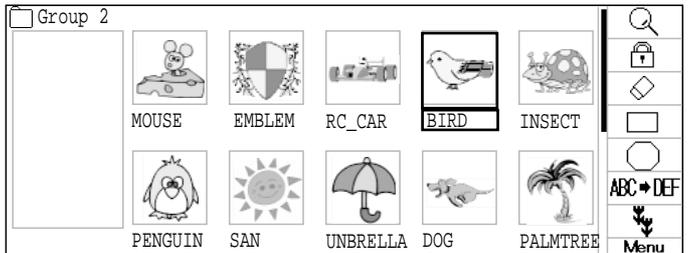

- Press **(MENU)** and select  ABC from right submenu with .

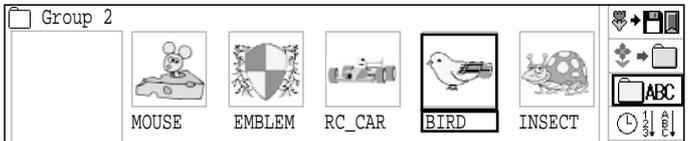

- Press the **(SET)**.

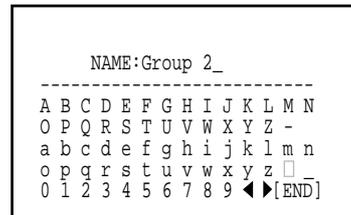

- Choose "◀" or "▶" with  and press **(SET)**. Select each letter in the pattern name.



- ◀ To select digits on the left.
- ▶ To select digits on the right.

Pick a new name with  and press

(SET).

The maximum number of characters in a folder name is 12 letters or numbers.

- Select "END" with  and press **(SET)**. The folder name will be changed.

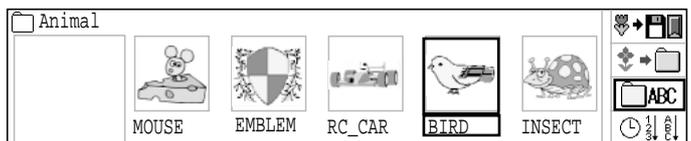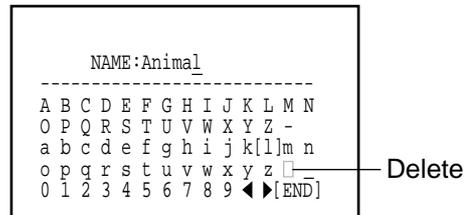


Press **(ESC)** to return to Menu mode.

Press **(ESC)** once again to return to Drive mode.

● Sort

Ordinate the pattern data in the displayed folder.


- When the machine is stopped, press **(MENU)** and Select "PATTERN" with .

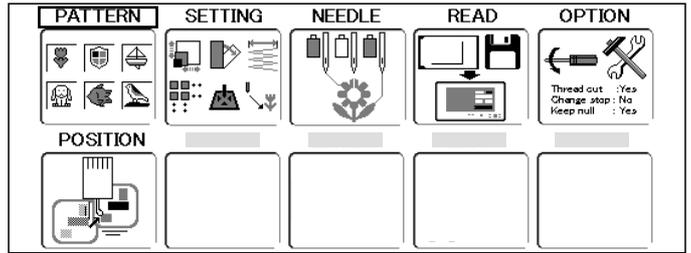


- Press the **(SET)**.

The selected sorting method is showing upper left of the display.


-  : To sort in order of loading
-  : To sort in order of pattern number
-  : To sort in order of name of pattern

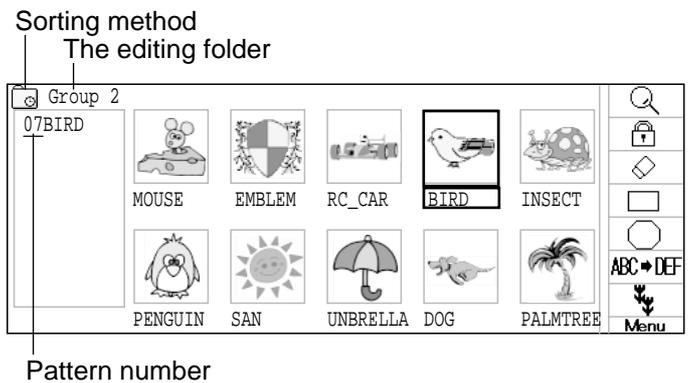

- Press **(MENU)** and select    from right submenu with .

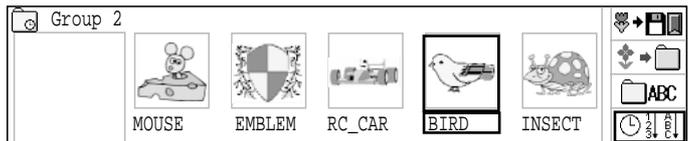

- Press the **(SET)**.

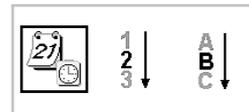

- Select sorting method with .




-  : To sort in order of loading
-  : To sort in order of pattern number
-  : To sort in order of name of pattern

- Press the **(SET)**.

Sort will be carry out.


Press **(ESC)** to return to Menu mode.
Press **(ESC)** once again to return to Drive mode.

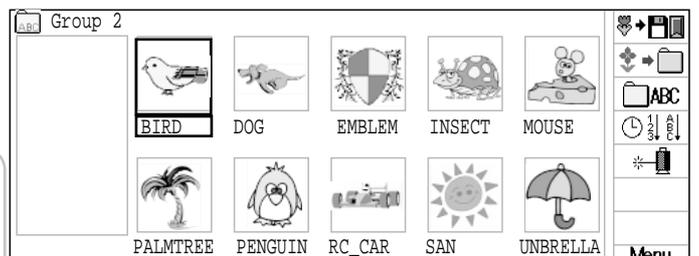


● Thread break report

This function will show recorded thread break of pattern data. The machine detects break thread during operation and records by pattern the number of stitches at the stopped position. If thread break is happening at same number of stitches, please check construction of stitch design.


1. When the machine is stopped, press **(MENU)** and Select "PATTERN" with .

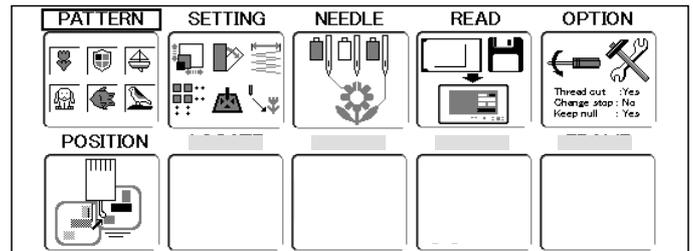


2. Press the **(SET)**.

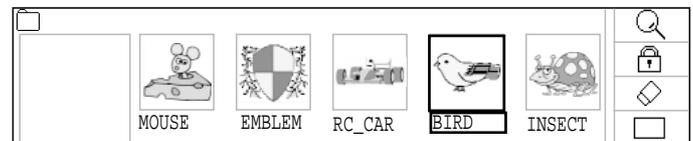

3. Select desired pattern with .

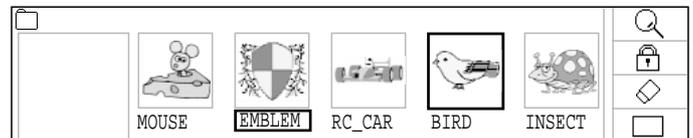

4. Press **(MENU)** and select  from right submenu with .

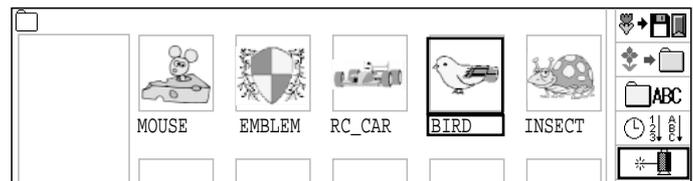

5. Press the **(SET)**.
Thread break report will appear in the window.
The maximum memory is up to No. 30.
If the record exceeds No. 30, the new records will be added to the latest 29 records.

Pattern number
Puttern name
Number of stitches

No.	Puttern name	No.	No.
-10:	EMBLEM	[14812]
01:	2165	11:	0
02:	10029	12:	0
03:	5314	13:	0
04:	0	14:	0
05:	0	15:	0
06:	0	16:	0
07:	0	17:	0
08:	0	18:	0
09:	0	19:	0
10:	0	20:	0
		21:	0
		22:	0
		23:	0
		24:	0
		25:	0
		26:	0
		27:	0
		28:	0
		29:	0
		30:	0

OK
Clear


6. In order to exit the mode, proceed to the step 7.
If you want to delete the record, select "Clear" with  and press **(SET)**.

Number of stitches at the stopped position by thread break

7. Press the **(SET)**.

Exit the mode

Press **(ESC)** to return to Menu mode.
Press **(ESC)** once again to return to Drive mode.

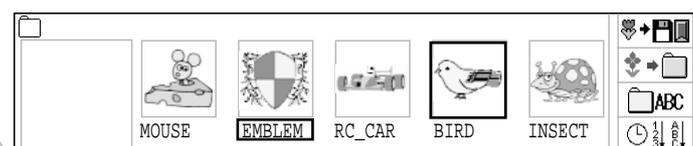

Various settings such as the scaling, repeat sewing, offset and frame out can be applied to a pattern.

Adjust

This menu contains settings such as scaling, width adjustment, angle and convert design.

Repeat sewing

The machine repeats the pattern a number of times in the X and Y directions as set by the user.

Offset

Sets the start point of the frame in the selected pattern.

Frame out

Inserts a frame out command in the selected pattern.

■ Various settings are executed in assortment.

● **Adjust**

Scaling

This adjusts the scale of the selected pattern.

Width adjustment

This adjusts the width of the selected pattern.

Angle

This adjusts the angle of the selected pattern.

Convert design

This sets the rotation of the selected pattern in increments of 90 degrees, normal or reversed.

Scaling

The pattern's scale can be increased or decreased in 1% increments.

Setting example



Normal


Default : X,Y 100%




X 100 %, Y 150 %

● : Start point of pattern


1. When the machine is stopped, press **MENU** and Select "SETTING" with

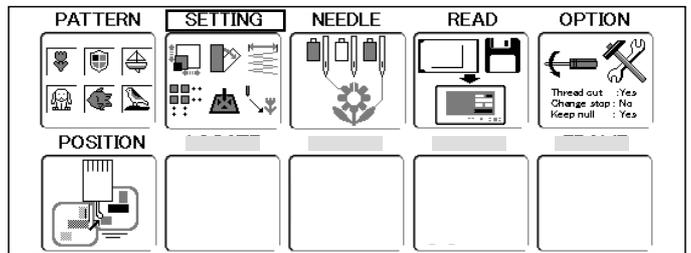


2. Press the **SET**.
The left side shows the number, name and details of the current pattern.

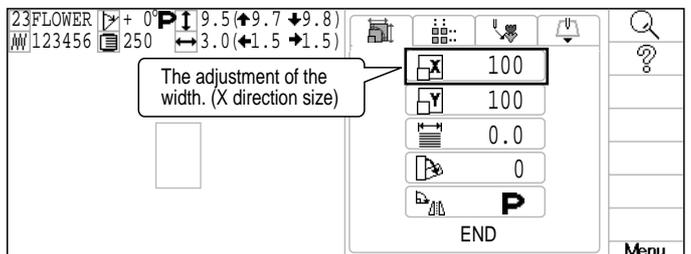


3. Press up/down of to select or and time and press **SET**.

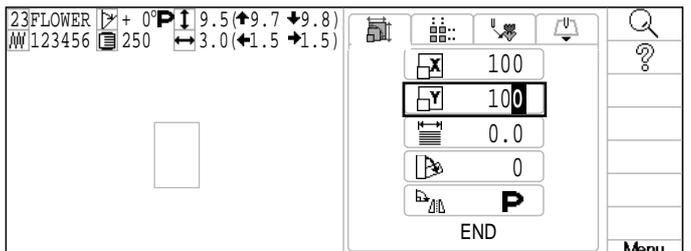

4. Press right /left of to select the digit and press up/down of to select the number.

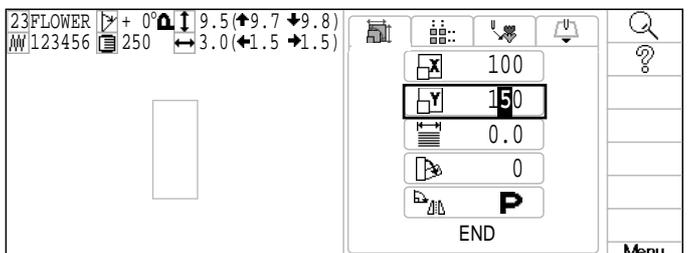

5. Press the **SET**.
The setting is fixed.

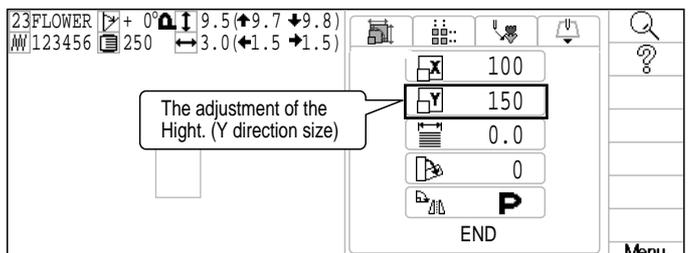

For return to main menu press down of to select END and press **SET** or Press **ESC**. Press **ESC** once again to return to Drive mode.

Width adjustment

This setting adjusts stitch width (L) in a pattern in a range of -1.0 ~ +1.0mm in increments of 0.1mm.

■ In case "Width" (Width adjustment) is set and embroidery is made, there is a case that error occurs at end point. In such a case, please return setting figure of stitch width to "0.0".

1. When the machine is stopped, press **(MENU)** and Select "SETTING" with .

2. Press the **(SET)**.
The left side shows the number, name and details of the current pattern.







3. Press up/down of  to select  and press **(SET)**.

4. Press right /left of  to select the digit and press up/down of  to select the number.

5. Press the **(SET)**.
The setting is fixed.

For return to main menu press down of  to select END and press **(SET)** or Press **(ESC)**. Press **(ESC)** once again to return to Drive mode.

Setting example

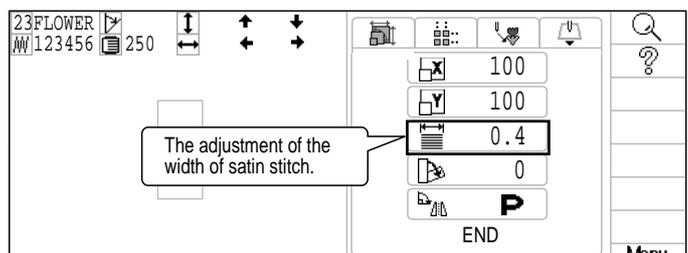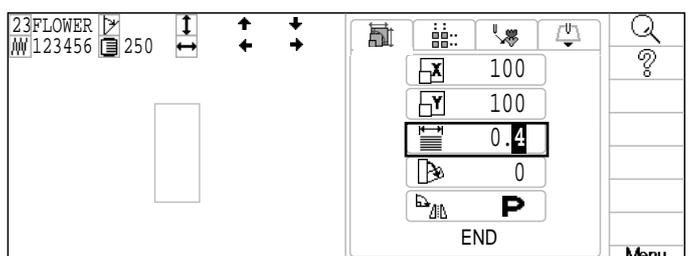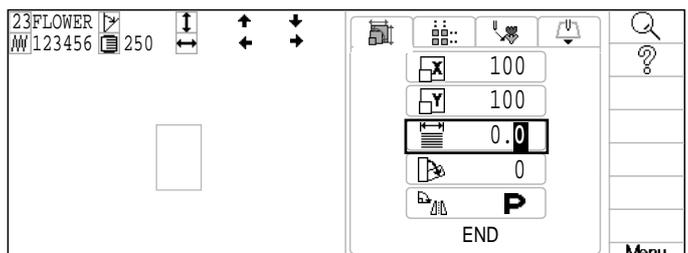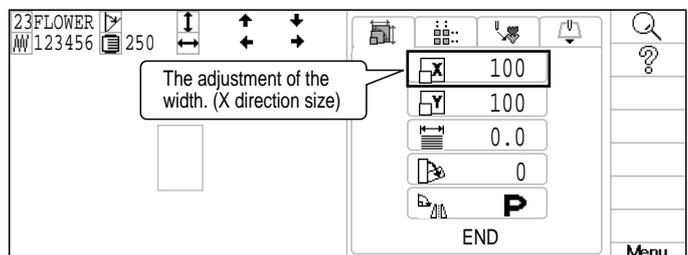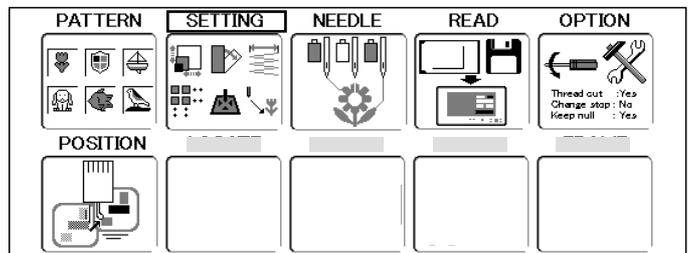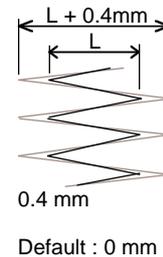

Angle

With the start point of the pattern as a pivot, the machine rotates the angle clockwise.

Setting example



Normal


Default : 0°




30°

● : Start point of pattern


- When the machine is stopped, press **(MENU)** and Select "SETTING" with

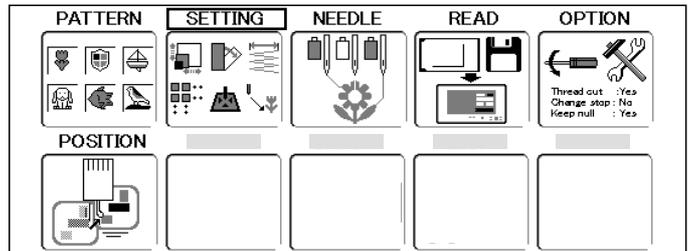


- Press the **(SET)**.
The left side shows the number, name and details of the current pattern.

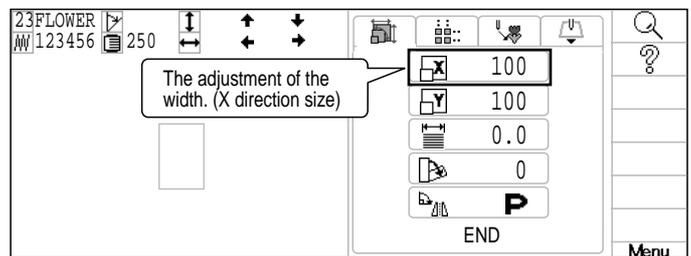


- Press up/down of to select and press **(SET)**.

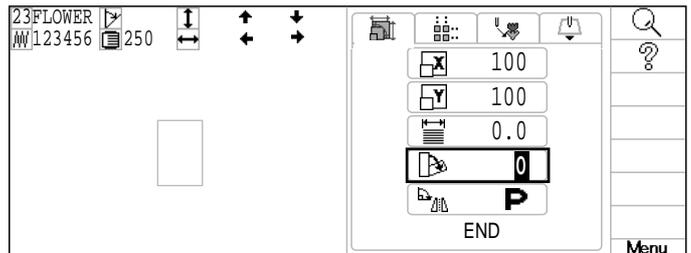

- Press right /left of to select the digit and press up/down of to select the number.

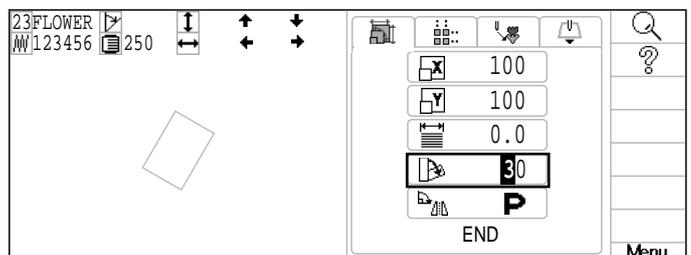

- Press the **(SET)**.
The setting is fixed.

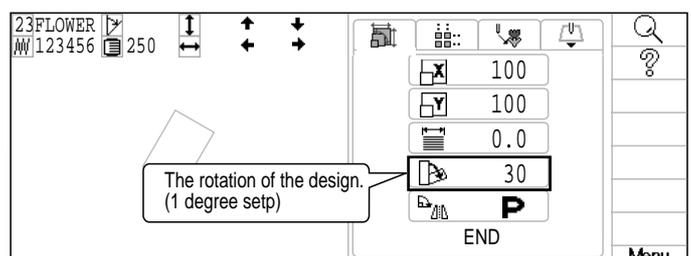


For return to main menu press down of to select END and press **(SET)** or Press **(ESC)**. Press **(ESC)** once again to return to Drive mode.

● Repeat sewing


The machine embroiders a user-specified number of copies in the X and Y directions.

Setting example

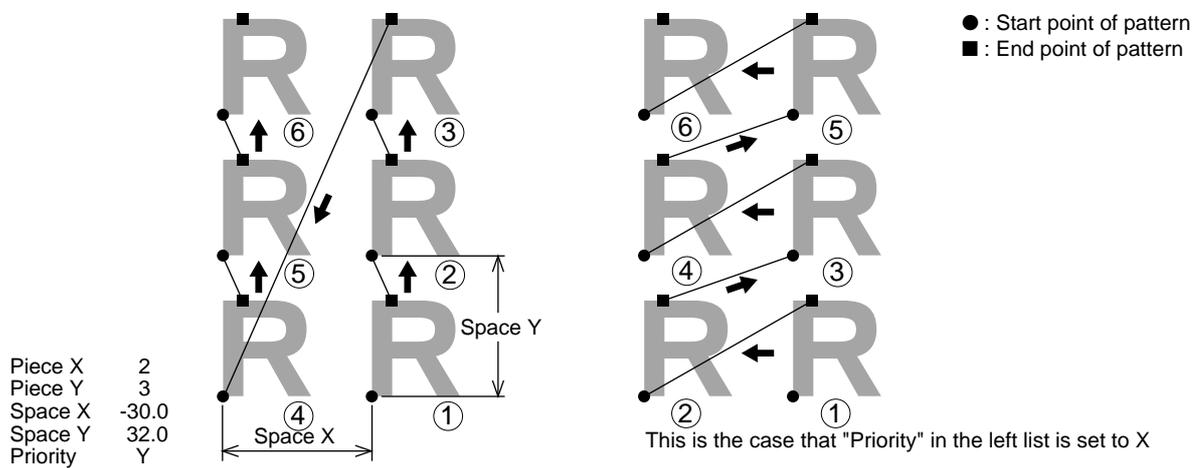


SETTING ITEM	SETTING RANGE	DEFAULT	
Piece X	1 ~ 30	1	This sets number of pieces side wise and length wise when you perform repeat.
Piece Y	1 ~ 30	1	The number of pieces to be embroidered is product obtained by multiplying numbers in X and Y.
Space X	-999.9 ~ 999.9 mm	0	This sets side wise distance between start point of each pattern when you perform repeat. When plus number is input, the machine makes repeat toward right. In case of minus number, toward left.
Space Y	-999.9 ~ 999.9 mm	0	This sets length wise distance between start point of each pattern when you perform repeat. When plus number is input, the machine makes repeat upward. In case of minus number, downward.
Priority	X (Side)• Y (Length)	X	When you set more than 2 pieces for repeat length wise and side wise, this selects direction to embroider 2nd piece.


- When the machine is stopped, press **(MENU)** and Select "SETTING" with .

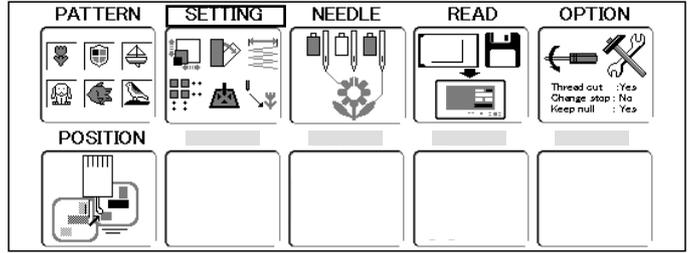


- Press **(SET)** and press right /left of  to select .
The left side shows the number, name and details of the current pattern.

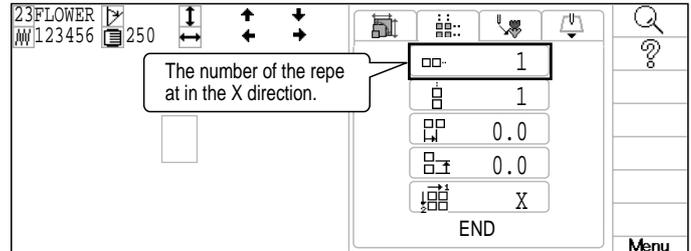


- Press up/down of  to select the item and press **(SET)**.

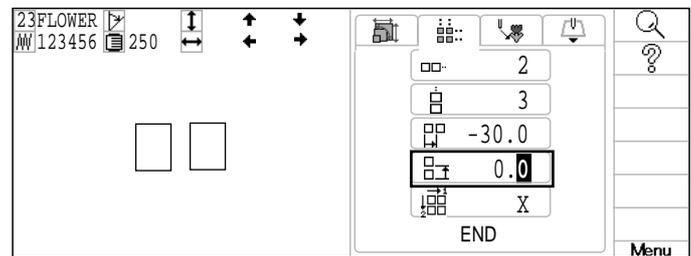

- Press right /left of  to select the digit and press up/down of  to select the number.

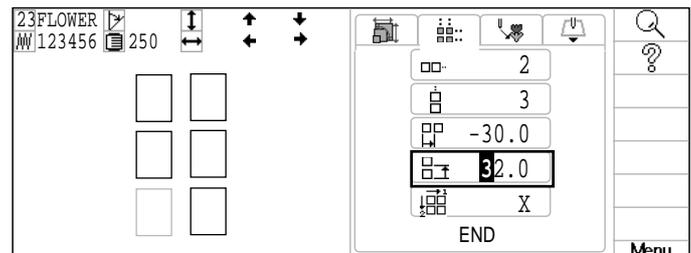

- Press the **(SET)** button.
The setting is fixed.

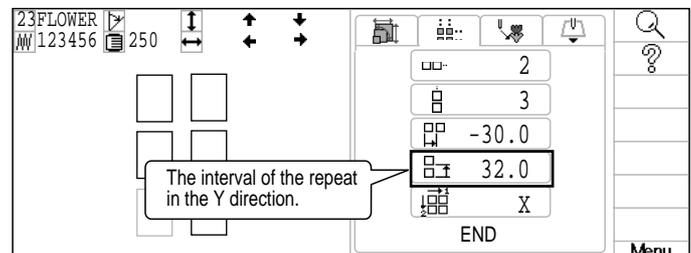


- Set necessary item by performing procedure no. 3 to no.5.
Set all the necessary items.


For return to main menu press down of  to select END and press **(SET)** or Press **(ESC)**. Press **(ESC)** once again to return to Drive mode.

● Auto origin


When a pattern has different start and end points, the frame returns to the original point

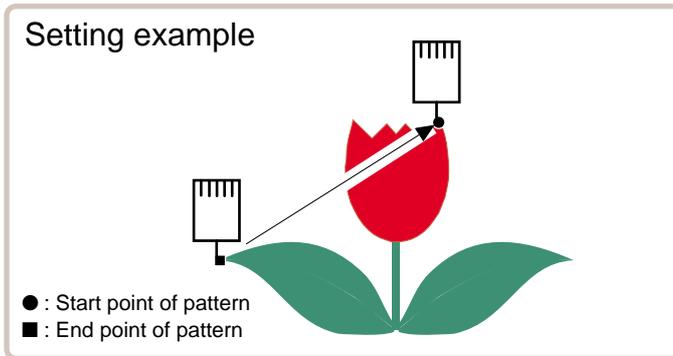


1. When the machine is stopped, press **(MENU)** and Select "SETTING" with

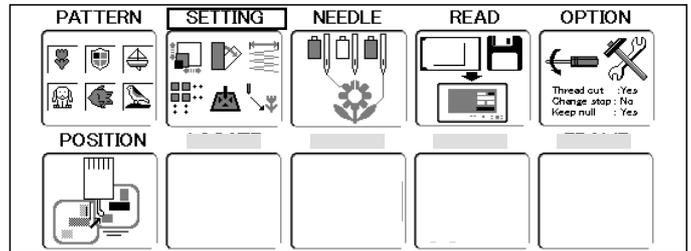


2. Press **(SET)** and press right /left of to select .
The left side shows the number, name and details of the current pattern..

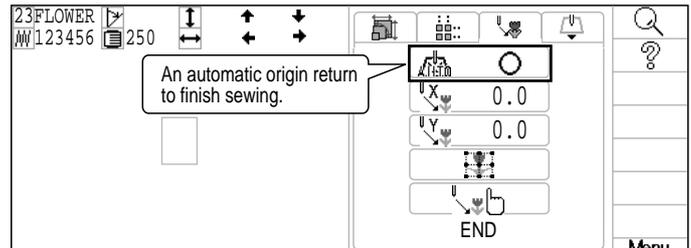


3. Press up/down of to select (Auto origin) and press **(SET)**.

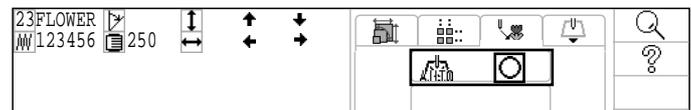

4. Press up/down of to select (ON) or (OFF).

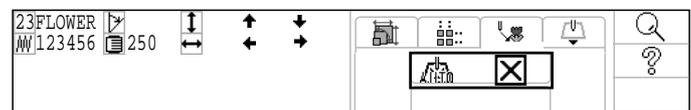

5. Press the **(SET)** button.
The setting is fixed.

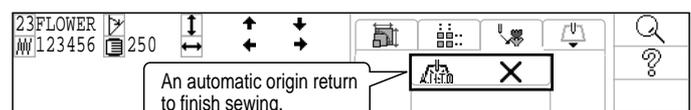


For return to main menu press down of to select END and press **(SET)** or Press **(ESC)**. Press **(ESC)** once again to return to Drive mode.

● Offset

Setting the offset point designates a place for the frame to rest before moving to the start point of the actual embroidery.

When used together with the auto origin feature, the machine will return to the offset when it is finished embroidering as well.

This allows you to send the frame to a place where it will be easier to handle, when you will need to change hoops for example.

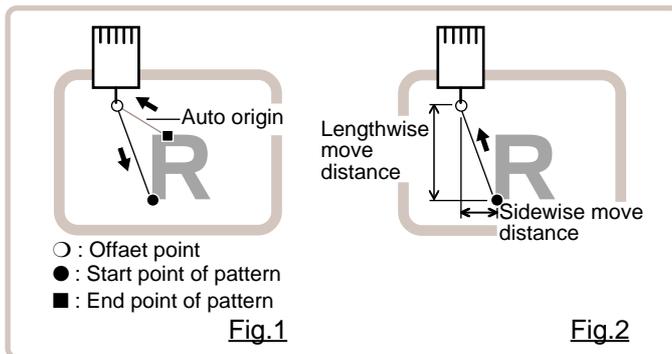

Direct input

You can move the offset point manually and save the position with "Teaching input".

Preset

There are 9 preset points that can be used for offsets around and in the center of the pattern.


Teaching input

You can set the offset point manually.


- When you press the **ORG** (Original point return) or use *auto origin with an offset, the frame will return to the offset point. **P** 12-7
- Make sure *auto origin is activated when you are using the offset function repeatedly on the same pattern. **P** 12-7

Direct input


You can move the offset manually and save the position with "teaching input".

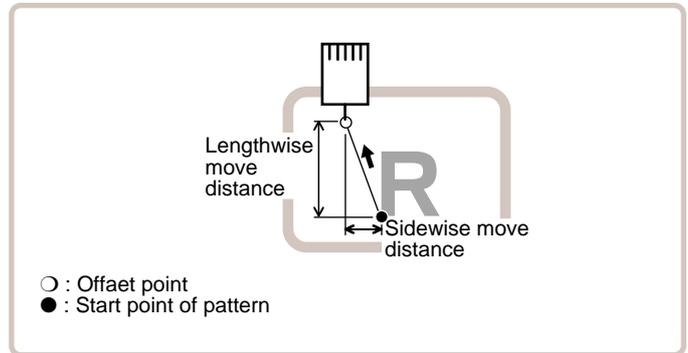


1. When the machine is stopped, press **(MENU)** and Select "SETTING" with

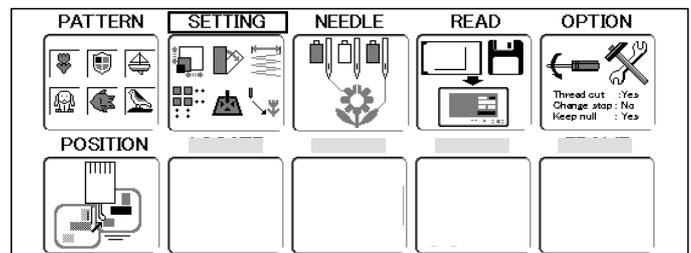


2. Press **(SET)** and press right /left of to select .
The left side shows the number, name and details of the current pattern.

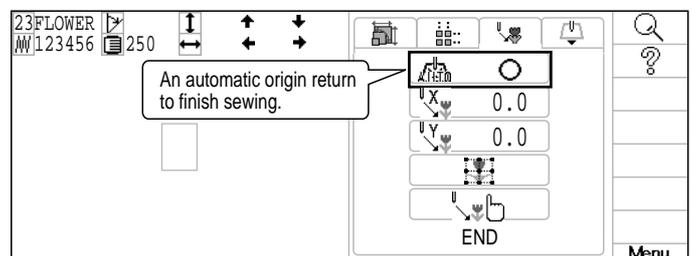

3. Press up/down of to select (X axis distance) or (Y axis distance) and press **(SET)**.

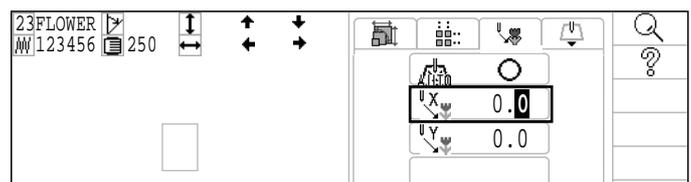


4. Press right /left of to select the digit and press up/down of to select the number.

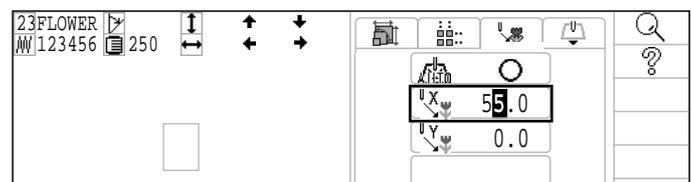


5. Press the **(SET)** button.
The setting is fixed.

Press **(ESC)** until the display returns to drive mode.

will appear at the lower right in green.

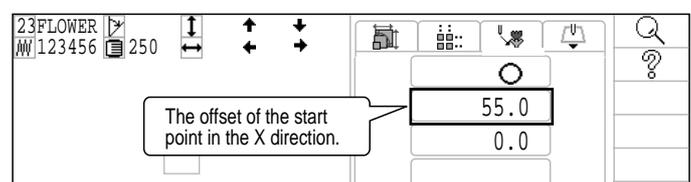

Offset point

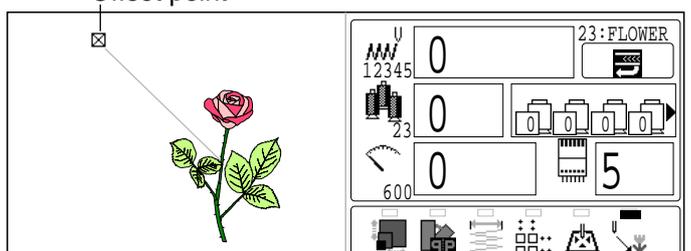


For return to main menu press down of to select END and press **(SET)** or Press **(ESC)**. Press **(ESC)** once again to return to Drive mode.


Preset

There are 9 preset points that can be used for offsets around the or in the center of the pattern.


1. When the machine is stopped, press **(MENU)** and Select "SETTING" with .

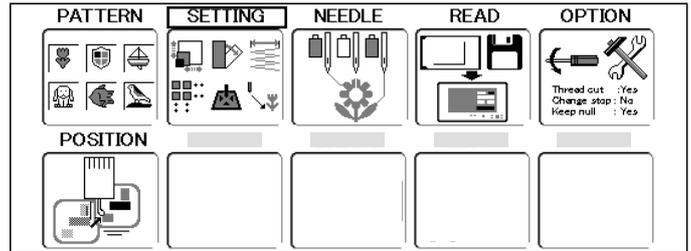


2. Press **(SET)** and press right /left of  to select . The left side shows the number, name and details of the current pattern.

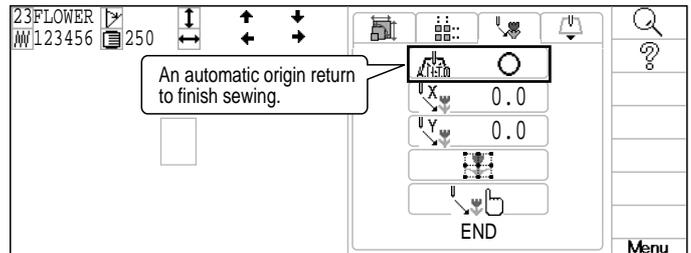

3. Press up/down of  to select  and press **(SET)**.

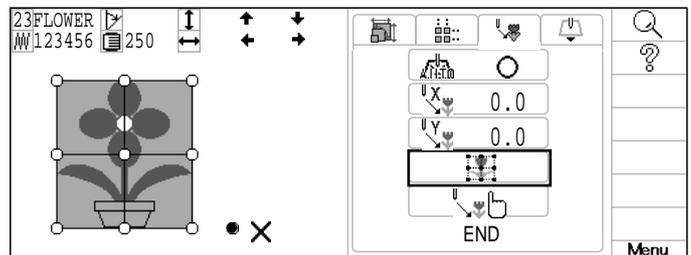


4. Select the offset point with .

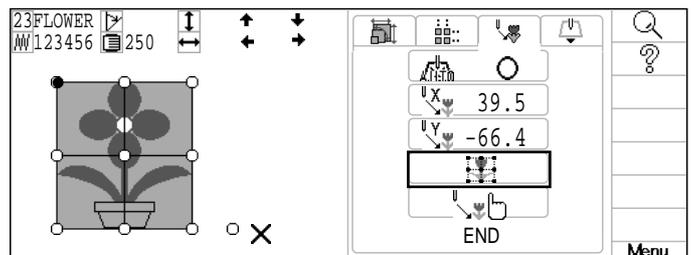

5. Press the **(SET)** button. The setting is fixed.


Press **(ESC)** until the display returns to drive mode.

 will appear at the lower right in green.

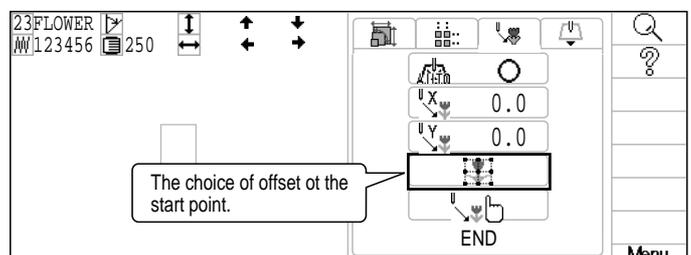

Offset point

For return to main menu press down of  to select END and press **(SET)** or Press **(ESC)**. Press **(ESC)** once again to return to Drive mode.

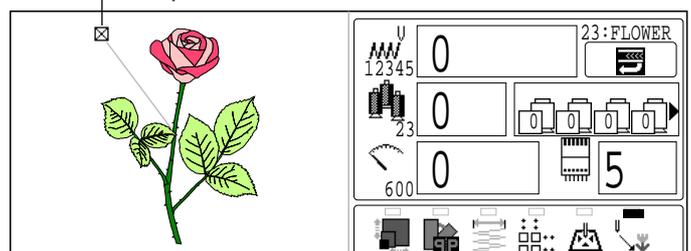

Teaching input

You can set the offset position manually.

1. When the machine is stopped, press **(MENU)** and Select "SETTING" with .

2. Press **(SET)** and press right /left of  to select .








The left side shows the number, name and details of the current pattern.

3. Press up/down of  to select  and press **(SET)**.


4. Use the  to move the frame to the offset point.

5. Press the **(SET)** button.
The setting is fixed.

6. Use the  to move the frame to the offset point.

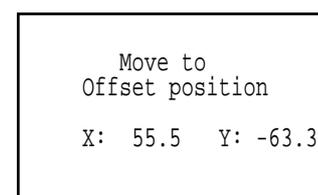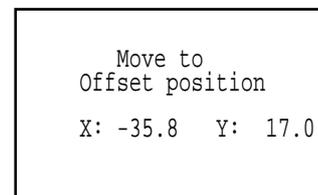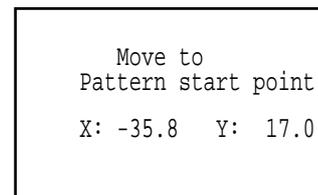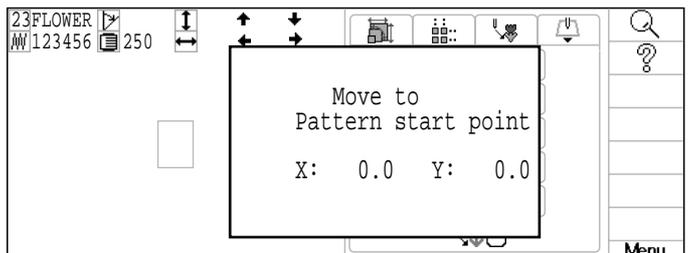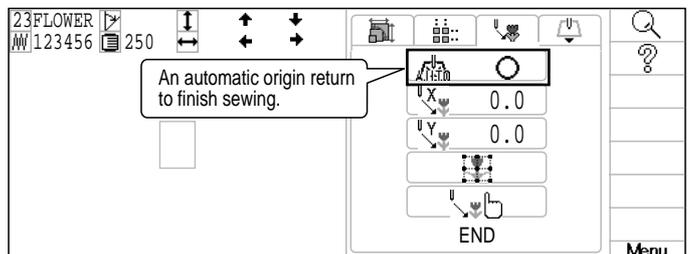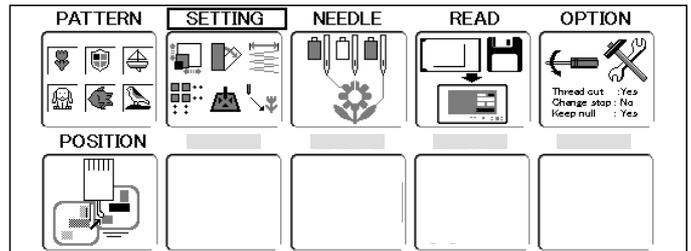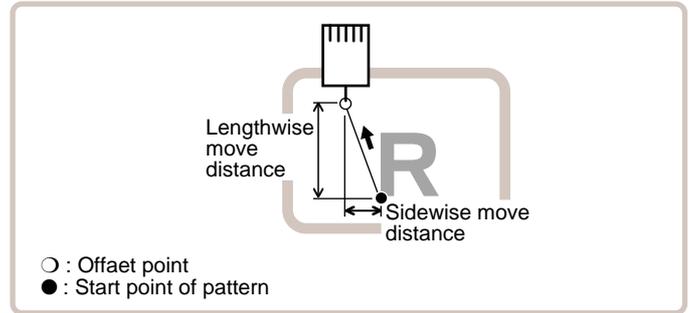


7. Press the **SET** button.
The setting is fixed.

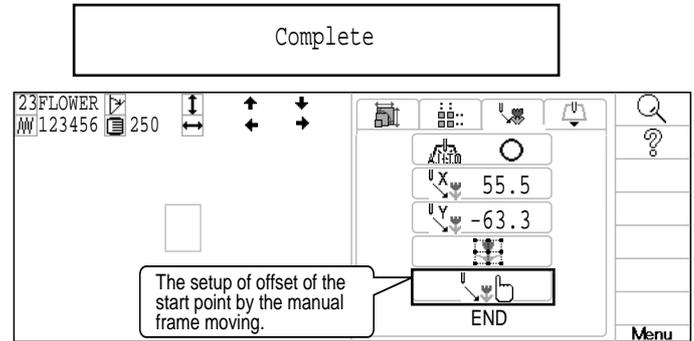

Press **ESC** until the display returns to drive mode.

 will appear at the lower right in green.

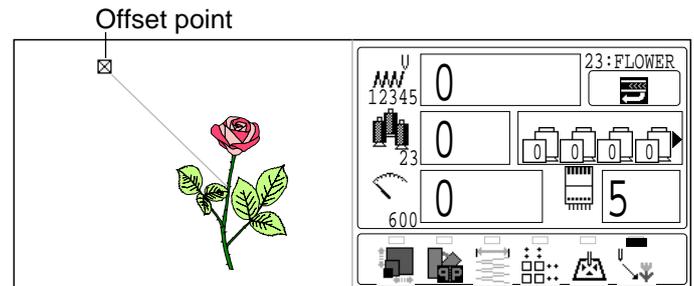


For return to main menu press down of  to select END and press **SET** or Press **ESC**. Press **ESC** once again to return to Drive mode.

● Frame out

A frame out command can be added to a design. By setting frameout to a *Color change number in a design, you can move the frame to a desired position automatically and stop it after the machine finishes sewing of that color change number.

When you resume operation, the frame has an automatic return to previous position and you can continue sewing. (Fig.1)

This function will be convenient for trimming threads while embroidering or for sewing applique etc.

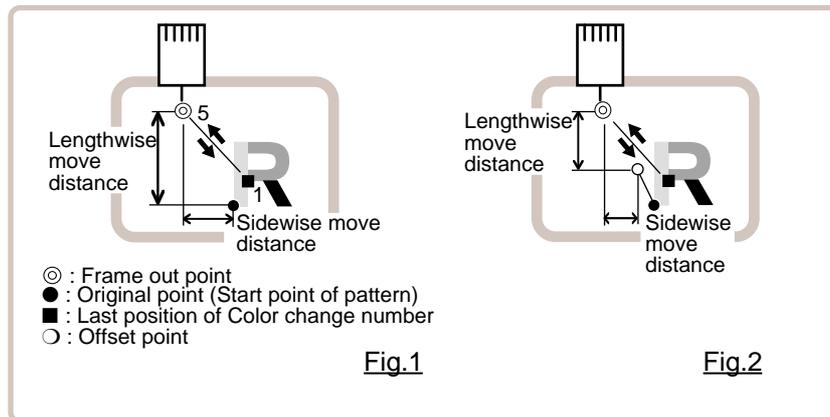

Selection of color change number

Set Color change number to execute frameout.

- When you select "Off" (with no display of option) of frame out for Color change number to which *color change stop is set, color change stop is released.
- When you turn frameout "On" without setting the move distance of frameout, this results in the same action as color a change stop.

Teaching input

Set position of frame out with  and the distance of movement will be the frame out distance.

Usually move distance to frame out point is input, with original point as pivot.(Fig.1)

In case offset is set, the move distance is input with offset point as pivot.(Fig.2)

- You can set number of stitches or Color change number to make frame out in plural, but frame out point is limited to one place. The point set finally becomes good for making frame out. The point set finally becomes good for making frame out.


Direct input

You can set the position of frame out directly by inputting by the number keys. You can also change the position of a frame out set by "Teaching input".


Normally, the distance to the frameout point is input with the original point as a pivot. (Fig. 1) In case where an offset is set, the move distance to frameout position is input with offset point as pivot. (Fig.2)

Execution of color change number


Set Color change number to execute frameout.

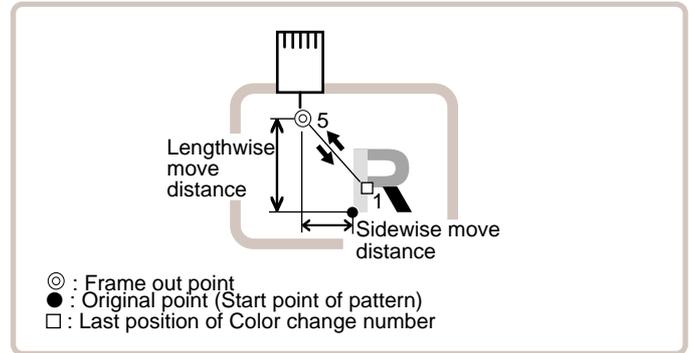


- When the machine is stopped, press **(MENU)** and Select "SETTING" with

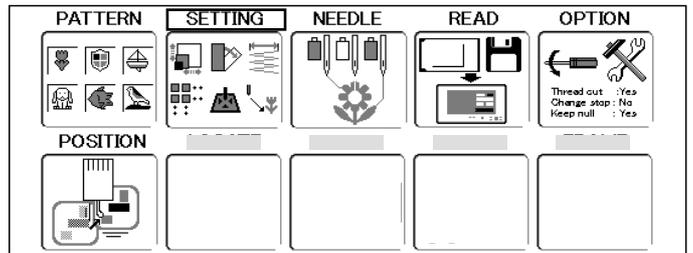

- Press **(SET)** and press right/left of to select .
The left side shows the number, name and details of the current pattern.

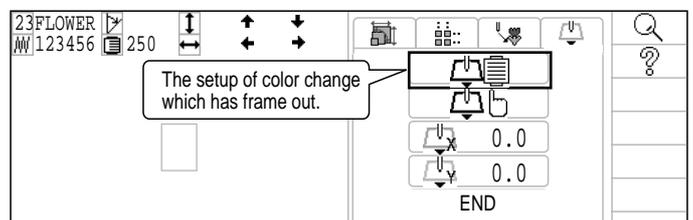

- Press up/down of to select and press **(SET)**.
The current color number is shown in the pattern data display portion.

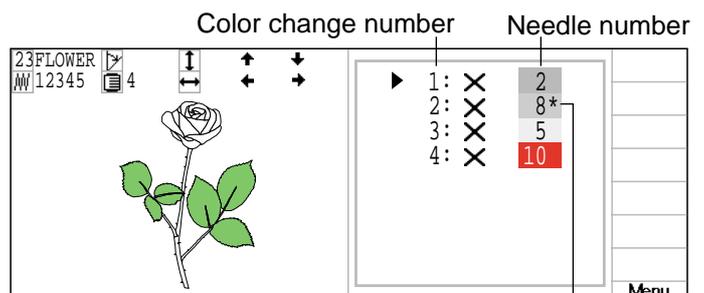


- Press up/down of to select the Color change number and press **(SET)**.

The setting is fixed.

○ (on) will be shown to the right of the color change number.


◆ (on) will be shown to the right of the needle number.

If you press the **(SET)** you can alternate between ○ (on) and ✕ (off).

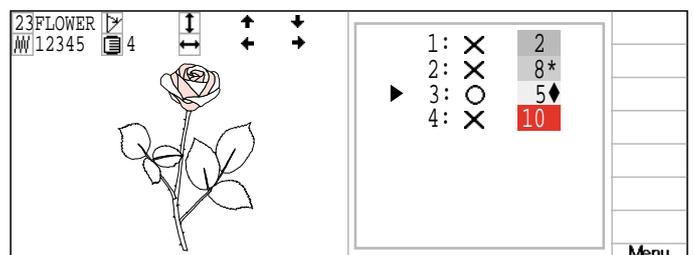


- Press **(ESC)**.

For return to main menu press down of to select END and press **(SET)** or Press **(ESC)**. Press **(ESC)** once again to return to Drive mode.

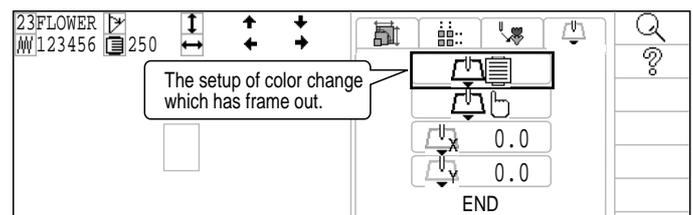


Teaching input


Move the frame with  and the position will be saved as the frame out.

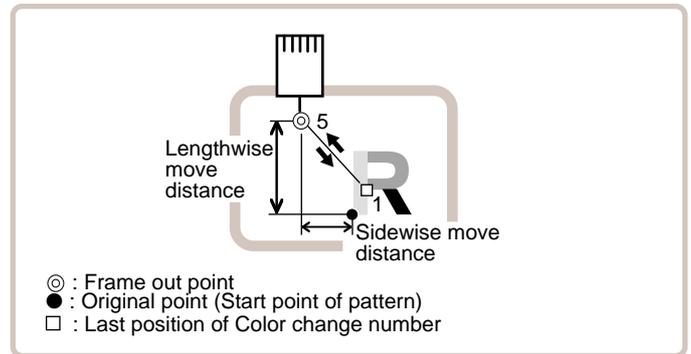


1. When the machine is stopped, press **MENU** and Select "SETTING" with .

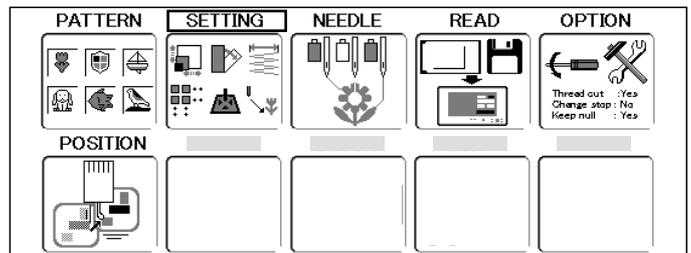


2. Press **SET** and press right /left of  to select .
The left side shows the number, name and details of the current pattern.

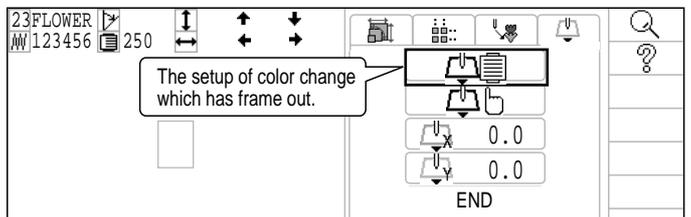


3. Press up/down of  to select  and press **SET**.

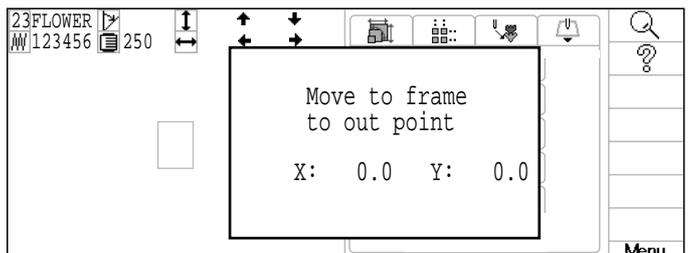

4. Use the  to move the frame to the frame out position.

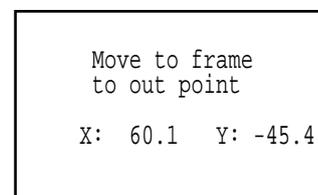


5. Press the **SET**.
The setting is fixed.

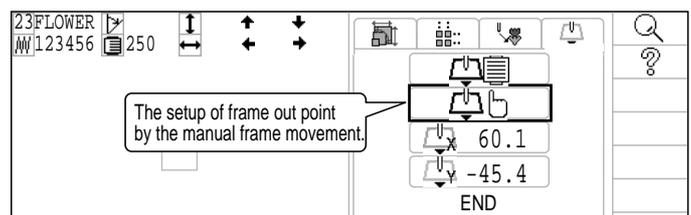


For return to main menu press down of  to select END and press **SET** or Press **ESC**. Press **ESC** once again to return to Drive mode.

Direct input


You can change the position of your frame out by using this function. You can change the moving distance of the frame out and change the frame out position, which is saved by "Teaching input".

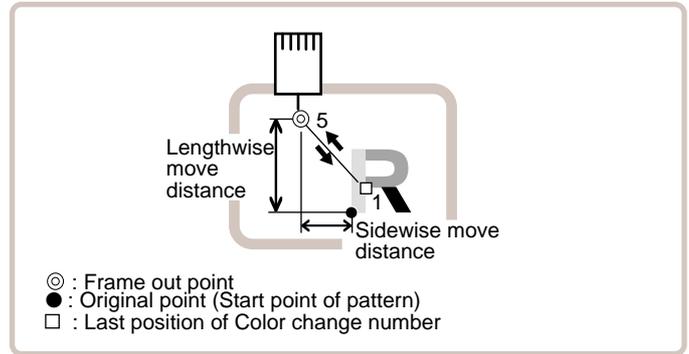


1. When the machine is stopped, press **(MENU)** and Select "SETTING" with

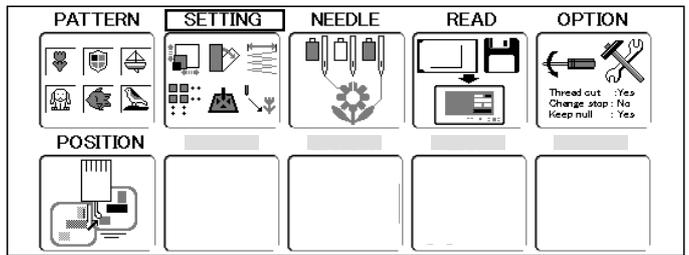


2. Press **(SET)** and press right /left of to select .
The left side shows the number, name and details of the current pattern.

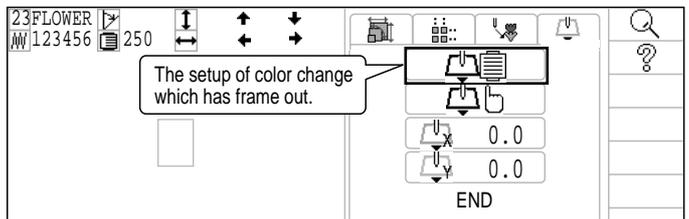


3. Press up/down of to select (X axis distance) or (Y axis distance) and press **(SET)**.

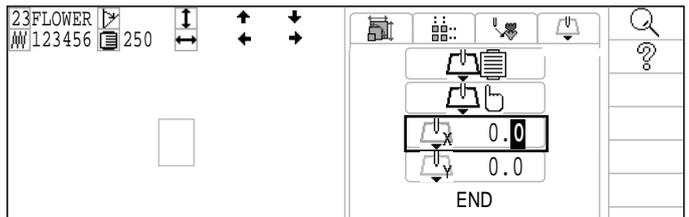

4. Press up/down of to select the number and press right /left of to select the digit.

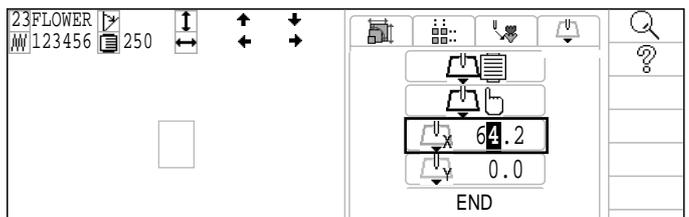

5. Press the **(SET)** button.
The setting is fixed.

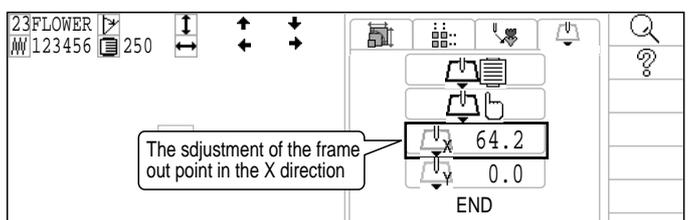

For return to main menu press down of to select END and press **(SET)** or Press **(ESC)**. Press **(ESC)** once again to return to Drive mode.

Needle number settings 5-E

A needle number can be assigned to a *color change number.

When the needle number is assigned, the machine will embroider and automatically switch to the programmed for each color change number.

Color change stop function 5-F

A *color change stop can be assigned to a color change number.

When this is done, the machine embroiders the stitches for that color change number and then stops, displaying the following message:

>>Change Stop

Auto setting

Changes all designated needle numbers at once.

Color change data registration, Color change data read


You can use the color change data from a saved pattern, register it, and then export the registered data to the selected pattern for use.

● Auto setting


This changes all designated needle numbers at once.

For example, if you want to change all needles numbered "10" to "6", just select one of the color change numbers in which "10" is set, then all color change numbers can be changed into "6".

1. When the machine is stopped, press **(MENU)** and Select "NEEDLE" with .

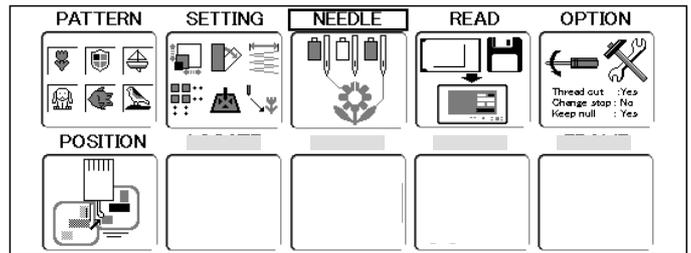


2. Press the **(SET)** button.
The left side shows the number, name and details of the current pattern.

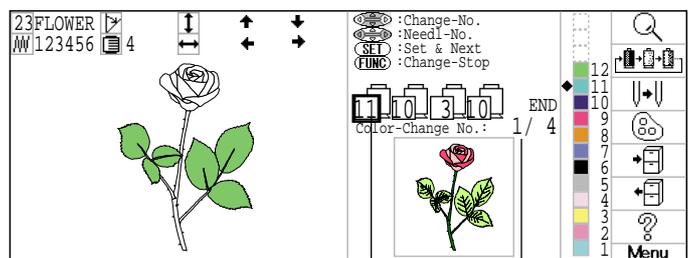


Needle number

Current color change number

3. Press **(MENU)** and select  with .

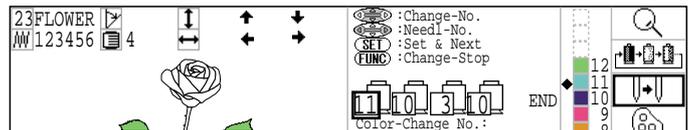


4. Press the **(SET)** button.

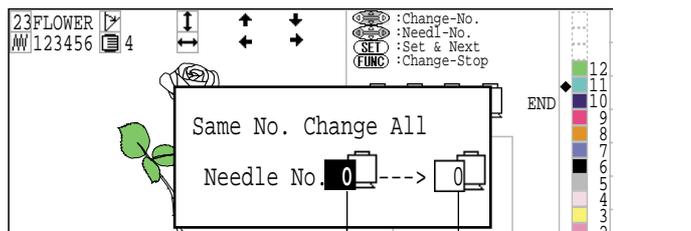


Needle number to be changed

Needle number to be changed after

5. Select the current needle number you would like to change with  and press **(SET)**.

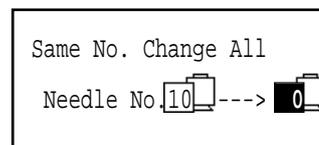


6. Select the needle number to be changed with .

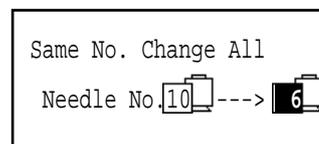

The needle number has been changed from 10 to 6.

7. Press the **(SET)** button.
The setting is fixed.

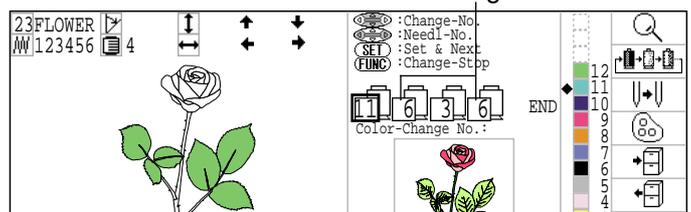


For return to main menu press right of  to select END and press **(SET)** or Press **(ESC)**. Press **(ESC)** once again to return to Drive mode.


● Thread color

This sets the background color or color assigned to each needle bar to be shown in the display. This is useful to help confirm the correct color setup of a pattern. (128 colors are available)


■ You will find difficulty to see the pattern if you set same color on both pattern and background.

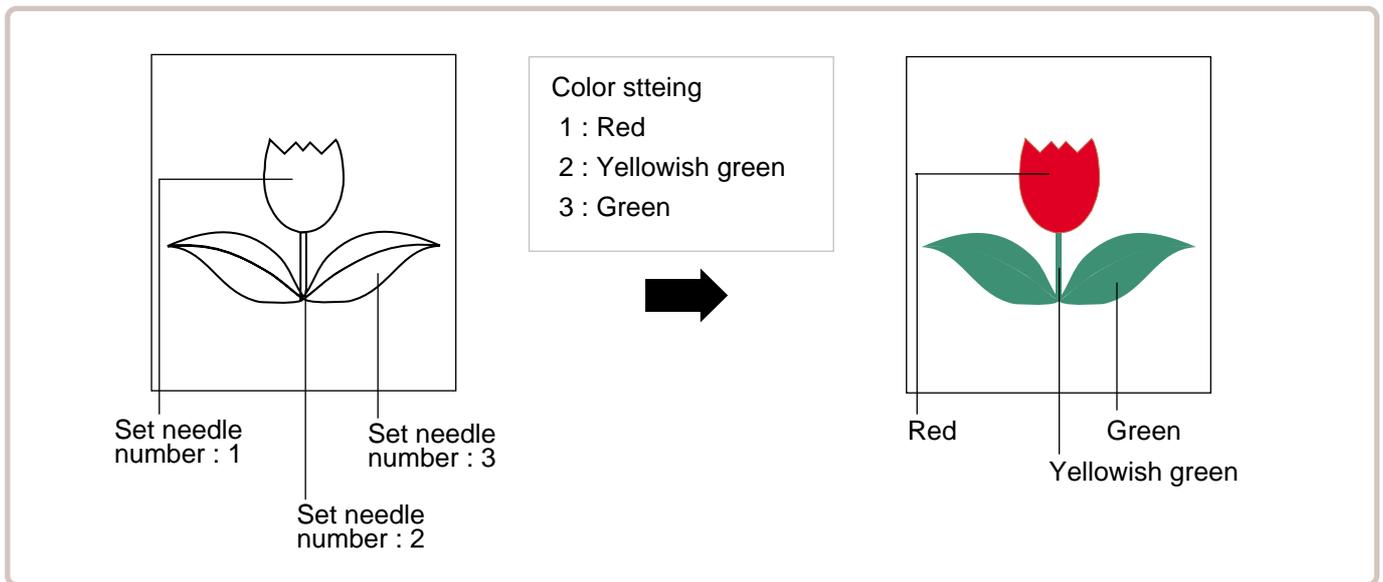


1. When the machine is stopped, press **(MENU)** and Select "NEEDLE" with

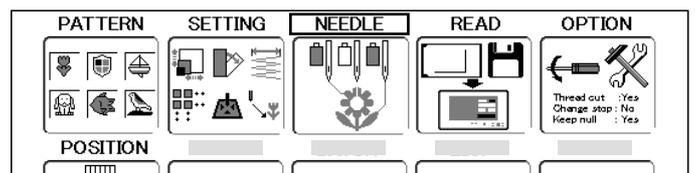


2. Press the **(SET)** button.
The left side shows the number, name and details of the current pattern.

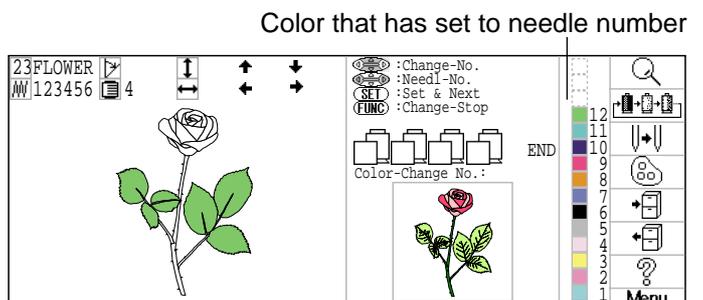

3. Press **(MENU)** and select with

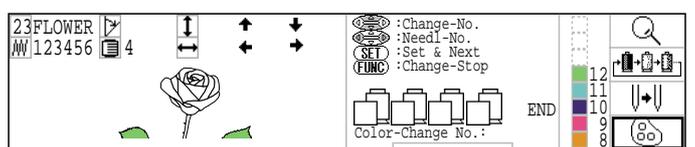


4. Press the **(SET)** button.

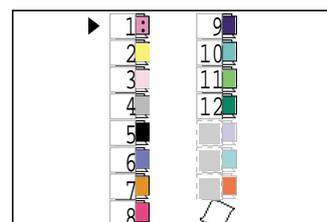


NEEDLE BAR SELECTION

13-4


5. Select the needle number or cloth (background color) with .

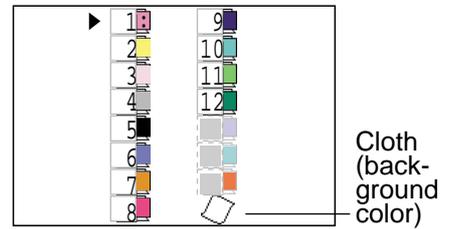


6. Press the **SET** button.
The current color will be shown on the left.
Color preview will be shown on the right.

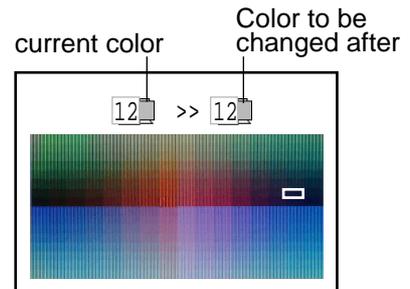


7. Select the color to be changed with .

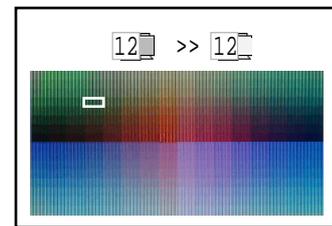

8. Press the **SET** button.
The setting is fixed.

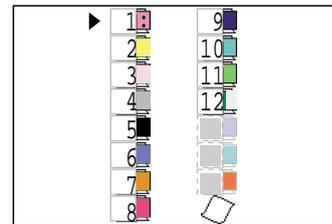

9. Press the **ESC** button.
Confirm the colors shown in the preview display.

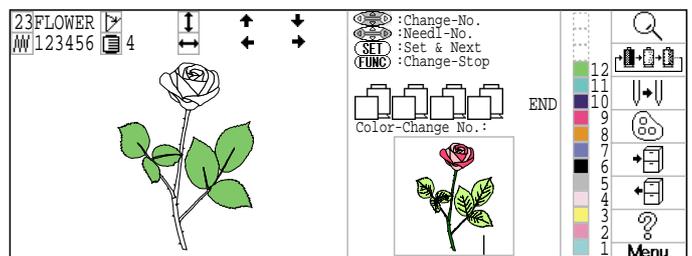

Preview


For return to main menu press right of  to select END and press **SET** or Press **ESC**. Press **ESC** once again to return to Drive mode.

● Color change data registration


You can import and apply color change data from saved patterns (Including color change stops) to the current pattern. This function lets you apply the same color change data from other patterns.

■ The color change data is limited to one and the color change numbers are limited to 250.

1. When the machine is stopped, press **(MENU)** and Select "NEEDLE" with .

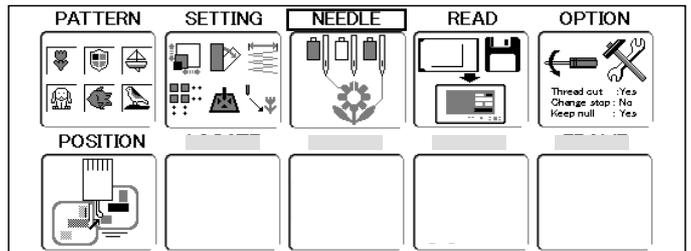


2. Press the **(SET)** button.
The left side shows the number, name and details of the current pattern.

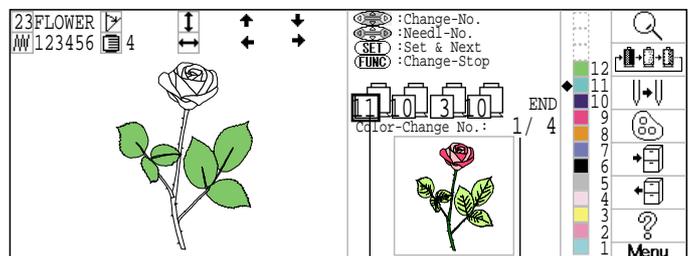

Needle number


Current color change number

3. Press **(MENU)** and select  with .

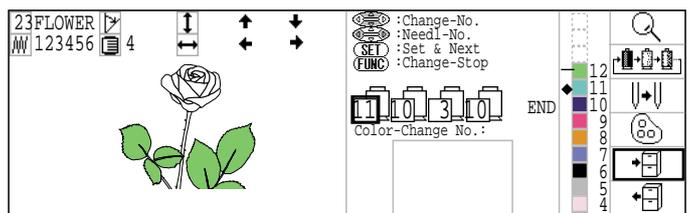

4. Press the **(SET)**.
The color change data will be saved into memory.

Needle entry

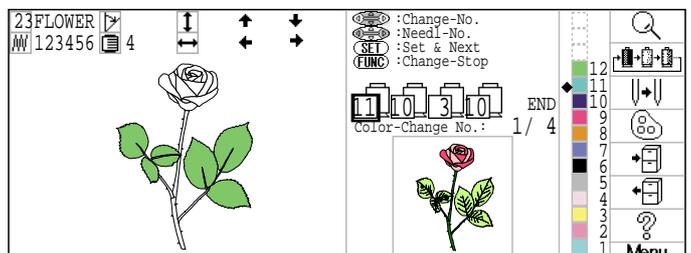


For return to main menu press right of  to select END and press **(SET)** or Press **(ESC)**. Press **(ESC)** once again to return to Drive mode.

● Color change data read


You can export the registered color change data to other patterns.

- If the pattern receiving the imported color change data has more color changes than the imported data, the extra color changes will be set to "0" and will need to be set manually later.

1. When the machine is stopped, press **(MENU)** and Select "NEEDLE" with .

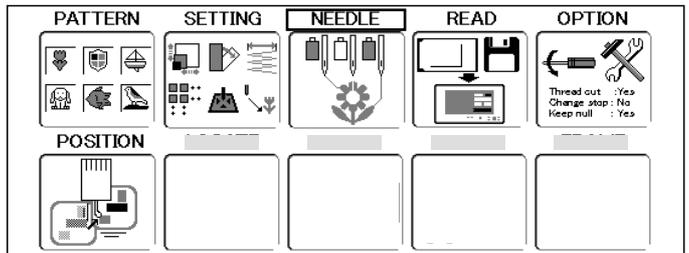


2. Press the **(SET)** button.
The left side shows the number, name and details of the current pattern.

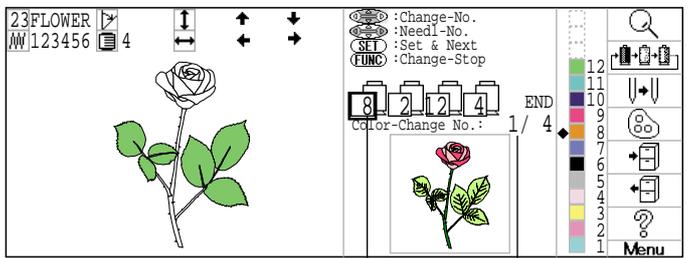


Needle number

Current color change number

3. Press **(MENU)** and select  with .

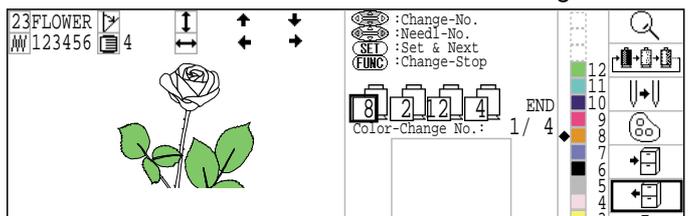

4. Press the **(SET)** button.
The needle number set is subject to the color change data exported.
Confirm the color shown in the preview display.

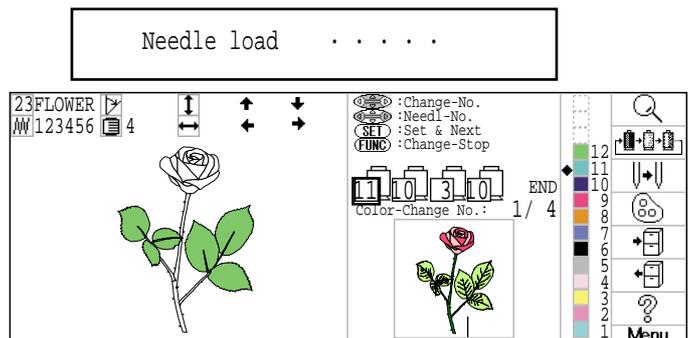


Preview

For return to main menu press right of  to select END and press **(SET)** or Press **(ESC)**. Press **(ESC)** once again to return to Drive mode.


● Repetition of color group setting

If your design has repetition of the group of the same color sequence, only set first sequence and set other automatically by following steps.


(If you have some function in the needle "Example: color change stop", the function also will set)

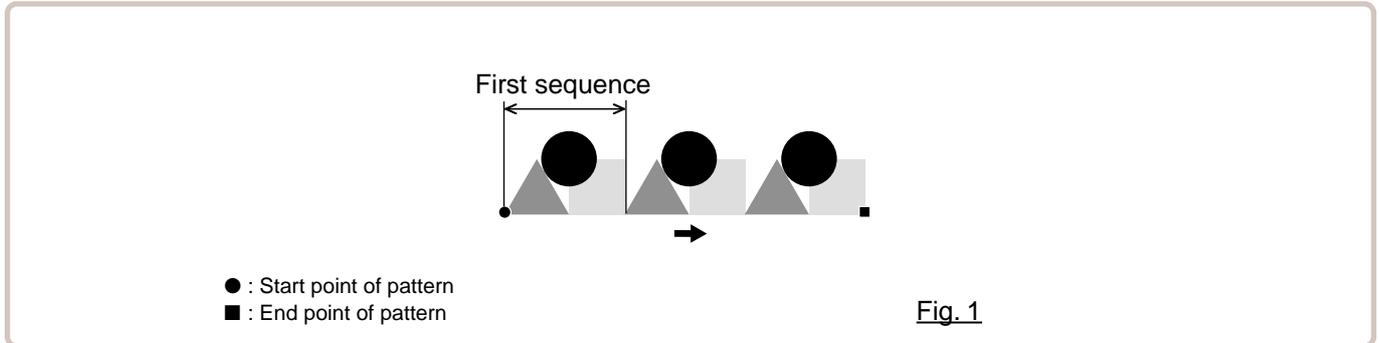


- When the machine is stopped, press **MENU** and Select "NEEDLE" with

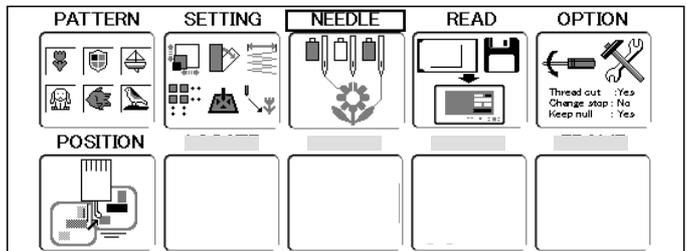


- Press the **SET** button.
The left side shows the number, name and details of the current pattern.

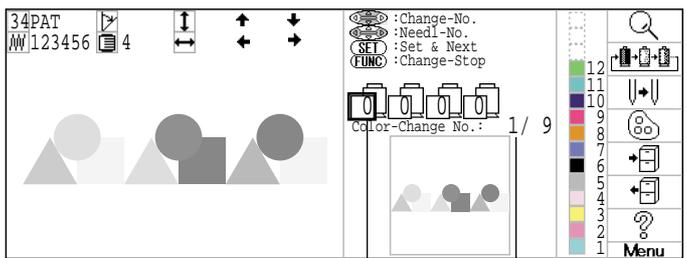

- Set first color sequence group.
Press right /left of to select the color change number.
Press up/down of to select the needle number.
Please confirm that the next number of the group is "0".

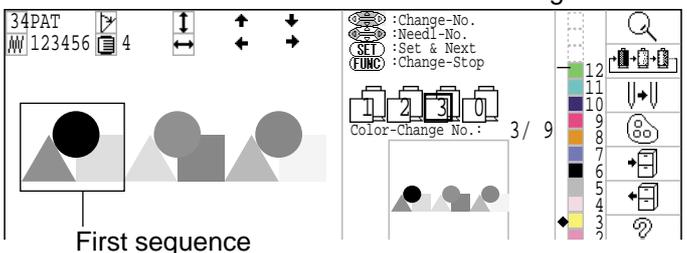

- Press **MENU** and select with .

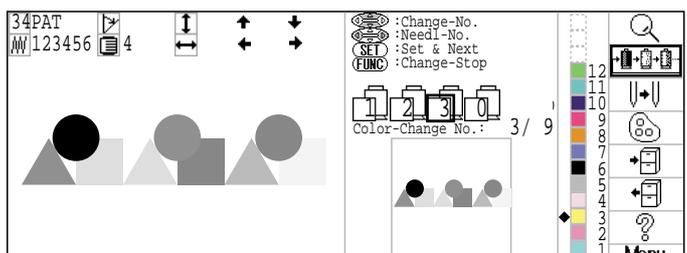


5. Press the **SET**.

If the number of total color change does not become the first number of group multiple number. Machine display warning.



6. Press the **SET**.

Set other color change setting automatically.

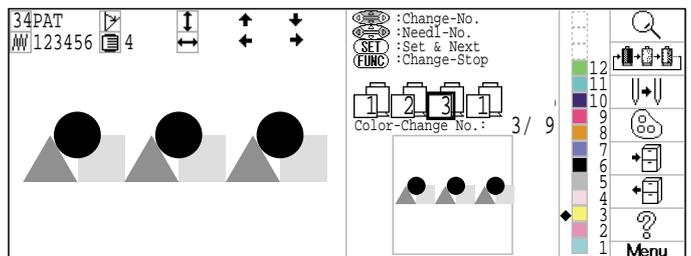

For return to main menu press right of  to select END and press **SET** or Press **ESC**. Press **ESC** once again to return to Drive mode.

●Join

Joining 2 patterns into 1 pattern data to be read from a memory media or 3.5" disk.

- In case you would like to use "Join" function, please set "Join design data" to "YES" on "READING" setting in advance. 14-4


1. Insert the memory media into the machine as described in "Inserting memory media".

5-5


or Insert the diskette into the machine as described in "Inserting data disk". (Option)

5-8


2. When the machine is stopped, press and Select "READ" with .

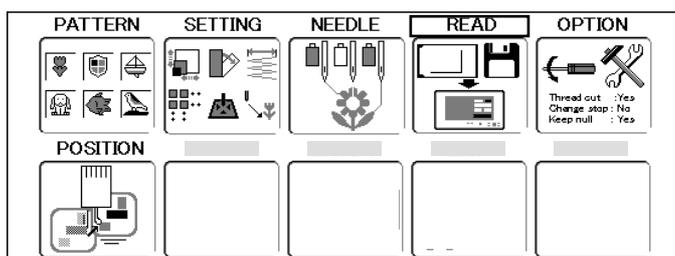

3. Press the .
Selective page of memory media or data disk will be shown.

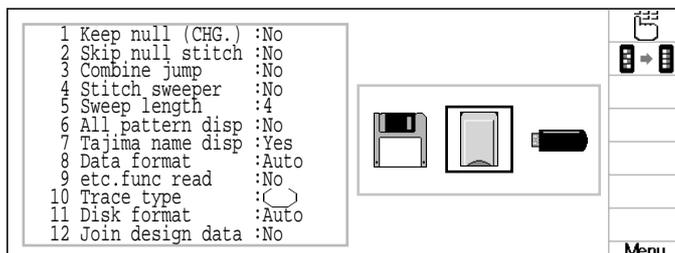

4. Select the memory media or data disk with

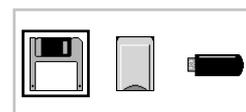

5. Press the **SET**.

Indicates pattern data of the memory media or data disk..

 Media removal is prohibited
Pattern data in the memory media or machine can be destroyed if you remove the memory media at this time.

-  TAP : HAPPY
-  DST : Tajima
-  DSB : Tajima (Barudan)
-  DSZ : Tajima (ZSK)
-  FDR : Barudan (style 30)
-  MEL : Melco (type 320K)
-  EXP : Melco (type exp)
-  ZSK : ZSK
-  DAT : Barudan (style 32)

6. Select the pattern with .

Before writing, check that there is more remaining space than the number of stitches that are going to be written.
If there are more stitches than remaining space, you may need to delete some designs to make room for the new patterns.

7. Press the **SET** button.


Section for select of end design data reading then back to menu and read next design data.

8. Select "Join" with .

9. Press the **SET** button.

Shift the Memory media or data disk if the pattern data you desire to Join is in the other Memory media or data disk.

Do not remove media or disk

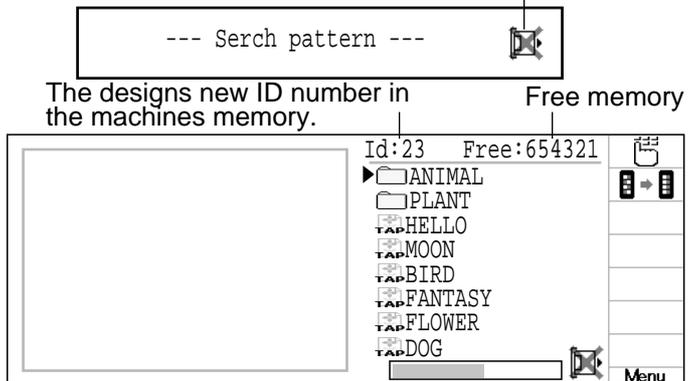


The designs new ID number in the machines memory. Free memory




 Folder : Contents of folder will be displayed when you select this icon and press **SET**.

 Return : Once you move into the folder, this icon will be displayed at the top of the list.

You will be able to move off from the folder by select this icon and press **SET**. You will be also able to move off from the folder if you just press **ESC**.

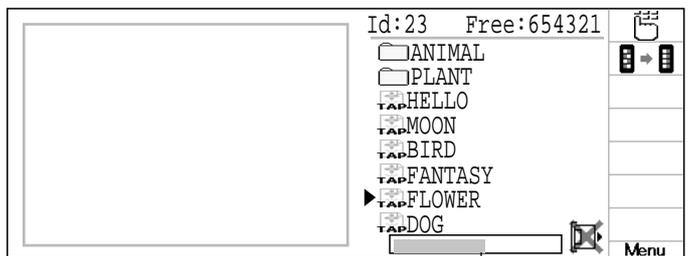


Scrolling display

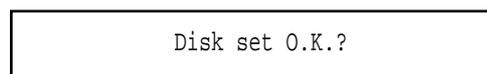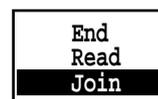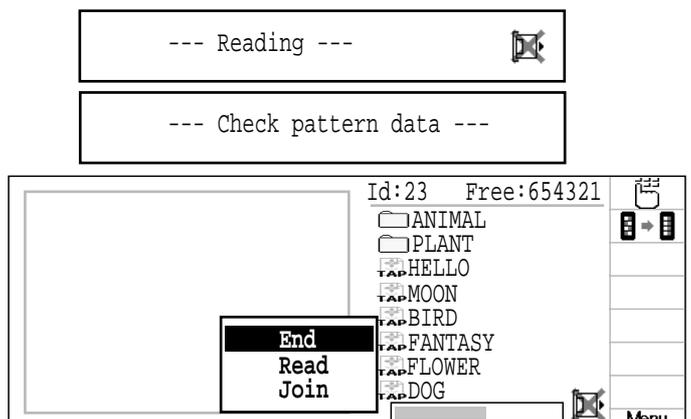


10. Press the **SET** button.

A menu will show the designs stored on the diskette or memory media.

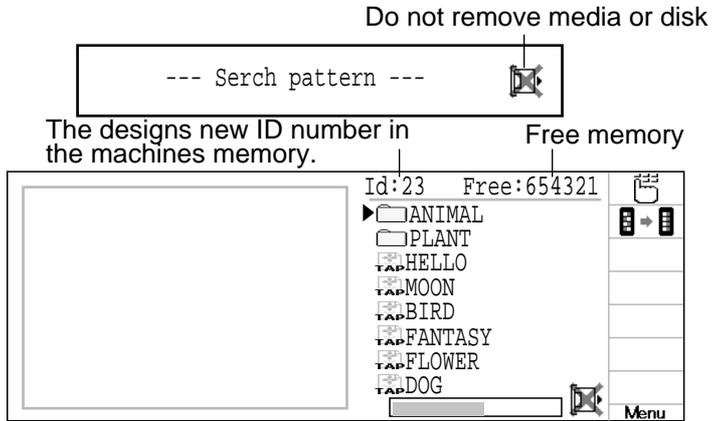


11. Select the pattern data to be Joined with

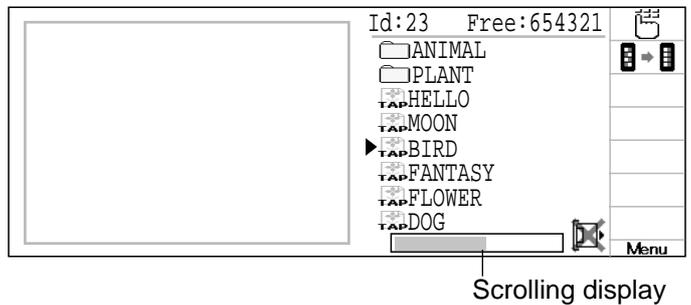

12. Press the **SET** button.

After the pattern data is read, return to the menu or read another pattern or join another pattern.

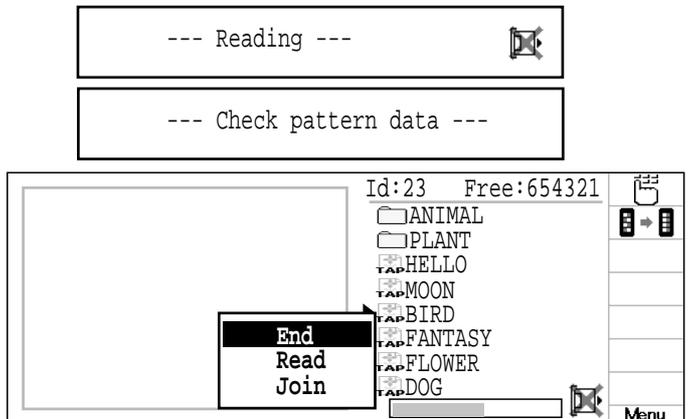


13. Press the **SET** button.

Return to menu.

Select "Join" with and press **SET** if you desire to join more patters.

Necessary pattern data can be read by performing step 10 to 13.

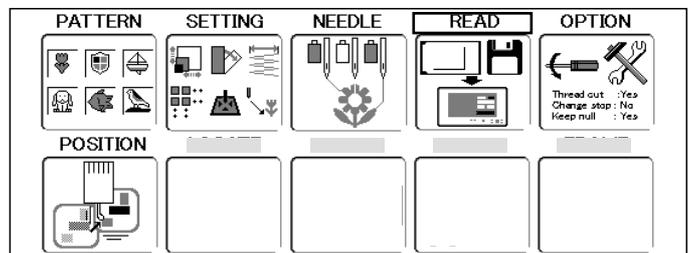

By pressing **ESC**, enable to move off from the folder (📁 is shown at the top of the list) or enable to move back to MENU (📁 is not shown at the top of the list).

Even if you are inside the sub-folders, enable to back to MENU directly by holding down the **ESC**.

Press **ESC** to return to Menu mode.

● Pattern read settings

Settings related to pattern data reading:

SETTING ITEM	SETTING RANGE	
1 Keep null (CHG.)	No•Yes	: This function lets the machine read zero stitches as they are before color change when reading pattern data.
2 Skip null stitch	No•Yes	: This lets you choose to ignore all null stitches when reading pattern data.
3 Combine jump	No•Yes	: Allows you to combine multiple, consecutive jump stitches when reading pattern data, if desired. It combines them into jump stitches of the maximum 12.7mm and reads the pattern with the combined jumps.
4 <u>Stitch sweeper</u>	No•Yes	: This function eliminates extremely short stitch for stitch width when reading pattern data.
5 Sweep length	0~8 (0~0.8mm)	: This setting controls the length of the stitches eliminated by the Stitch sweeper. Stitches shorter than this setting will be eliminated.
6 <u>All pattern disp</u>	No•Yes	: When pattern data is read, pattern data other than HAPPY is also displayed. Usually, select "No".
7 Tajima name disp	Yes•No	: When patterns in Tajima format are read in, the display shows the file name.
8 <u>Data format</u>	Auto →Automatic Happy→HAPPY, Tajima Brd →Barudan Zsk →Zsk	: Turn data format for reading patterns from data disk of HAPPY or Tajima with "DISK READING". Usually, set it to Automatic.
9 <u>etc.func read</u>	Yes•No	: This function reads various function setting which are set in pattern data together with pattern data (type TAP).
10 <u>Trace type</u>		: Lets you select the type of trace data that is created as a pattern is read in. → Maximum embroidery area of pattern → Out line
11 <u>Disk format</u>	Auto →Automatic Happy →HAPPY TJM →Tajima FDR →Barudan (style 30) MEL →Melco (type 320K) MEExp→Melco (type exp) Zsk →ZSK S32 →Barudan (style 32)	: Turn disk format for reading patterns. Usually, set it to Automatic.
12 Join design data	Yes•No	: This function reads various function setting which are set in pattern data together with pattern data (type TAP).

Detailed explanation of machine setting

4 Stitch sweeper

This removes stitches that are extremely narrow when reading pattern data and writing to machine memory. If thread breaks occur often at the same point in a pattern, this may be because of narrow stitches.

■ If the thread still breaks in the same place you can use this function again but repeated usage may distort the shape of the stitch.

1. Save the pattern to disk.
2. Conduct a stitch sweeping of the pattern and load it into the machine again.

End

6 All pattern disp

Indicate all kind affiliate file data external with design data when design data reading. These affiliate file data showing following icons.

-  HP1 file : Saving any kind of function and setting data of the design, In case of save design data by "HAPPY LINK" software or HCS and HCD machine.
-  MON file : Saving any kind of function and setting data of the design, In case of save design data by other old series machine.
-  Other file : Except Embroidery design data.

8 Data format

This enables you to select a different format and read the pattern again if the machine did not read it correctly the first time.

9 etc. func read

*Various settings are saved together with a pattern. If some settings are changed in the pattern and you wish to return to the originals, simply reload.


■ The data may only be HAPPY format (TAP).

10 Trace type

You can compare the design size and design position to the embroidery frame before you start sewing.

The embroidery frame will move around the actual design size.


At this time you can choose which type of trace from the two types as seen in the following figure:

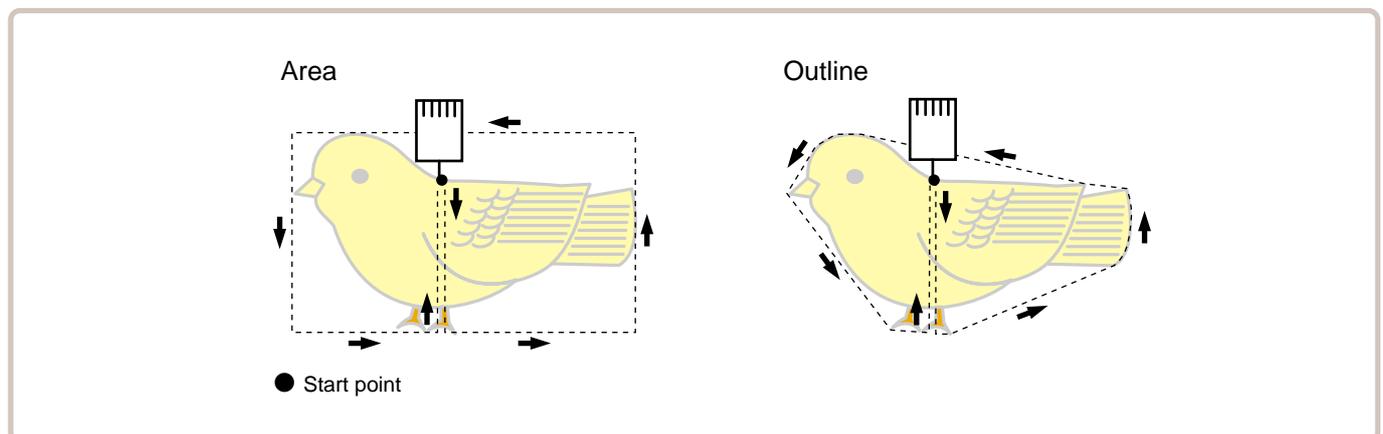


11 Disk format

This enables you to select a different *disk format and read the pattern again if the machine did not read it correctly the first time.


- When the machine is stopped, press **(MENU)** and Select "READ" with .

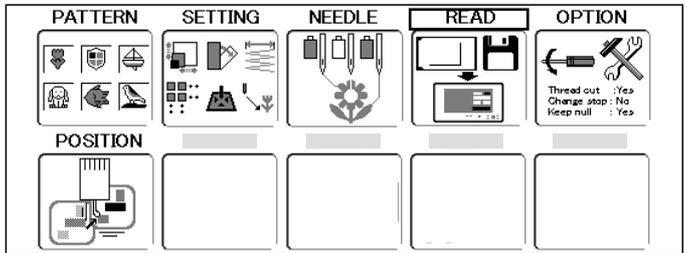


- Press the **(SET)**.
The setting status will be shown to the left.

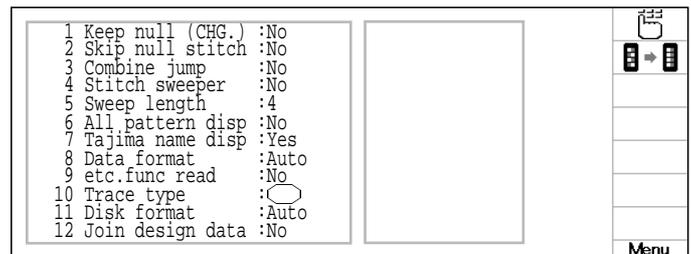


- Press **(MENU)** and select  with .

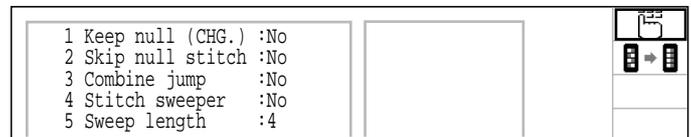


- Press the **(SET)**.
Ready to change settings.

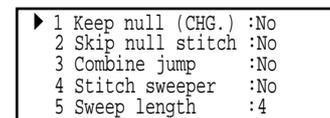


- Select desired setting item with  and press **(SET)**.

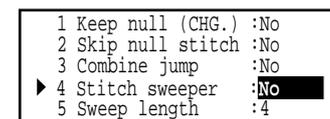

- Press up/down on  to change settings.

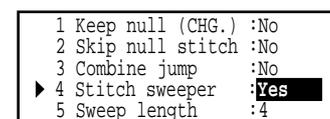

- Press the **(SET)**.
The setting is fixed.
If you change default settings they will be lit green.

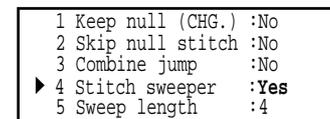


Other setting can be done by performing step 5 to 7.

Press **(ESC)** twice to return to Menu mode.
Press **(ESC)** once again to return to Drive mode.


● Restoring settings

This restores settings related to pattern reading.


- When the machine is stopped, press **(MENU)** and Select "READ" with .

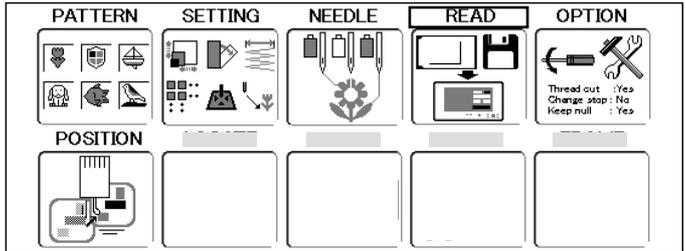


- Press the **(SET)**.
The setting status will be shown to the left.

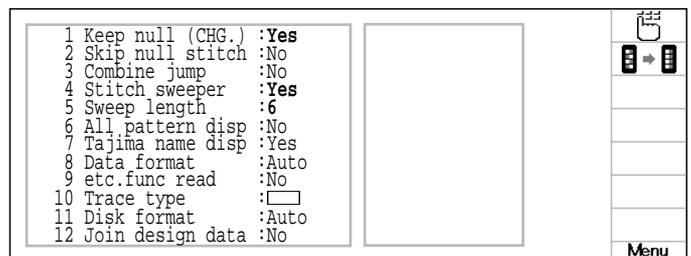

- Press **(MENU)** and select   with .

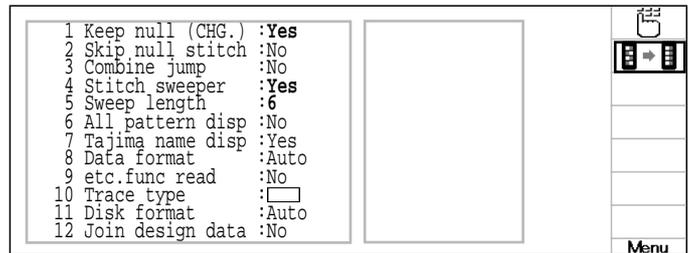

- Press the **(SET)**.
All settings are returned to the default.
In case that the setting is restored, the color of status is changed to black.

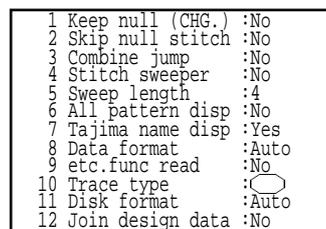


Press **(ESC)** twice to return to Menu mode.

Press **(ESC)** once again to return to Drive mode.

● Initialization of setting


Initialize all setting of basic function all at once.

- When the machine is stopped, press **(MENU)** and Select "OPTION" with .

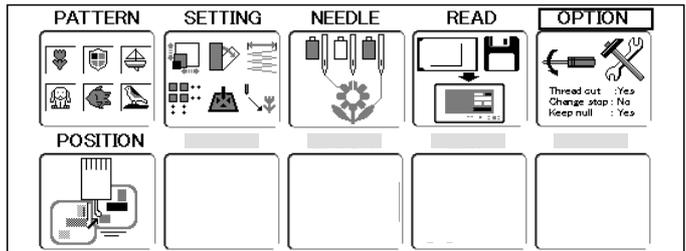


- Press the **(SET)**.

Comes indicate  (Machine settings) or  (Pattern read settings).

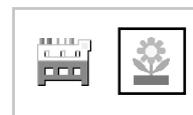

- Select  with  and press **(SET)**.

You select , setting for design data read.

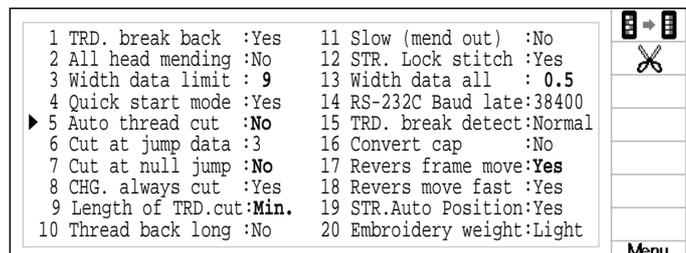


- Press the **(MENU)**.

 →  in submenu is selected.



- Press the **(SET)**.


All setting is returned to the default.
In case that the setting is initialized, the color of status is changed to black.

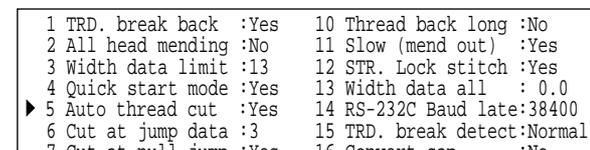

Press **(ESC)** to return to Menu mode.

Press **(ESC)** once again to return to Drive mode.

This creates direct designations to the number of stitches and *color change number, as well as setting the frame and data to the designated sewing position.

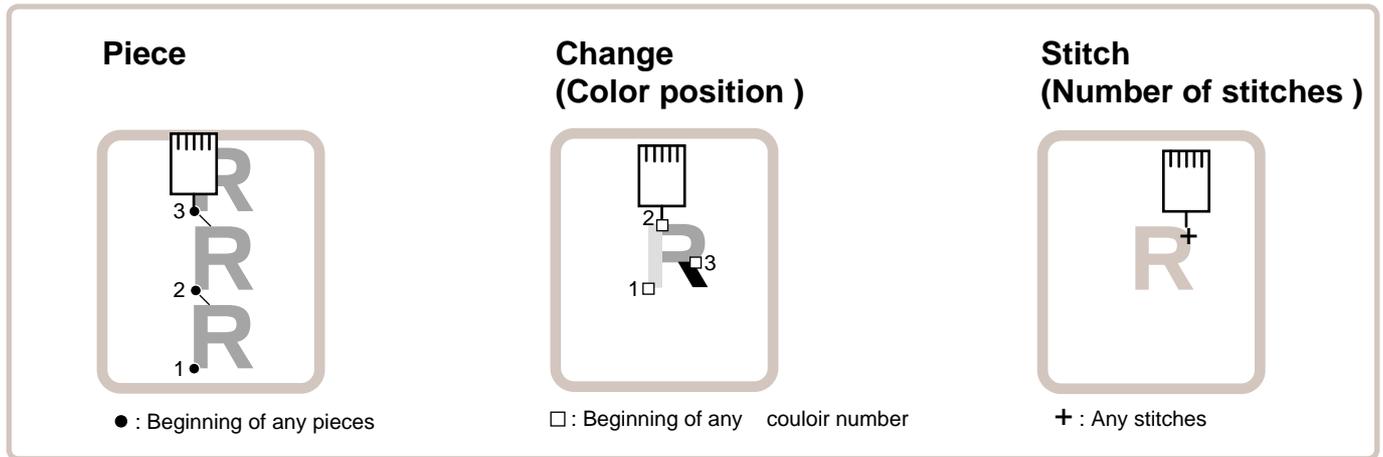

Piece

If "Repeat" is set, this allows the frame to move to the beginning of any piece at will.

- You can designate the order of pattern, the order of stitch and the order of piece by using "Number of Stitches", "Changing Position" and "Number of Piece".

Change (Color position) 9-7

This moves the frame to the beginning of any Color change number at will beginning of color.


Stitch (Number of stitches) 9-6

This moves the frame to any stitch at will.


Piece number

The frame and pointer can be moved a specified piece number.

- When the machine is stopped, press **(MENU)** and Select "POSITION" with .

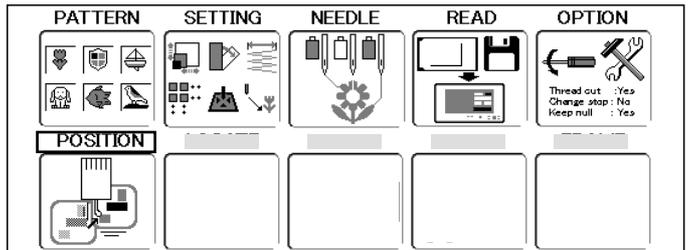


- Press the **(SET)** button.

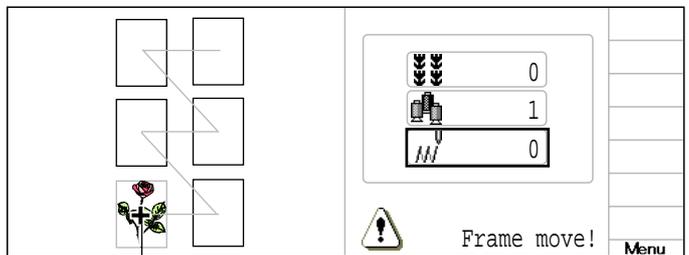


Pointer shows you the current position of the frame.

- Press up/down of  to select  and press **(SET)**.

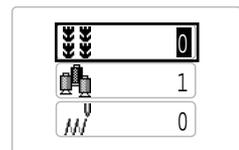


- Press up/down of  to select the number and press right /left of  to select the digit.

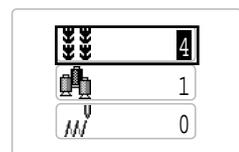

CAUTION: To prevent accidents.
The frame moves quickly.
Keep your hands away from the frame.

- Press the **(SET)**.
The frame and pointer will move to the specified piece number.

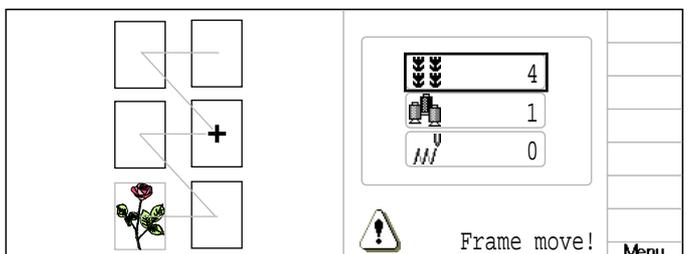

Locate will restore the position of the frame to the last point before a power failure even if the point of origin or the pattern itself were changed.

- ⚠ If locate is used with a cap frame, make sure that the machine recognizes it by showing  (Standard Cap) or  (Wide cap) the appropriate icon or the machine could be damaged. Never use locate with the needle bar and presser foot lowered, as they could hit the frame and break.
- ⚠ When you use "LOCATE", keep clear of the frame and table. It is dangerous as the frame could make sudden movements.
- It is not always necessary to set "Entry", but you can't set "Return". Once "Entry" is set, it is retained even if power is turned off.
If you change the position of the original point, set it again.
- Even if you set "Entry", the frame may not return exactly to the original position in process of time.
Reset this monthly.

Entry

Registering the start point in the selected pattern.

Return (Registered position)

When position of the frame changes because of power loss, this will restore the frame to the registered point.


Entry

This registers the original point of the selected pattern.


 **CAUTION: To prevent accidents.**
The frame moves quickly.
Keep your hands away from the frame.

1. Confirm that there is indication of  (Top) in the display and go on to procedure no. 2.


Please go on to procedure no. 2, if there is not a indication.

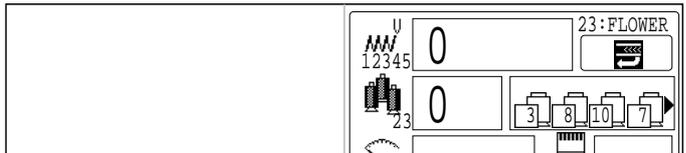


2. Press  to move the frame to the original point.
If the frame is located at the origin point, proceed to Step 2.

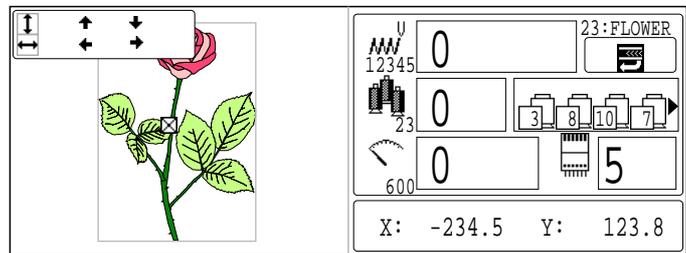


3. When the machine is stopped, press  and Select "LOCATE" with .

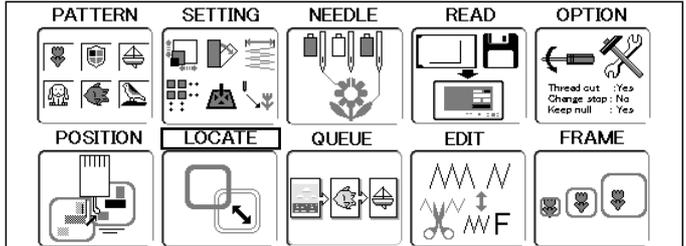

4. Press the .

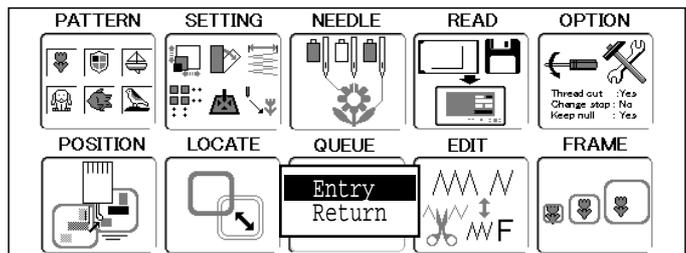

5. Select "Entry" with  and press .
- The origin point is registered and the display will return to Drive mode.

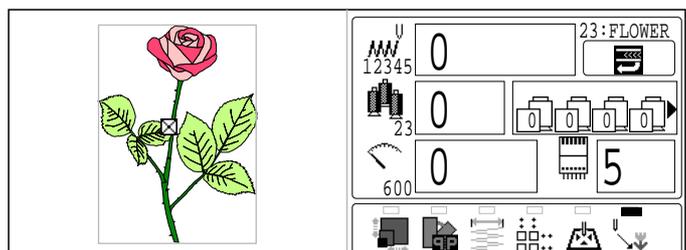

Return



In case of power failure you can return to the original point you registered.

 **CAUTION: To prevent accidents.**
The frame moves quickly.
Keep your hands away from the frame.


1. Confirm that there is indication of  (Top) in the display and go on to procedure no. 2.

Please go on to procedure no. 2, if there is not a indication.


2. When the machine is stopped, press  and Select "LOCATE" with .

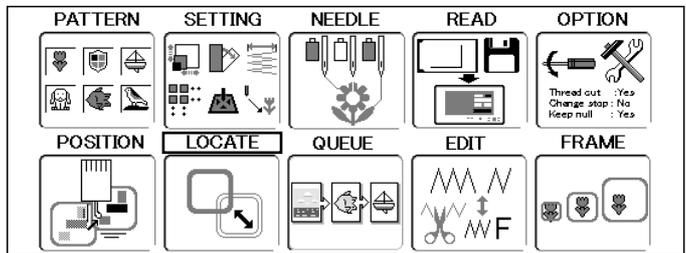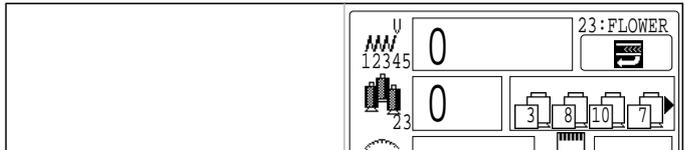

3. Press the .

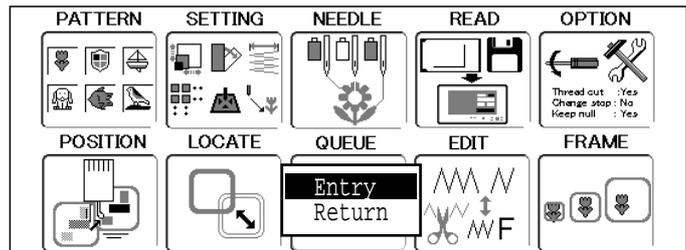

4. Select "Return" with  and press .
- The frame will return to the origin point you registered and the display will return to Drive mode.

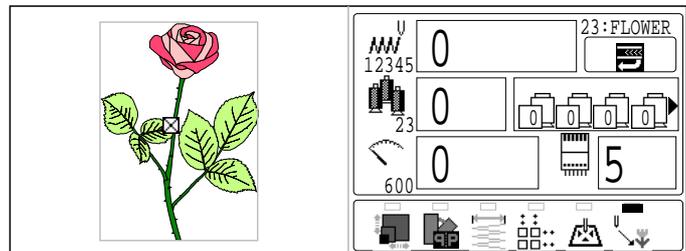

This sets up a succession of patterns that can be embroidered in any desired sequence. The machine will proceed with the *various settings set to each pattern.

- If you embroider a pattern like in Fig.1, you will need to set an offset as a pivot to each pattern in advance. If the offset is set to the first pattern like in Fig. 2, you will need to set a setoff point to the first pattern with the offset of the other pattern as a pivot. P12-8
- If automatic original point return is set, the machine will return to the original point when finished. If automatic original point return is not set, the embroider will finish at the end point of the last pattern.

Setting example

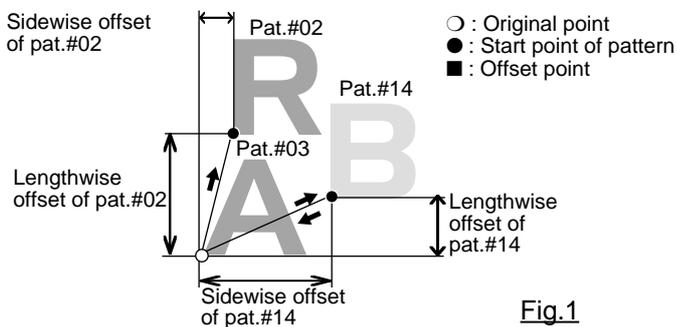


Fig.1

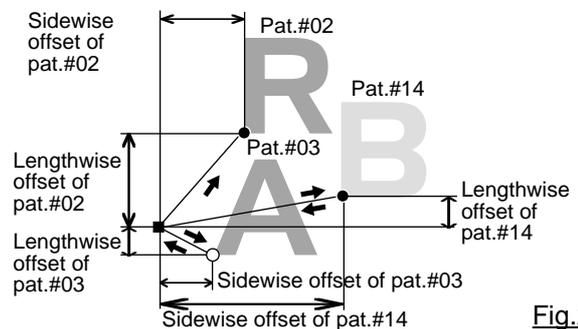


Fig.2

- : Original point
- : Start point of pattern
- : Offset point

Alter

This registers Queued patterns in order.

Delete

This deletes unnecessary patterns in the QUEUE.

Set

This begins the QUEUE sewing.


Reset

This cancels the QUEUE sewing.


Alter

This allows you to sew any combination of designs in sequence.


- When the machine is stopped, press **(MENU)** and Select "QUEUE" with .

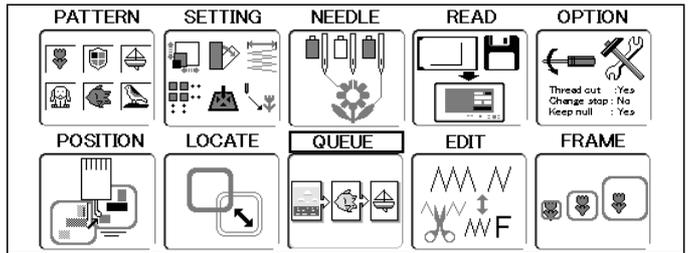


- Press the **(SET)**.
The left side shows the pattern data.

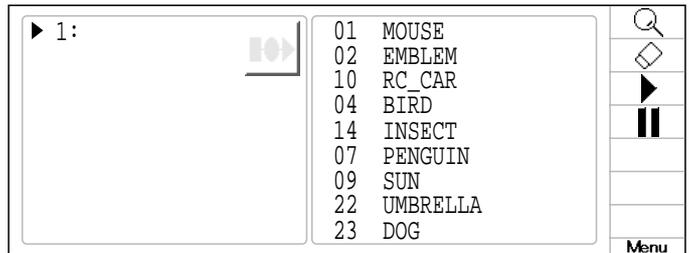


- Press the **(SET)**. Or press right of .
A pattern can now be selected.

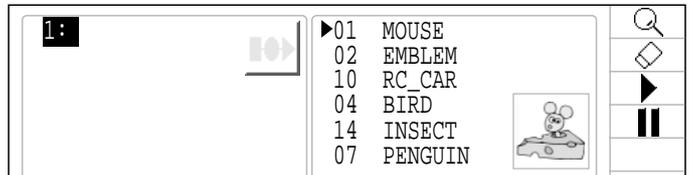


- Press up/down of  to select desired pattern.
Cursor will be back to left side by pressing left of  without selecting design data.

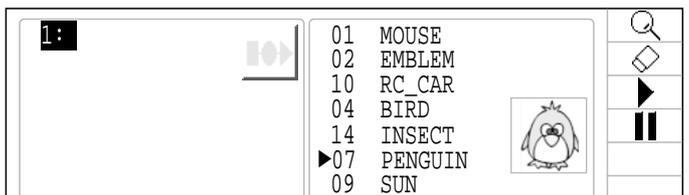


- Press the **(SET)**.
The selected pattern is shown to the left.

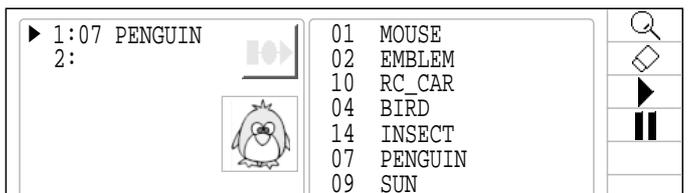


- Press down of  to select the next row and press **(SET)**. Or press right of .
The next pattern can be selected.

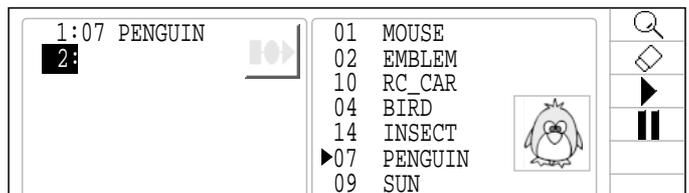

- Press up/down of  to select desired pattern.

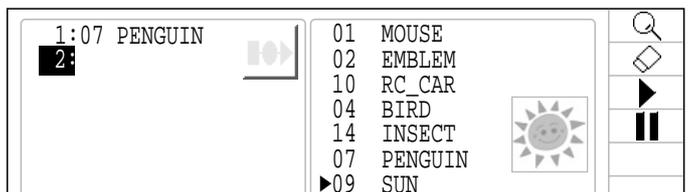

- Press the **(SET)**.
The setting is fixed.
If you select other memory pattern data continuously, repeat step 6 to 8.

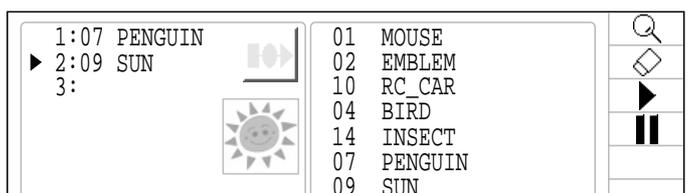


Press **(ESC)** to return to Menu mode.
Press **(ESC)** once again to return to Drive mode.


Delete

This deletes patterns from the QUEUE.


- When the machine is stopped, press **(MENU)** and Select "QUEUE" with .

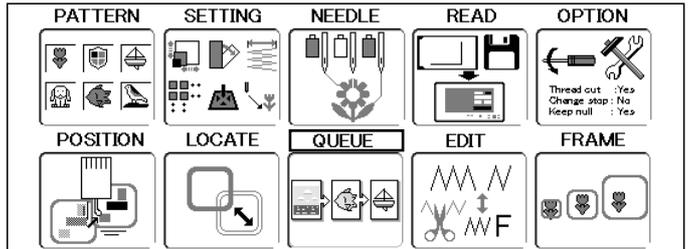


- Press the **(SET)**.
Registered pattern data is shown to the left.

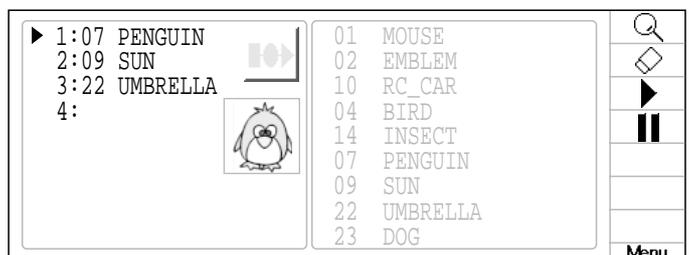


- Select desired pattern with .

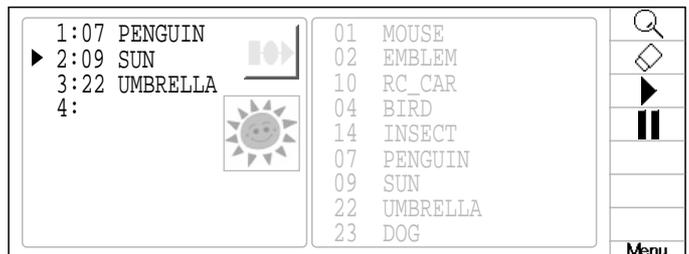

- Press **(MENU)** and select  with .

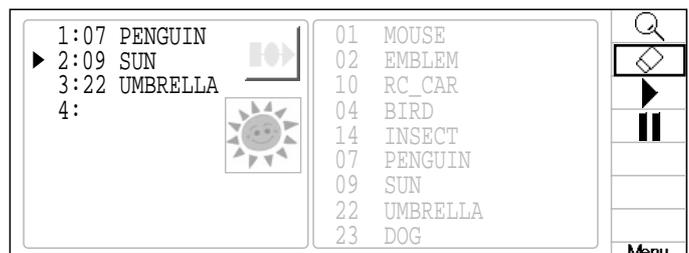

- Press the **(SET)**.
The pattern data is deleted.
If you need to erase more than 1 design, please do step 3 to 5.

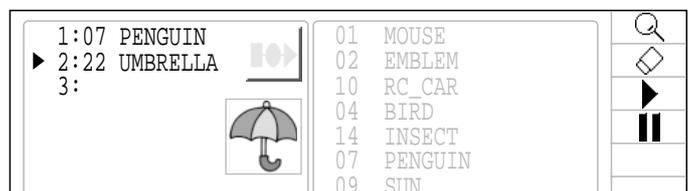


Press **(ESC)** to return to Menu mode.
Press **(ESC)** once again to return to Drive mode.


Set

This begins the QUEUE sewing you have programmed.

- When the machine is stopped, press **(MENU)** and Select "QUEUE" with .

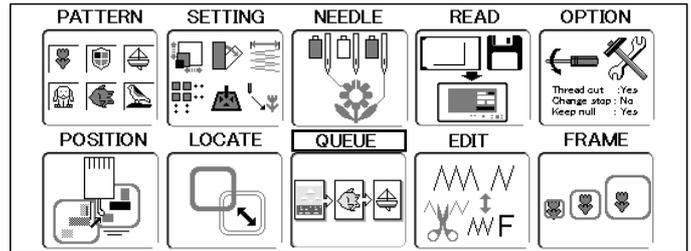


- Press **(MENU)** and select  with .

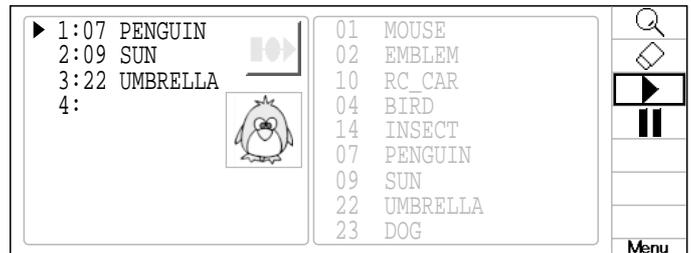


- If you like to stop the machine at end point of each design, please go to step 4.

If you like to embroider it in succession without stopping at end of each design, please select "No" by .

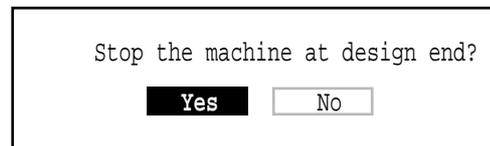


- Press the **(SET)**.

The Queue icon will change from gray to color, indicating the that the sewing has started.

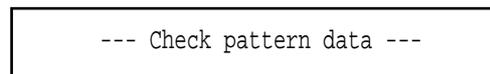


A colored icon indicates the execution of a Queue

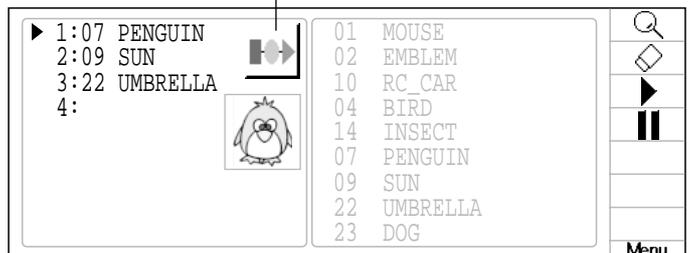

- Press **(ESC)** several times to return Drive mode.


Press **(START)** to start a Queue embroidery with Queue operation in registered order.

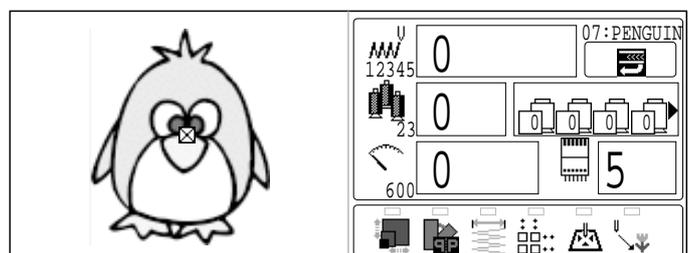


Reset

Using the reset command will end the QUEUE operation.

1. When the machine is stopped, press **(MENU)** and Select "QUEUE" with .

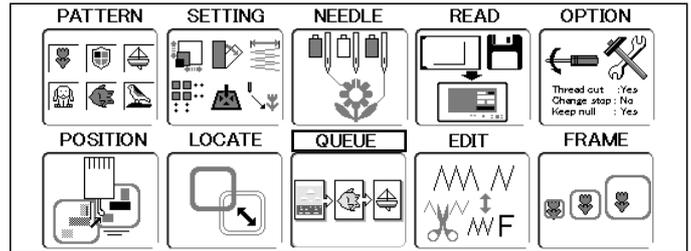


2. Press **(MENU)** and select  with .

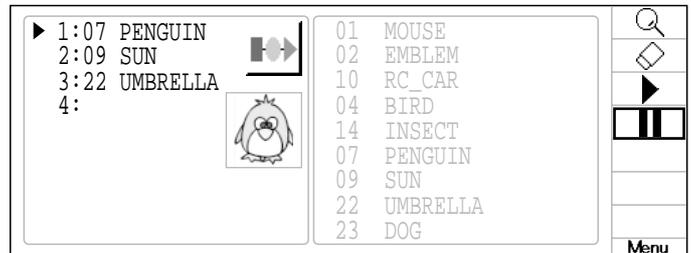

3. Press the **(SET)**.
The QUEUE icon will change to gray, indicating that the operation is cancelled.

A gray icon indicates the cancellation of an operation

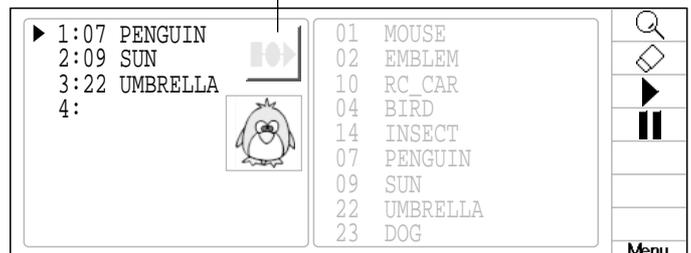

Press **(ESC)** to return to Menu mode.
Press **(ESC)** once again to return to Drive mode.

●Stitch selection


Select *stitch (number of stitches) for editing.

There are three ways to select stitches.

Color change number selection : Enter the stitch number you want to edit directly, then go to the particular stitch number.

Manual selection : Search for the stitch number you want to edit by moving back and forth by intervals of 1 to 1000 stitches.

Function selection : Search the only stitch including the function code such as jump, thread cut and etc.

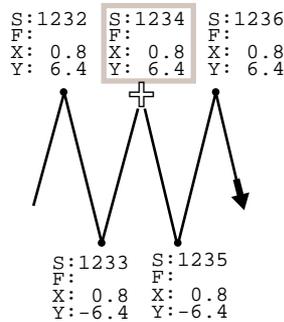


S : Number of stitches
 F : Function code
 X : Sidewise move distance
 Y : Lengthwise move distance

⊕ shows selected stitch.


Color change number selection

- When the machine is stopped, press **(MENU)** and select "EDIT" with

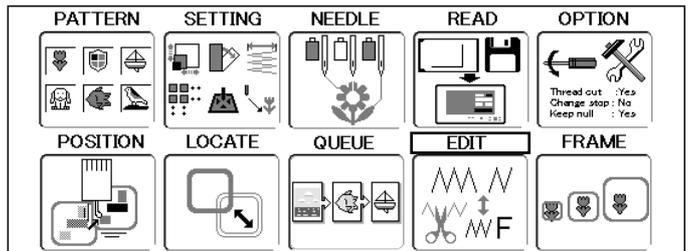

- Press the **(SET)**.
 The right side shows the information of the current stitch.


--- Check pattern form ---

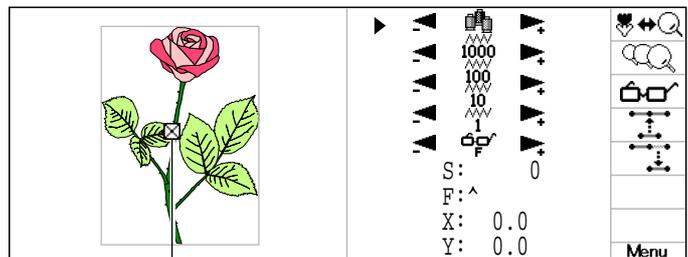

Current stitch


- Press right /left of to select desired color change number.

You can use "Function code", "Insert stitch" and etc. with this status.
 Refer to the page for each editing procedure for more instructions.

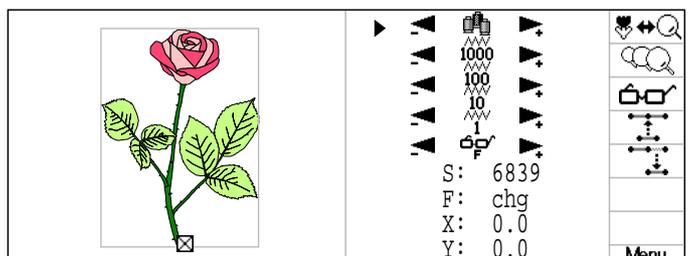


Manual selection


- When the machine is stopped, press **MENU** and Select "EDIT" with .

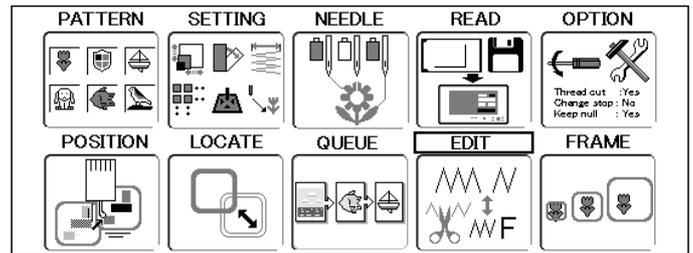

- Press the **SET**.
The information of selected stitch is showed at the right side of display.

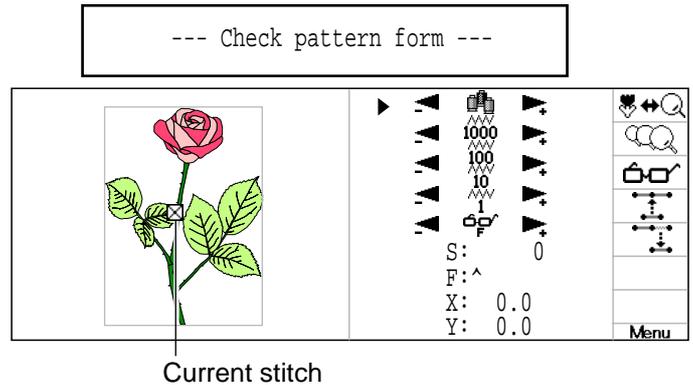


- Press up/down of  to select  to  (interval of stitch).

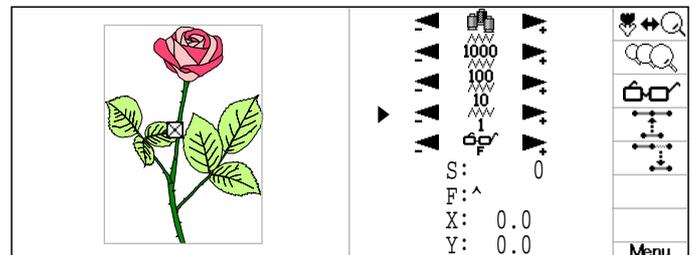


- Press right/left of  to move the stitch to forward or backward to select the desired stitch.

The stitch is searched with the selected interval of stitch.
You can edit "Function code", "Insert stitch" and etc. with this status.

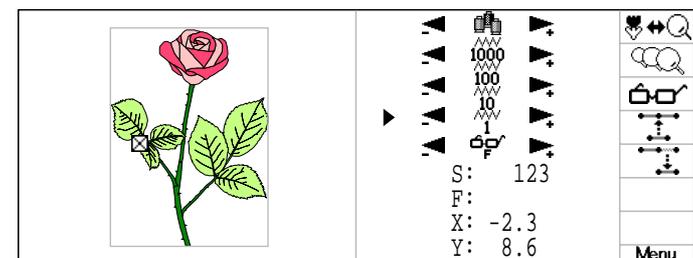


Function selection

1. When the machine is stopped, press **(MENU)** and Select "EDIT" with .

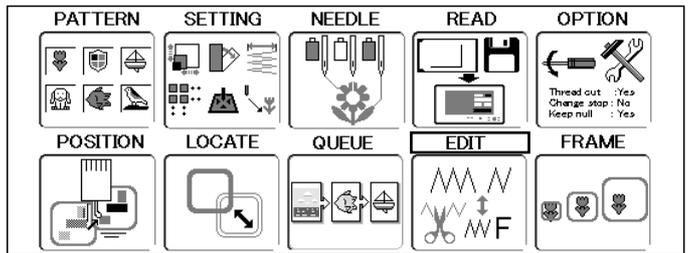


2. Press the **(SET)**.
The right side shows the information on the current stitch.

--- Check pattern form ---

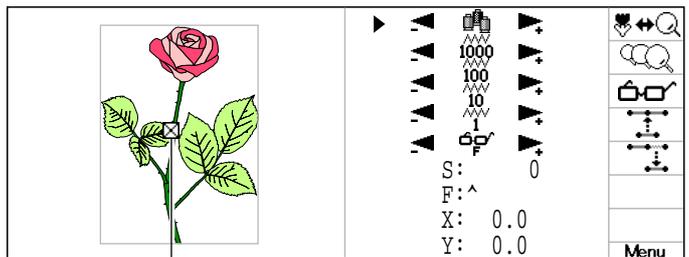


Selected stitch

3. Press up/down of  to select .

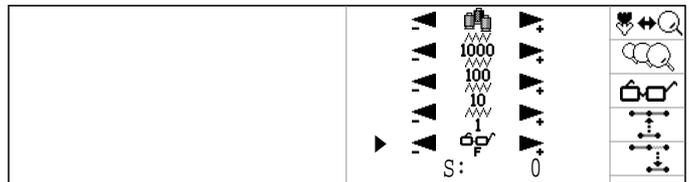


4. Press **(MENU)** and select  with .


The selected function is displayed.

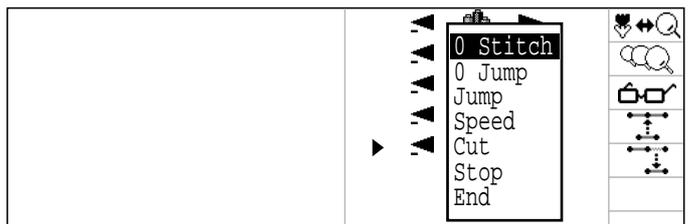


5. Press up/down of  to select the function.

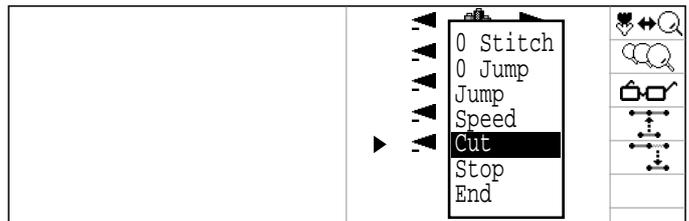

6. Press the **(SET)**.
The function is selected.

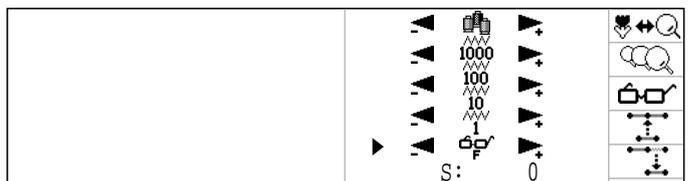


7. Press right/left of , to search the stitch.
You can use "Function code", "Insert stitch" and etc. with this status.
Refer to the page for each editing procedure for more instructions.

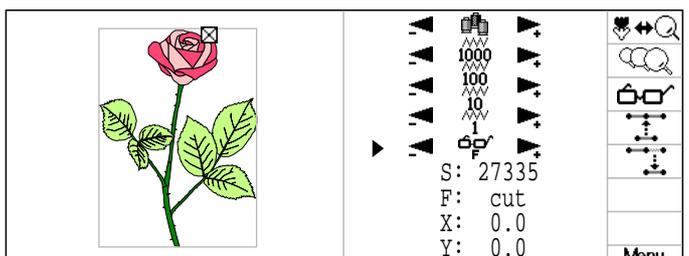

● Zoom in for the display


This enables zooming in the display.

- Using "Stitch selection", the machine will display the intended stitch function code.

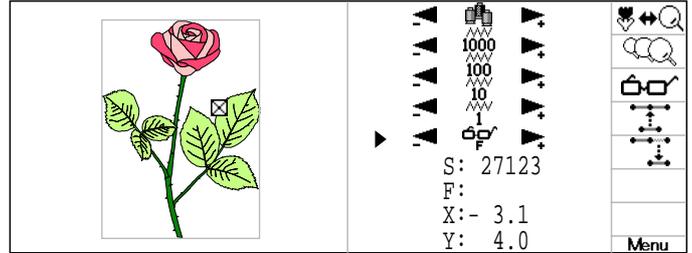

- Press **(MENU)** and select with .

This indicates the display range while zooming in

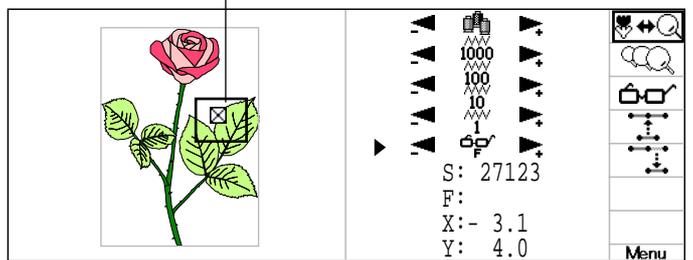


- Press the **(SET)**.

The pattern is zoomed in.
In this mode, you can use "Color number selection", "Manual selection" and "Function selection".

The functions are displayed as function marks.

- Function mark
- : Stitch (Normal)
 - : Jump
 - △ : Color change
 - ★ : Speed limit
 - X : Thread cut
 - # : Stop
 - : Start point
 - : End point


The pointer indicates the stitch currently selected.
500 stitches before and after the pointer are displayed.

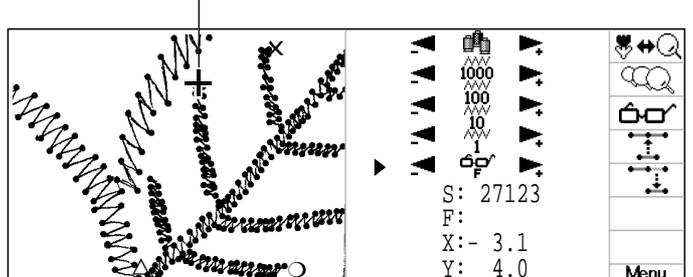


Zooming rate

The zooming rate can be adjusted.


1. Follow the steps for "Zoom in for the display" at the previous page to display the pattern zoomed in.

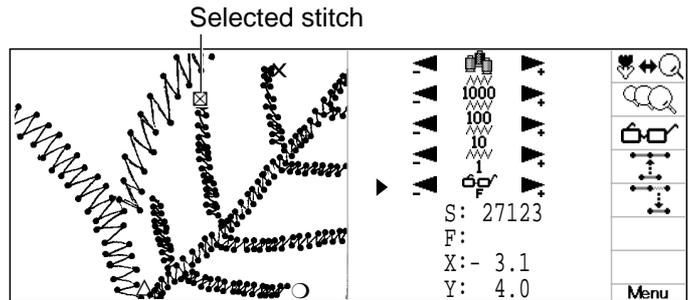


2. Press **MENU** and select  with .

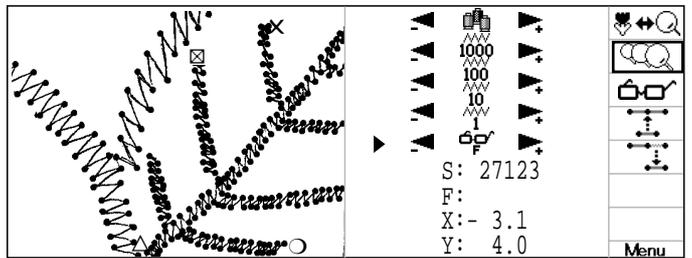


3. Press the **SET**.
The display shows the current zooming rate.

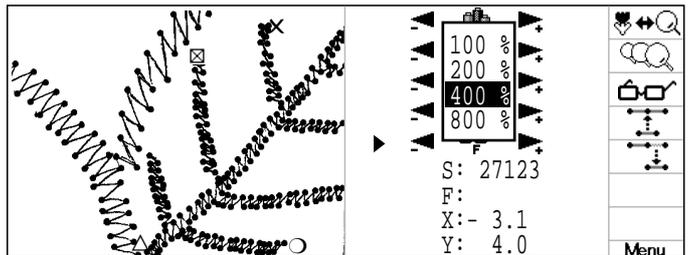

4. Press up/down of  to select zooming rate.

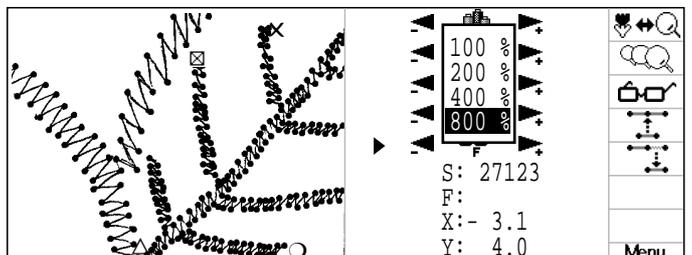

5. Press the **SET**.
The zooming rate of display is changed.
In this mode, you can use "Color number selection", "Manual selection" and "Function selection".

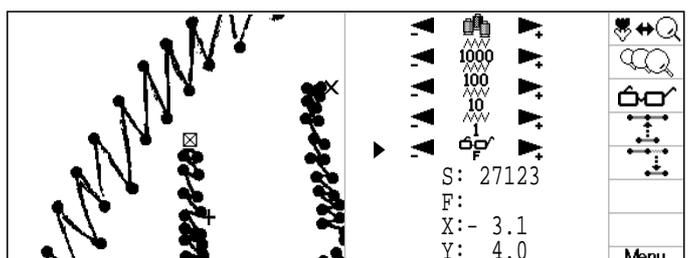

● Function code

This is function code is for additions, changes and erasures on desired stitches.

Before editing

Ex. 1 after editing
The jump and speed limit are added.

Ex. 2 after editing
The color change is added.

S : Number of stitches
F : Function code
X : Move data of sidewise
Y : Move data of lengthwise

⊕ shows selected stitch.

FUNCTION CODE	ACTION OF THE MACHINE	
-	Normal	Normal stitch
sph	Speed limit H	Release *speed limit
sp1	Speed limit 1	Set *speed limit to high speed
sp2	Speed limit 2	Set *speed limit to middle speed
spm	Speed limit M	Set *speed limit to low speed
cut	Thread cut	Cut threads
stp	Stop	Cut threads and stop
chg	Color change	Change needle bar to thread color you want to use
^	Jump	The machine jumps with needle not coming down

Model	Speed limit rpm		
	Low	Middle (Cap)	High (Cap)
HCS	300	800 (600)	1000 (750)
HCD	300	700 (650)	900 (800)
HCR	300	700 (650)	900 (800)

* Figures in bracket means cap frame use.

- When you add a color change function (chg), a zero stitch with a color change function (chg) is added after selected stitch. Refer to the figure above. (Ex. 2 after editing)
- Except for color change functions (chg), you can join jump functions (^) with all other function codes. When you enter a jump function (^) in a color change set stitch, the display will appear but you can't execute this setting.
- Stitch editing is not available during stitch no.0 to 1023.
- You can't add a color change (chg) and end (end) at the end of the pattern.
- In the middle of embroidery, when you move the frame with *trace back or *thread brake back etc. where a speed limit is used, and then resume embroidery, the speed limit will not be used for that portion of the embroidery.
If you must use a speed limit for this portion of the embroidery, set a new speed limit behind the stitch where you resumed embroider or reduce speed with the speed adjustment knob.
- When "Stop (stp)" is set, the machine displays following message and stops.

>> Change Stop

- If a thread cut is used in the middle of a pattern as below, there is lack of seams because the needle comes down to the next stitch from the stitch where the thread cut was used as illustrated in Ex. 3. If you must have a seam, add a *zero stitch behind the thread cut as illustrated in Ex. 4. This causes the needle to come down on the thread cut stitch with zero stitches and there will be no seams. For instructions on zero stitches, refer to the page "Insert stitch, Erase stitch" in "DATA EDIT".


Before editing

Ex. 3 after editing
The thread cut function is added.


Ex. 4 after editing
The thread cut function is added.

S : Number of stitches
F : Function code
X : Move data of sidewise
Y : Move data of lengthwise


1. Using "stitch selection" from the preceding page the machine will display either of the intended stitch function codes.

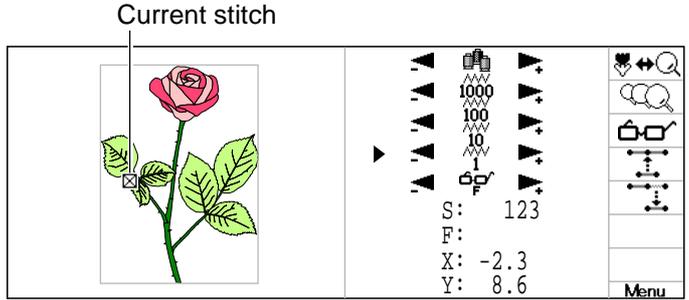

2. Press the **SET**.

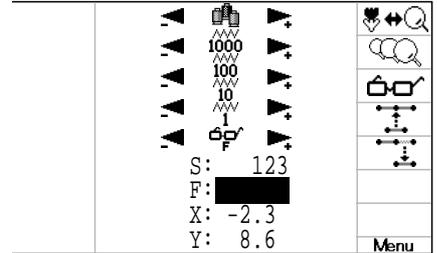

3. Press up/down of  to select desired

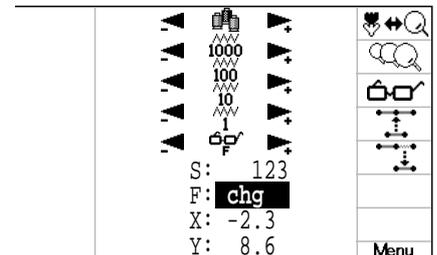


Keypad Number	Function code	description
0	No function	Normal
1	sph	Speed control normal
2	sp1	speed control 1
3	sp2	speed control 2
4	sp3	speed control 3
5	cut	thread trim
6	stp	stop command
8	chg	color change
+/-	^	jump

- If you add a color change the machine inserts a empty stitch after the command.
- You can combine a Jump command with any other command except a color change.
If you combine a color change and a jump command it will show in the menu but.
- You can not edit or insert a command on the last stitch of a design.

function code.

4. Press the **SET**.
The function is set.

Set O.K.

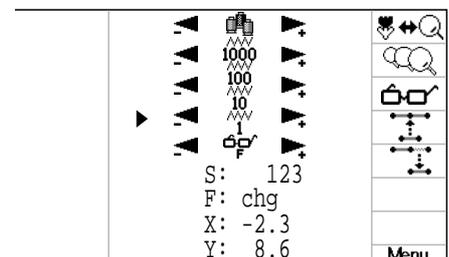

When you finish the editing, go to "Finish editing".  19-A

● Insert stitch • Erase stitch

Add *zero stitch to selected *stitch or erase the selected stitch.

■ The stitch with move data can not be erased.
You will receive an error if you attempt it.

Before editing

S:1232	S:1234	S:1236
X: 0.8	X: 0.8	X: 0.8
Y: 6.4	Y: 6.4	Y: 6.4

S:1233	S:1235
X: 0.8	X: 0.8
Y: -6.4	Y: -6.4

S : Number of stitches
X : Move data of sidewise
Y : Move data of lengthwise

⊕ shows selected stitch.

Insert
Insert zero stitch at stitch No.1233.

S:1232	S:1235	S:1237
X: 0.8	X: 0.8	X: 0.8
Y: 6.4	Y: 6.4	Y: 6.4

S:1233	S:1236
X: 0.8	X: 0.8
Y: -6.4	Y: -6.4

S:1234
X: 0.0
Y: 0.0

Before editing

S:1232	S:1235	S:1237
X: 0.8	X: 0.8	X: 0.8
Y: 6.4	Y: 6.4	Y: 6.4

S:1233	S:1236
X: 0.8	X: 0.8
Y: -6.4	Y: -6.4

S:1234
X: 0.0
Y: 0.0

S : Number of stitches
X : Move data of sidewise
Y : Move data of lengthwise

⊕ shows selected stitch.

Erase
Erase stitch No. 1234.

S:1232	S:1234	S:1236
X: 0.8	X: 0.8	X: 0.8
Y: 6.4	Y: 6.4	Y: 6.4

S:1233	S:1235
X: 0.8	X: 0.8
Y: -6.4	Y: -6.4

Insert stitch

1. Using "stitch selection" from the preceding page, the machine will display either of the intended stitch function codes.

Current stitch

2. Press **(MENU)** and select with .

3. Press the **(SET)**.


A zero stitch is inserted at the selected stitch position.
If needed, add function code according to "Function Code". 19-6

Insert


When you finish the editing, go to "Finish editing". 19-A

Erase stitch



- Using "stitch selection" from the preceding page the machine will display either of the intended stitch function codes.

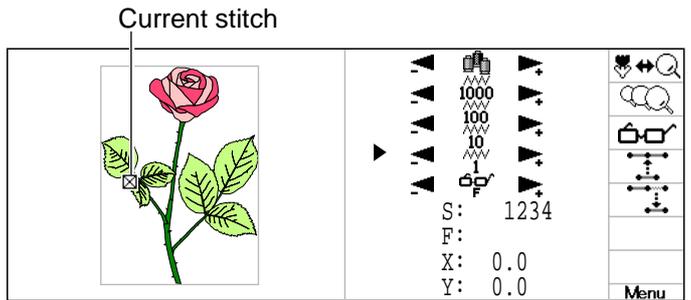

- Press **(MENU)** and select  with .

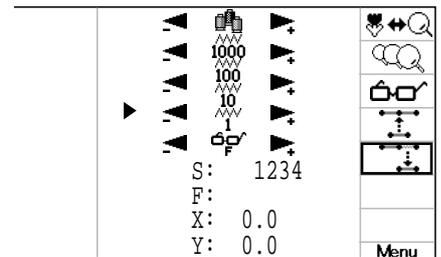

- Press the **(SET)**.
The selected stitch is deleted.
The stitch number deleted is replaced with that of the next stitch.

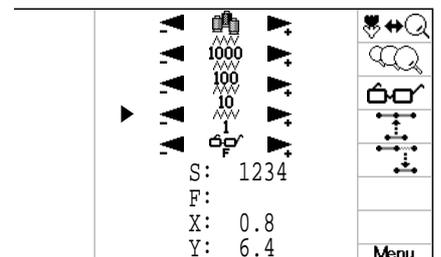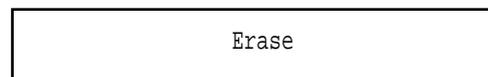


When you finish the editing, go to "Finish editing".  19-A

● Finish editing


When you finish editing, follow these steps.

1. Press the **(ESC)**.

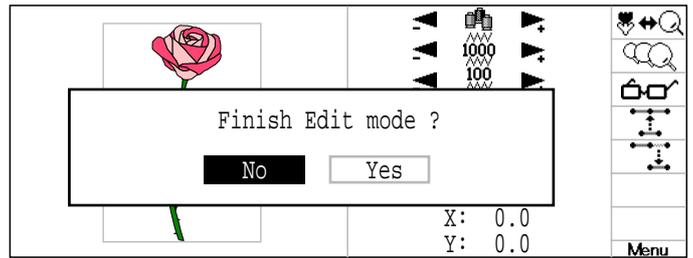

2. When you finish, select "Yes" with  and press **(SET)**.
The edit is finished and the display returns to MENU.

If you wish to cancel, press **(SET)**.

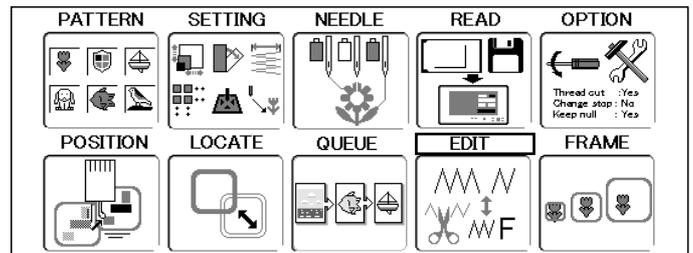

If you press the **(ESC)** you will return to Drive Mode.

By default the machine adjusts the position of the pattern to the center of the frame and checks if the pattern fits the embroidery area.

This helps you to check whether or not the selected pattern fits in the desired hoop.

The pattern can be centered to each frame (round, square, cap). This helps confirm positioning between the embroidery area and the pattern.

If you change the frame position by the frame move key, the display will be changed and you can check the position onscreen.

- ⚠ The "monitor display" checks whether or not the pattern fits the embroidery area of the frame you are going to use before starting the operation.
This is not a safety device that will prevent crashes if pattern size is too large for the frame; it is intended for your reference only when judging the fit of a pattern to a given size frame. After using "monitor display", do not move the frame. If you do so the machine may be damaged due to the needle or pressure foot hitting the frame.
- ⚠ Make sure to perform "Registration number selection" when changing hoop size. If not done, the machine may be damaged from the needle or pressure foot hitting the frame.


- This function can be used with the function of scale, *convert, mirror, width adjustment, offset, frame out and repeat sewing setting.
- This function can not be used with the function of batch drive setting.

● Tubular round frame, Tubular square frame


Selecting a frame (Tubular Round frame, Tubular Square frame).

The embroidery area for each registered frame is set to the inside of the frame edge to allow for pressure foot clearance. (Fig. 1)


This allows confirmation of positioning between the embroidery area and the pattern.

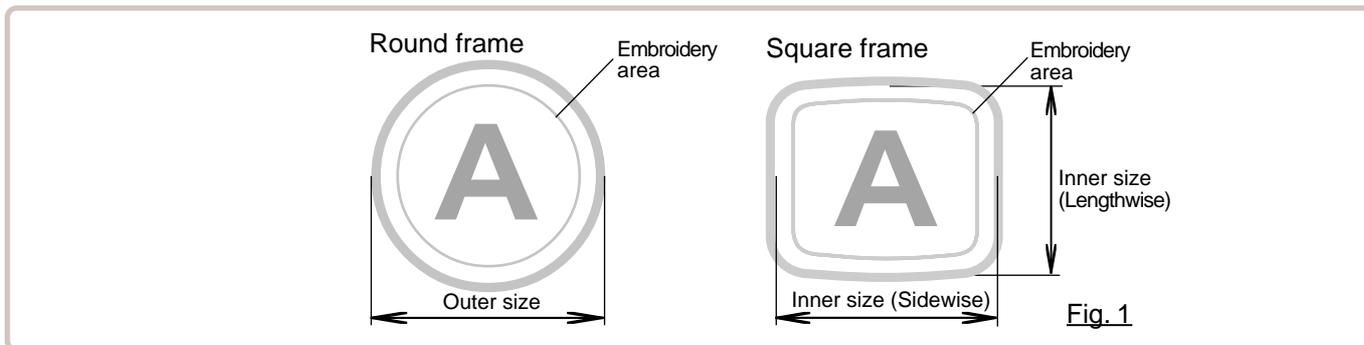

1. Confirm that  (Top) appears in the display and go to step 4.
If this does not appear, go to step 2.

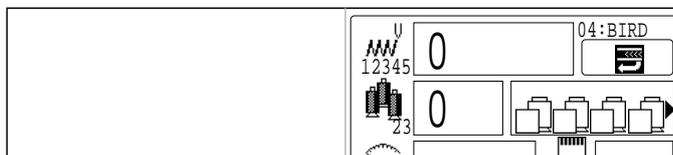


2. Press **(FUNC)** and select "Top" with .

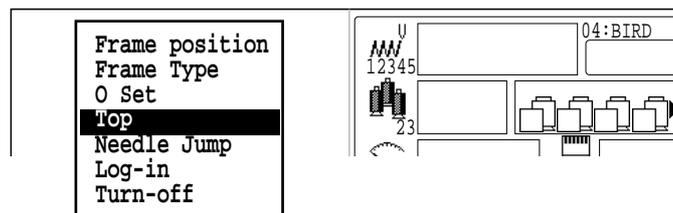


3. Press the **(SET)** button.


Upper right indication of  will be shown.

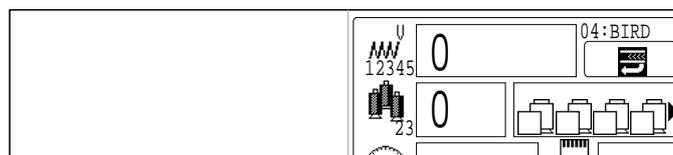

4. Press **(MENU)** and Select "FRAME" with .

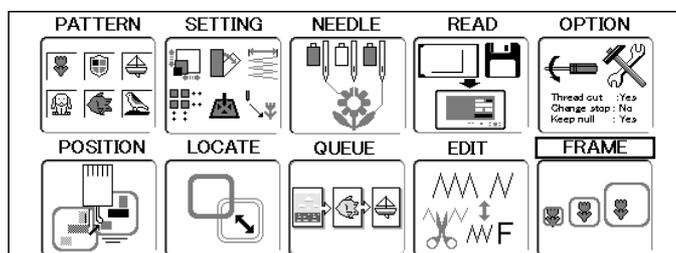

5. Press the **(SET)** button.
Indicates the select frame.

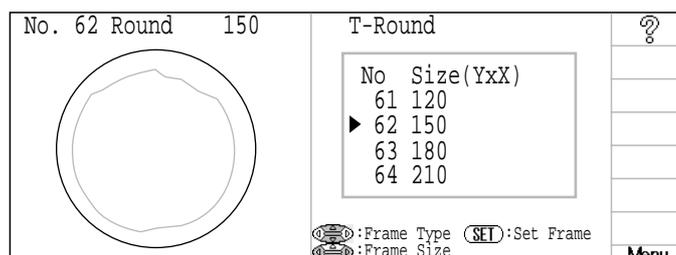

6. Press right /left of  to select the type of frame.

Press up/down of  to select desired size of frame.

7. Press the **SET** button.

 **CAUTION: To prevent accidents.**
The moving head moves quickly.
The frame moves quickly.
Keep your hands away from the frame.

8. Press **SET** to carry out.

The head moves left to needle 1.
The type and shape of the frame is in black and embroidery area and outline of the pattern itself appear in red. All are displayed on the left together.

9. By  position of design can be moved.

10. Press the **SET** button.

11. Press the **SET** button.

Frame starts to move for tracing.
Please confirm that pressure foot and needle do not hit to frame.

If press **ESC**, skip trace operation.




To stop tracing, press **ESC**.

12. Press the **SET** button.





The display returns to MENU.

Start sewing by pressing the **START**.

Select "No" with  and press **SET**.
The display will return to step 8.

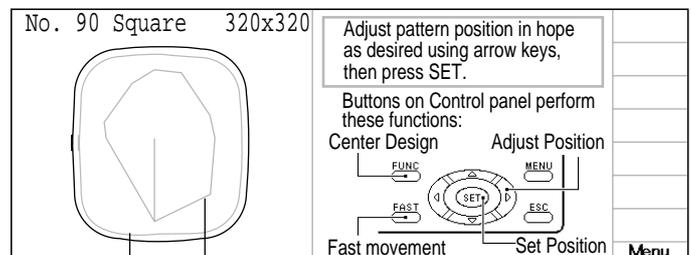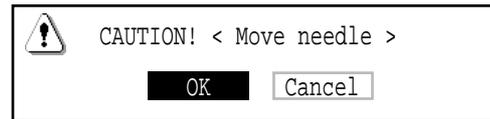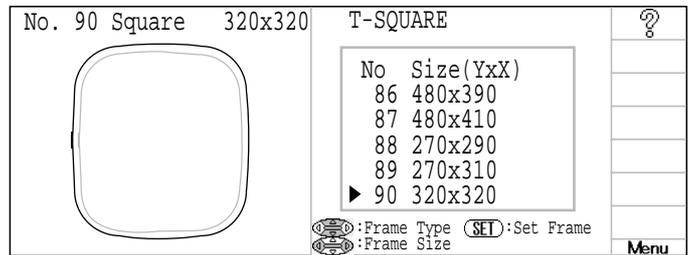

Embroidery area Outline of pattern

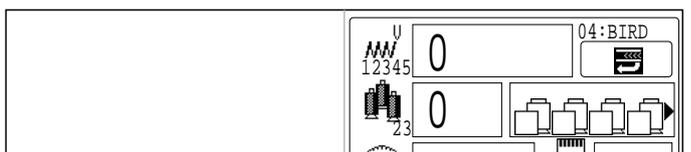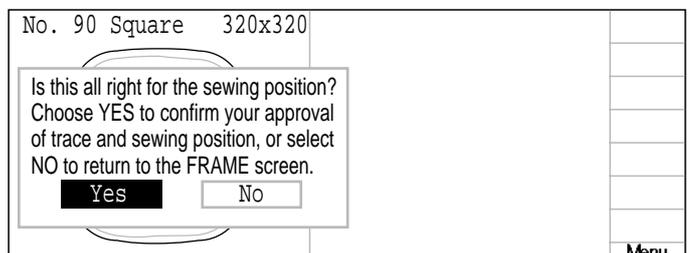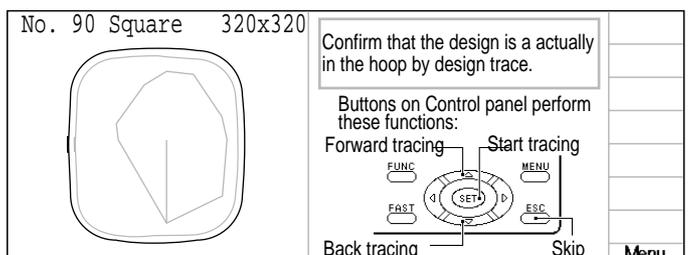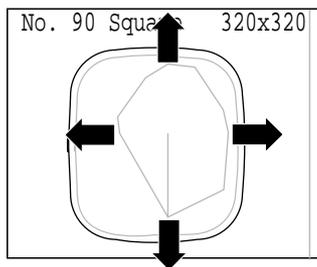

● Cap frame

The embroidery area of HAPPY semi-wide and wide cap frames is saved in the machine. The Y axis of the embroidery area can be adjusted for a variety of caps. (Fig. 1)



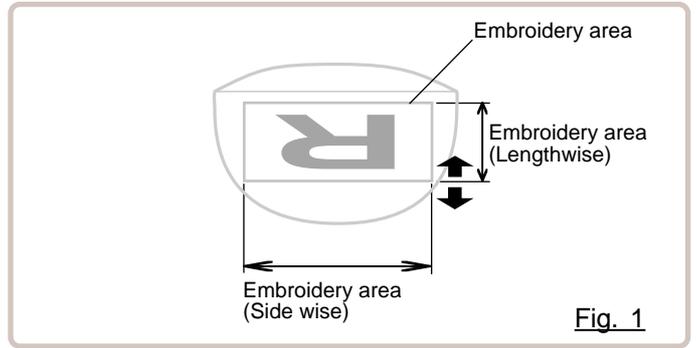


Fig. 1


1. Confirm that  appears in the display and go on to step 4.
Go to step 2, if this symbol does not appear.

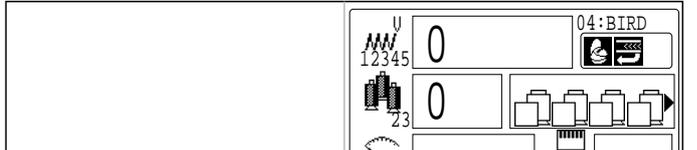


2. Press **(FUNC)** and select "Top" with .

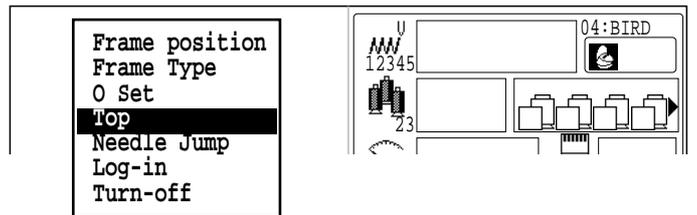


3. Press the **(SET)** button.
 will be shown.

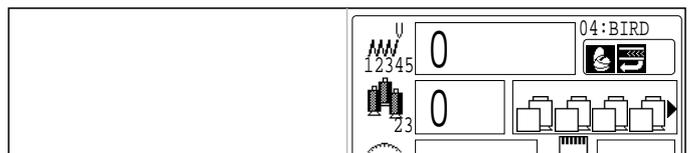


4. Press **(MENU)** and Select "FRAME" with .

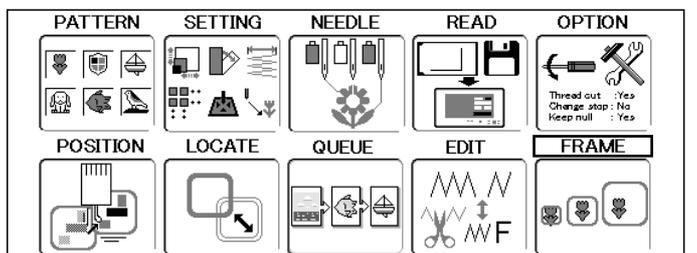

5. Press the **(SET)**.
Indicates the select frame.

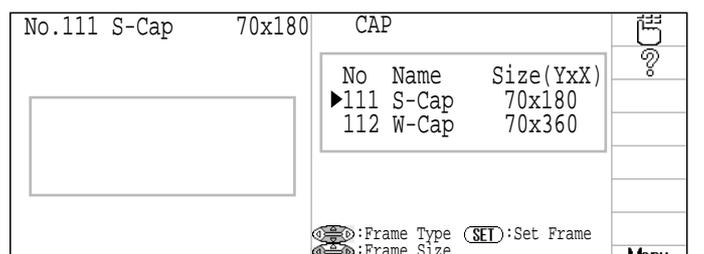

6. Press up/down of  to select desired type of frame.

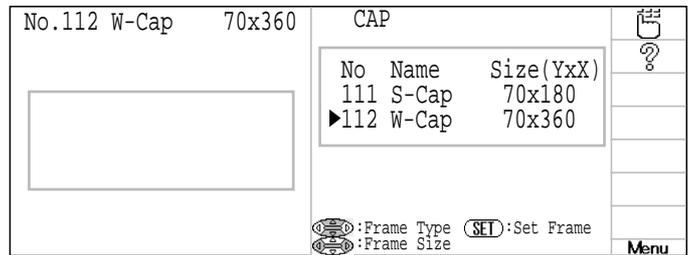

7. Press **MENU** and press **SET** for change embroidery area.

If you do not need to change, go to step 12.

8. Press the **SET** button.

9. Press right /left of  to select the digit and press up/down of  to select the number .

Enter the width of the cap.

Size Y : 40 ~ 70mm (Semi-wide)
40 ~ 80mm (Wide)

10. Press the **SET** button.
The setting is fixed.

11. Press the **ESC**.

12. Press the **SET** button.



CAUTION: To prevent accidents.
The moving head moves quickly.
The frame moves quickly.
Keep your hands away from the frame.




CAUTION! < Move needle >



OK Cancel

13. Press **SET** to carry out.

The head moves left to needle 1.
The type and shape of the frame (black) and embroidery area (red) and outline of pattern (red) are shown to the left.
This helps you check if the pattern fits the embroidery area of the frame or not.

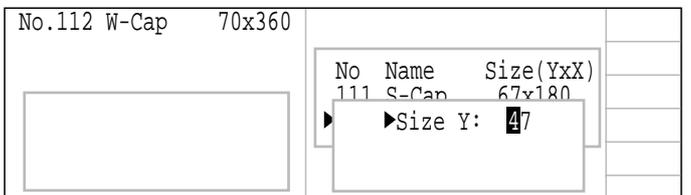


▶Size Y: 47

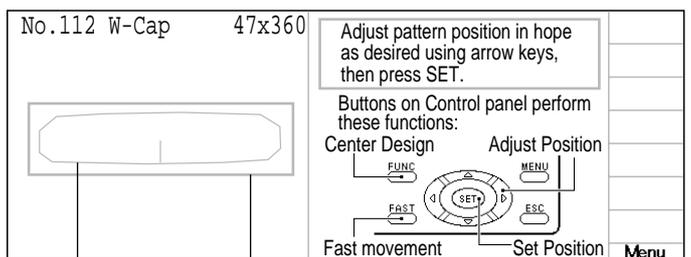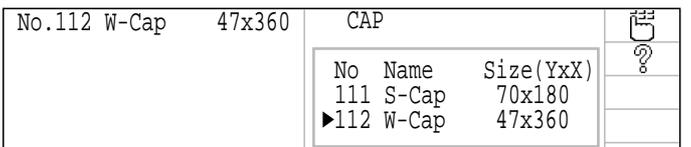


Outline of pattern Embroidery area

14. By  position of design can be moved.

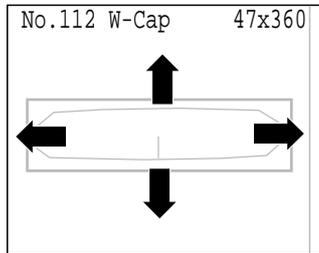

15. Press the **SET** button.

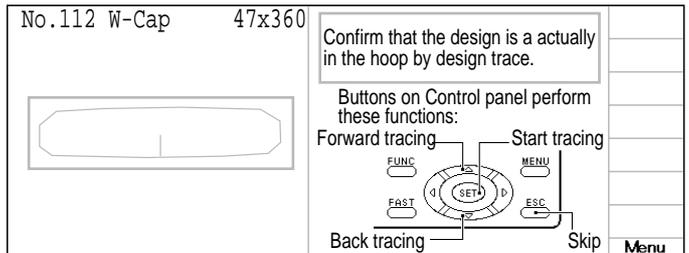


16. Press the **SET** button.

Frame starts to move for tracing.
Please confirm that pressure foot and needle do not hit to frame.

If press **ESC**, skip trace operation.

To stop tracing, press **ESC**.

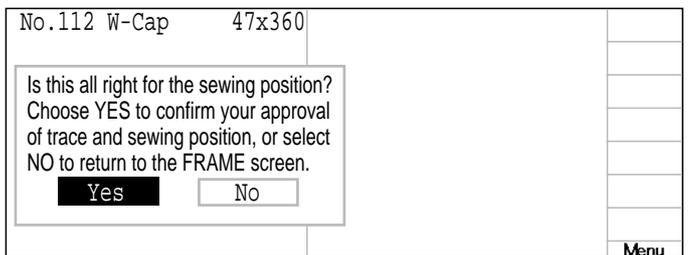


17. Press the **SET** button.

The display returns to MENU.

Start sewing by pressing the **START**.

Select "No" with  and press **SET**.


The display will return to step 13.

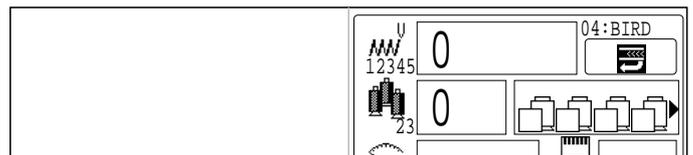


●Boadere frame

Selecting a boadere frame.


This allows confirmation of positioning between the embroidery area and the pattern.

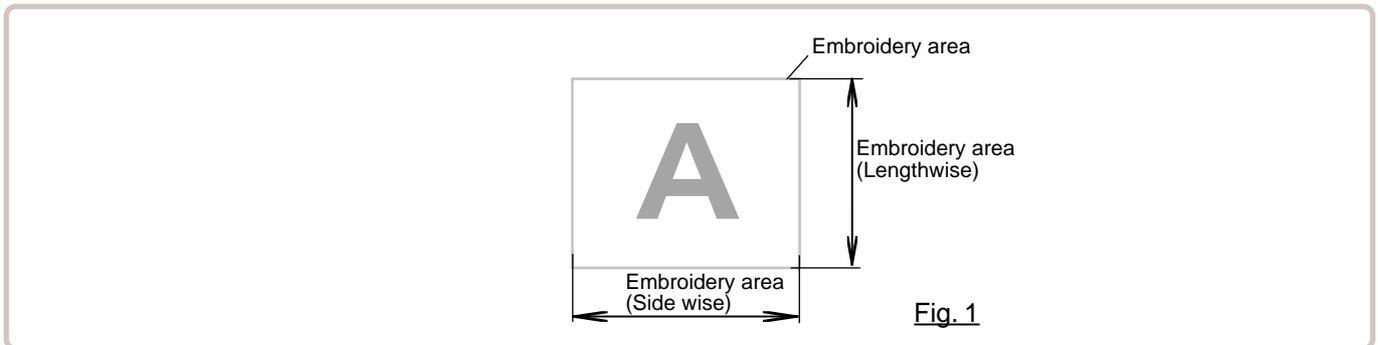


1. Confirm that  (Top) appears in the display and go to step 4.
If this does not appear, go to step 2.

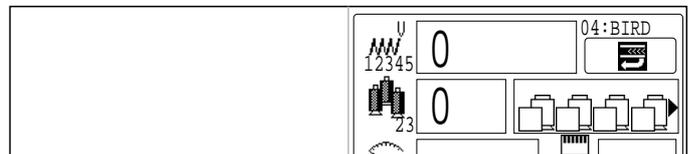


2. Press **FUNC** and select "Top" with .

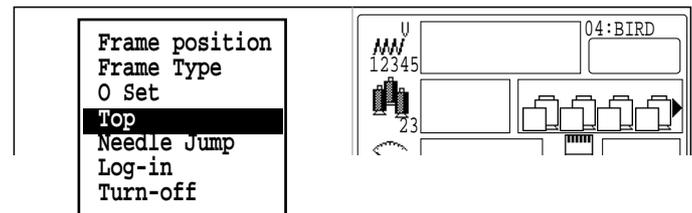


3. Press the **SET** button.
Upper right indication of  will be shown.

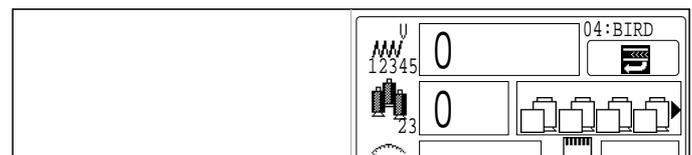

4. Press **MENU** and Select "FRAME" with .

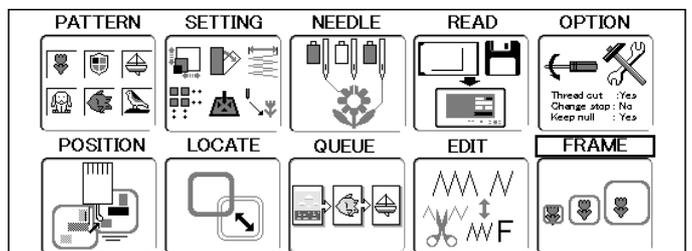


5. Press the **SET** button.
Indicates the select frame.

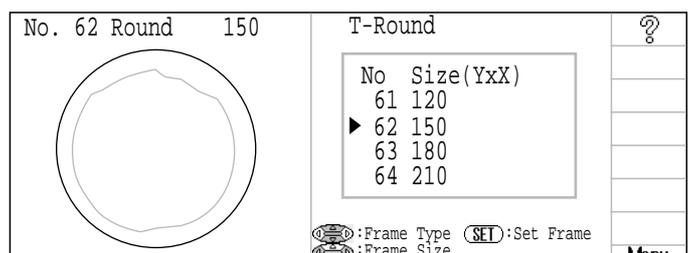

FRAME CONFIRMATION


20-6c

6. Press right/left of  to select the boader frame.

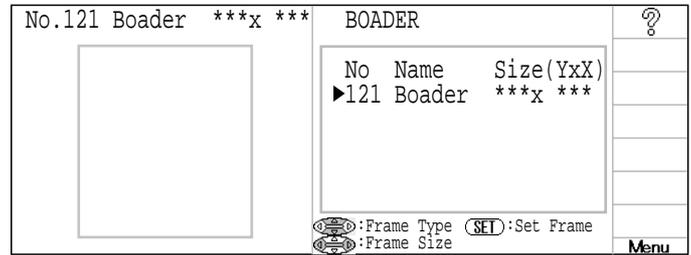


7. Press the **SET** button.

CAUTION: To prevent accidents.
The moving head moves quickly.
The frame moves quickly.
Keep your hands away from the frame.

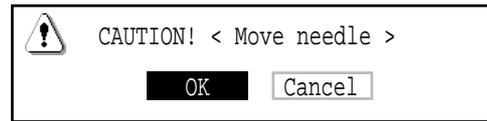


8. Press **SET** to carry out.
The head moves left to needle 1.
The type and embroidery area and outline of the pattern itself appear in red.
All are displayed on the left together.

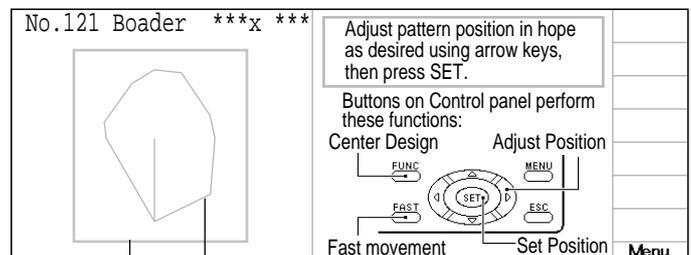


Embroidery area Outline of pattern


9. By  position of design can be moved.

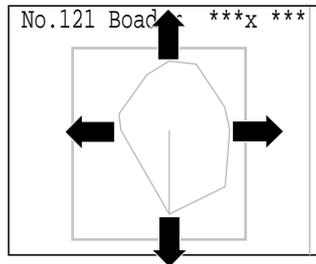

10. Press the **SET** button.

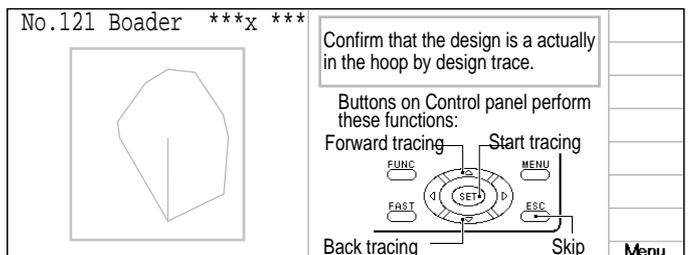


11. Press the **SET** button.
Frame starts to move for tracing.
Please confirm that pressure foot and needle do not hit to frame.
If press **ESC**, skip trace operation.
To stop tracing, press **ESC**.

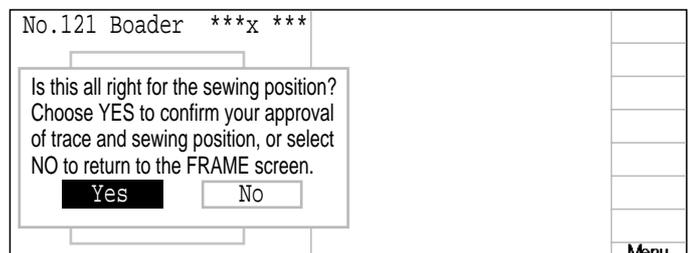

12. Press the **SET** button.
The display returns to MENU.
Start sewing by pressing the **START**.

Select "No" with  and press **SET**.
The display will return to step 8.

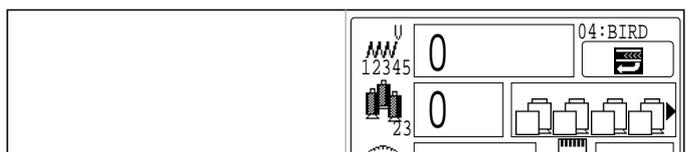

● User-defined frames

You can create up to 20 user-defined frames in addition to the default frames in memory.

User-defined frames will be registered under the frame No.131-150.

User-defined frame No.131-135 : You can create round frame and square frame entering diameter of round frame.

User-defined frame No.136-150 : You can create round frame, square frame and special shape frame entering detail size of frame.


User-defined frames (No.131 ~ 135)

The embroidery area of each registered frame is set to the inside of the frame edge for pressure foot clearance. (Fig. 1, 2)

■ The embroidery area of each registered frame is set to the inside of the frame edge for pressure foot clearance. (Fig. 1, 2)


When you use square frame as shown in fig.3, pressure foot may hit the corner of frame.

In this case you need to create frame as special shape under the frame No.136-150.

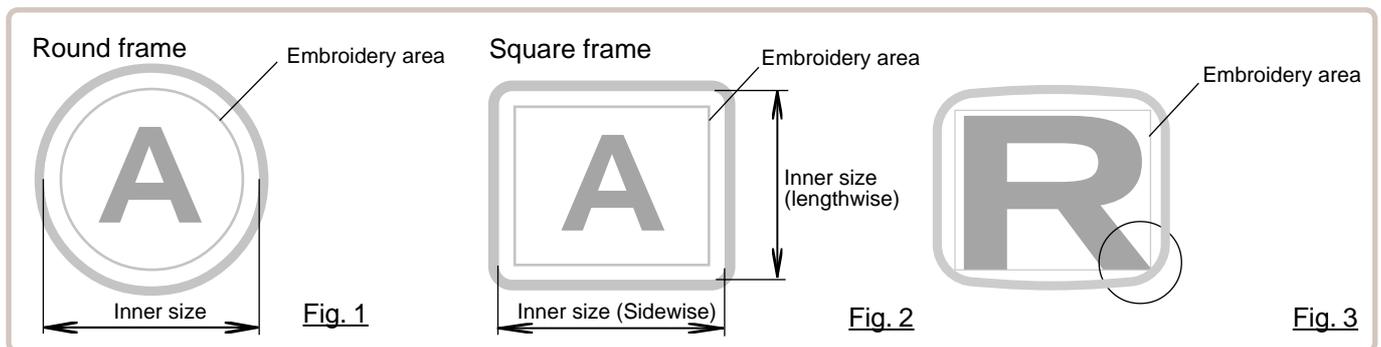


1. Confirm that  appears in the display and go on to step 4.

Go to step 2 if this symbol does not appear.

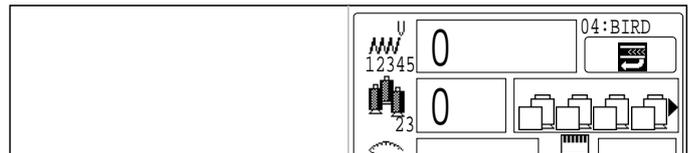


2. Press **(FUNC)** and select "Top" with .

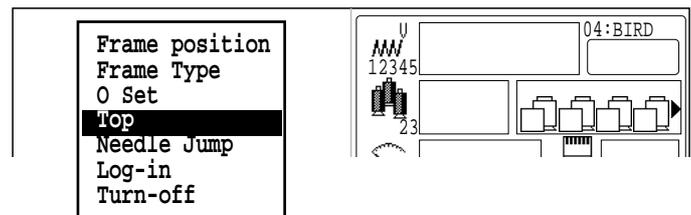


3. Press the **(SET)** button.

Upper right indication of  will be shown.

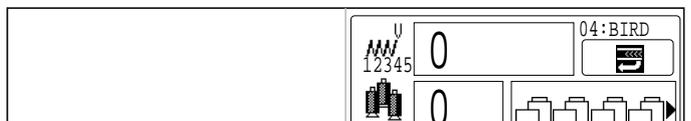


4. Press **(MENU)** and Select "FRAME" with

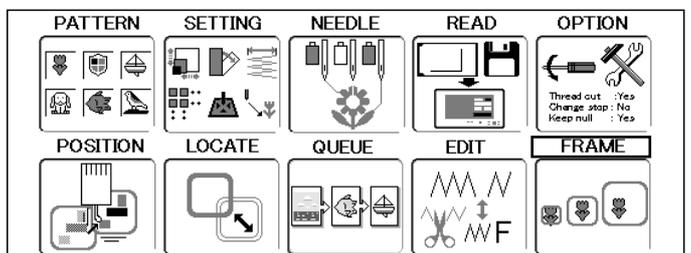


5. Press the **(SET)**.

Indicates the select frame.

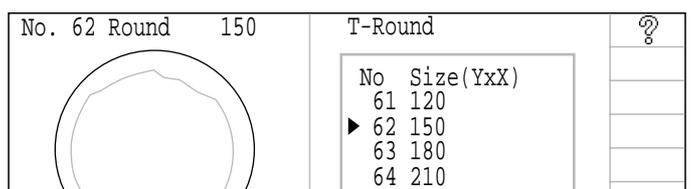

6. Press right /left of  to select "USER (No.131 ~ 135)".

Press up/down of  to select desired size of frame.

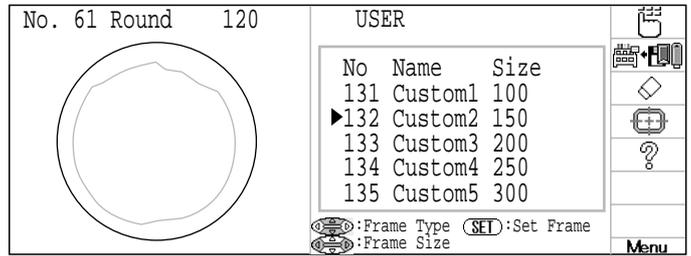

7. Press **(MENU)**, to select  and press **(SET)** button to change the embroidery area.

If you do not need to make a change, go to step 15.

8. Press the **(SET)** button.

9. Press up/down of  to select the hoop (Class).

- : Round frame
- : Square frame



10. Press the **(SET)**.
 Select direction X or Y you wish to change frame size by up/down of .

11. Press the **(SET)** button.


12. Press right /left of  to select the digit and press up/down of  to select the number .
 Input number for size of embroidery area.

13. Press the **(SET)** button.
 The setting is fixed.










14. Press the **(ESC)** button.

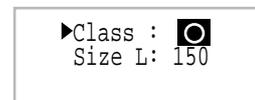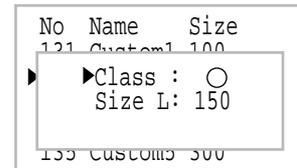

Case for selected round frame

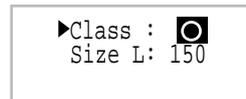

Case for selected square frame

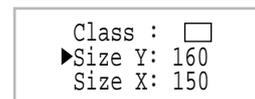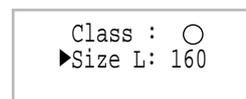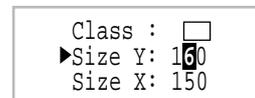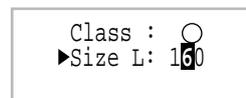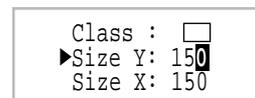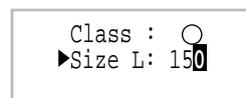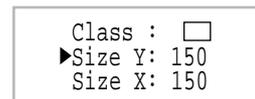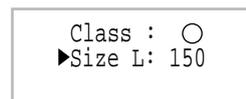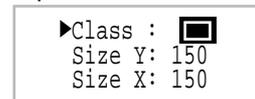


No	Name	Size
131	Custom1	100
▶132	Custom2	160
133	Custom3	200
134	Custom4	250
135	Custom5	300

No	Name	Size
131	Custom1	100
▶132	Custom2	160x150
133	Custom3	200
134	Custom4	250
135	Custom5	300


15. Press the **SET** button.

CAUTION: To prevent accidents.
 The moving head moves quickly.
 The frame moves quickly.
 Keep your hands away from the frame.

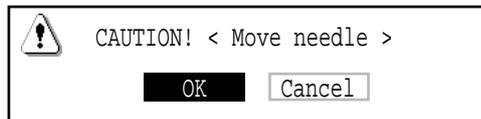


16. Press **SET** to carry out.

The head moves left to needle 1.
 The type and shape of the frame (black) and embroidery area (red) and outline of pattern (red) are shown to the left.
 This helps you check if the pattern fits the embroidery area of the frame or not.

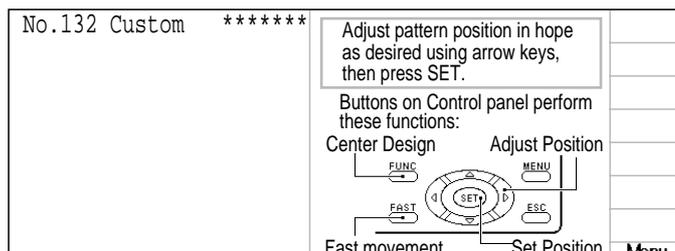


17. By  position of design can be moved.

Case for selected round frame

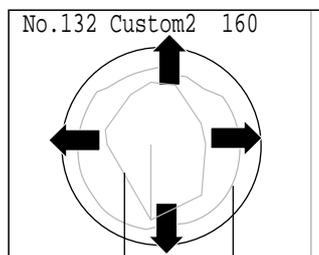


Outline of pattern Embroidery area

Case for selected square frame

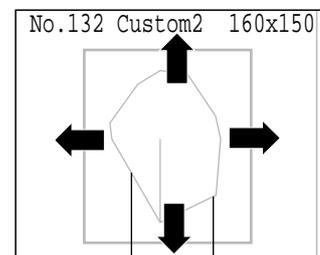


Outline of pattern Embroidery area

18. Press the **SET** button.

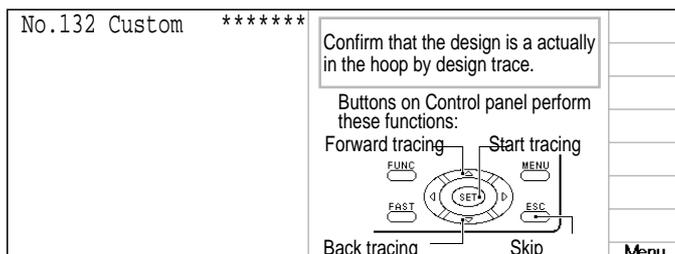


19. Press the **SET** button.

Frame starts to move for tracing.
 Please confirm that pressure foot and needle do not hit to frame.
 If press **ESC**, skip trace operation.
 To stop tracing, press **ESC**.

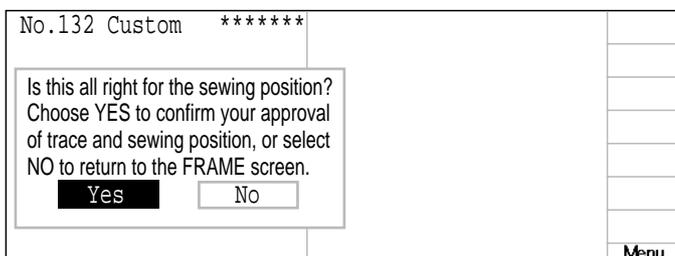

20. Press the **SET** button.

The display returns to MENU.
 Start sewing by pressing the **START**.

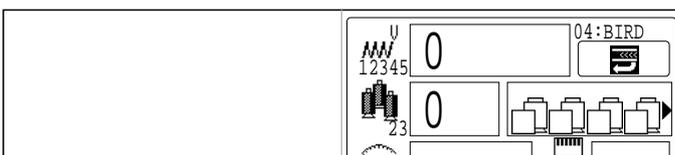

Select "No" with  and press **SET**.
 The display will return to step 16.


User-defined frames (No.136 ~ 150)

You need to prepare for the data which entered the shape of the frame and entry the entered data.

You can enter the data up to 15 different size of custom frames.


You need to prepare custom frame size data for entry the size to your machine.  20-B

The embroidery area for each registered frame is set to the inside of the frame edge to allow for pressure foot clearance. (Fig. 1)

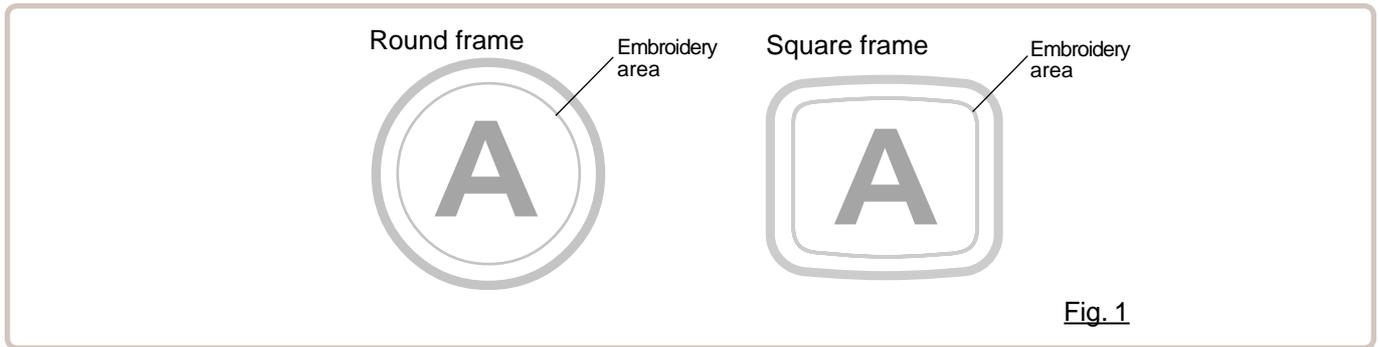

How to make frame size data of your User-defined frames (No.136 ~ 150)

We need to use text edit software of PC like "WordPad" and make frame size data with following constitution, then entry the data to your machine.

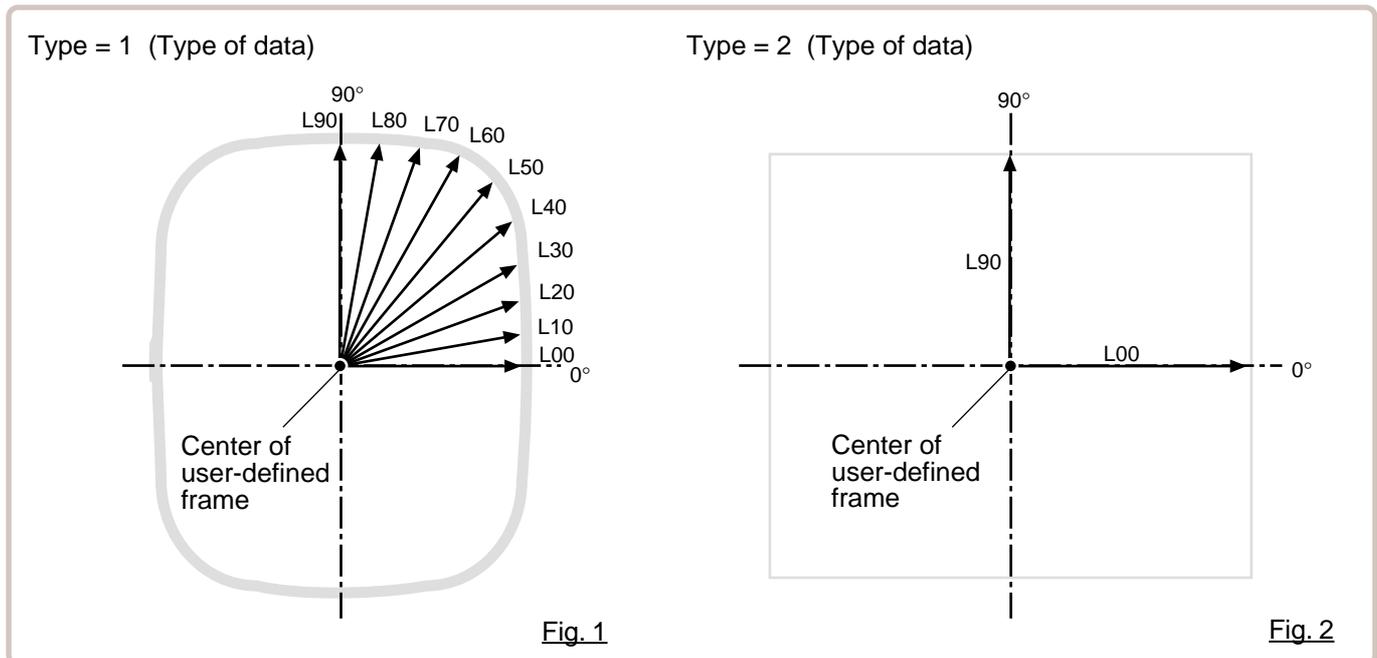

Frame data constitution

Type = [Type of data]

Name = "[Name of frame (Up to 7 letters)]"

Form = [L00],[L10],[L20],[L30],[L40],[L50],[L60],[L70],[L80],[L90] (Frame shape)

Type : Select type of data by following number.

1 : Frame size 2 : Possible embroidery size

Note: If select "1", machine will memory reduced size for Presser foot diameter automatically.

If select "2", machine will memory exactly same size as can embroider it on.

Name : Naming the your User-custom frame. Pick up to 7 letters up with a "mark.

Form : Refer the above figure. Please fill it out every 10 degrees of dimensions to the inside of the frame heartily. (20 to 500mm)

Fill it out length from point from No. L00 till L90 total 10 points size using ", " between the each size data.

If your frame shape is Round, the every 10 points length frame size data should be same.

If you select Type (Type of data) "2", please put length data of L00 and L90 only.

END : Please fill out the line of the last of data. Please make entry of "END" by all means.

Please use half width character for the length data.

Please cut off the decimal of the length.

Example: 102.3mm -> 102

When you save the frame size data, please save as text document form and file name should be less than 8 characters.

Extension should be ".TXT"

Example: ROUND250.TXT


Please save the frame size data to machine usable memory media and read the data by embroidery machine.  20-D

Example of making the frame size data

Sample for each teaching method (Type 1 and 2).


Ex. Round frame

Type = 1
Name = "Round"
Form = 125,125,125,125,125,125,125,125,125
END

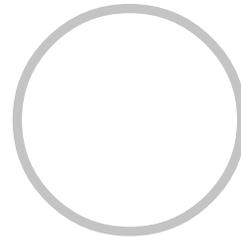


Ex. Square frame

Type = 1
Name = "PS240"
Form = 120,122,126,130,128,120,106,100,96,94
END

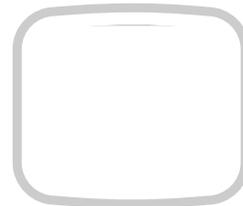


Ex. Possible embroidery size

Type = 2
Name = "T-SC-01"
Form = 90,60
END




Reading frame data


1. Press **(MENU)** and Select "FRAME" with

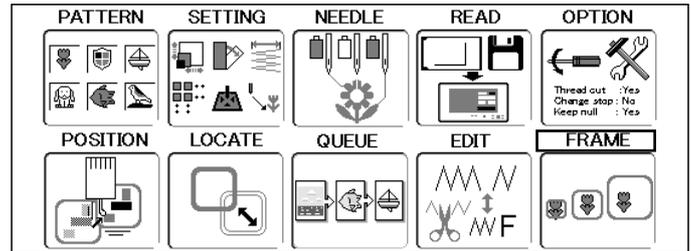


2. Press the **(SET)**.
Indicates the select frame.

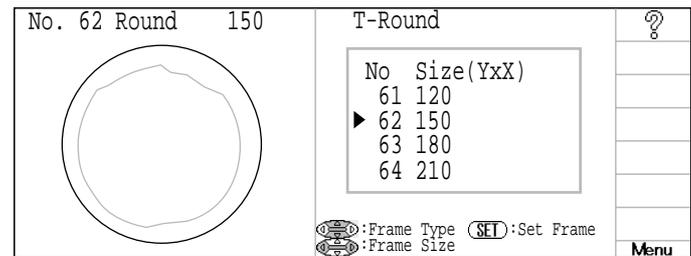


3. Press right /left of to select "USER (No.136 ~ 150)".

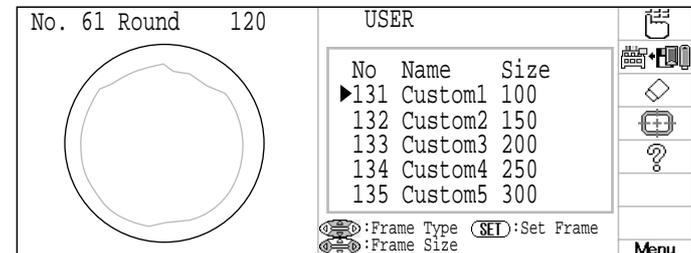


4. Press **(MENU)** and select with

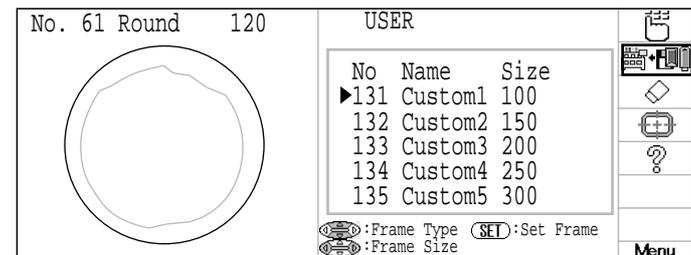

5. Press the **(SET)**.

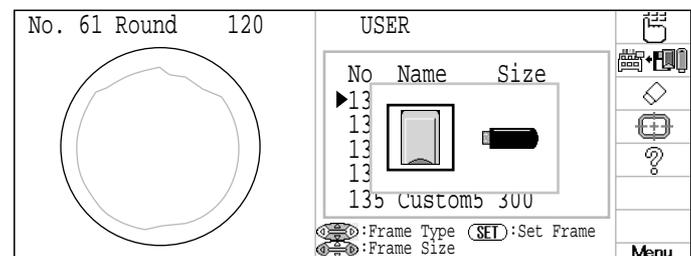



6. Select memory card or USB memory with

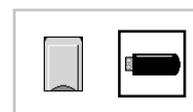

7. Press the **SET**.

Indicates frame data of the memory media.

 Memory media removal is prohibited. Pattern data in the memory media or machine can be destroyed if you remove the memory media at this time.

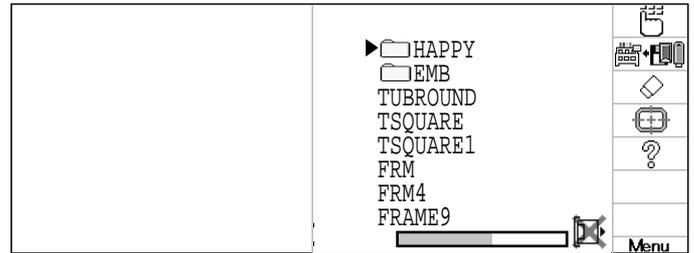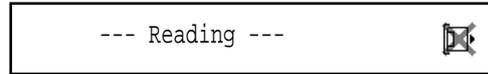


 Folder : Contents of folder will be displayed when you select this icon and press **SET**.

 Return : Once you move into the folder, this icon will be displayed at the top of the list.

You will be able to move off from the folder by select this icon and press **SET**. You will be also able to move off from the folder if you just press **ESC**.

8. Select pattern with .


Display can be scrolled by pressing  left and right when there is a white part on the scroll display.

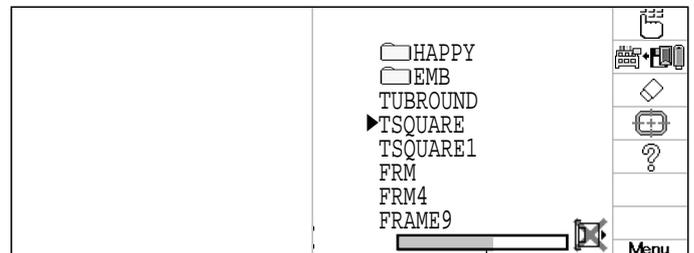


Scrolling display

9. Press the **SET** button.

Once frame data is read, display the selected your custom frame.

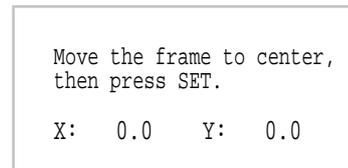


10. Move embroidery frame to frame center point by .

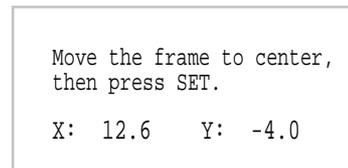

11. Press the **SET**.

Memorized frame center point coordinate to the machine.

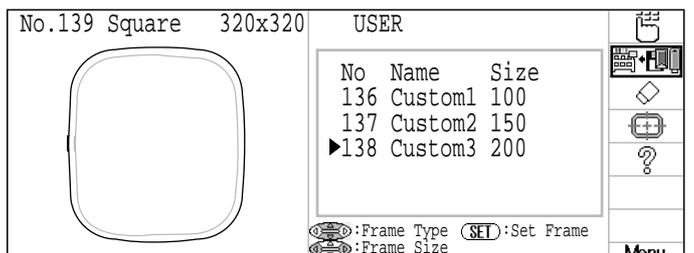

12.If you like to confirm frame size against your embroidery design, please go to next step of "Frame Confirmation" for User-defined frames (No.136 ~ 150).

By pressing **(ESC)**, enable to move off from the folder ( is shown at the top of the list) or enable to move back to MENU ( is not shown at the top of the list).

Even if you are inside the sub-folders, enable to back to MENU directly by holding down the **(ESC)**.


Press **(ESC)** to return to Menu mode.

Frame confirmation


Selecting a User-defined frames (No.136 ~ 150).

This allows confirmation of positioning between the embroidery area and the pattern.

1. Confirm that  (Top) appears in the display and go to step 4.
If this does not appear, go to step 2.

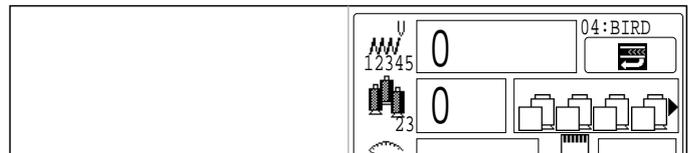


2. Press **(FUNC)** and select "Top" with .

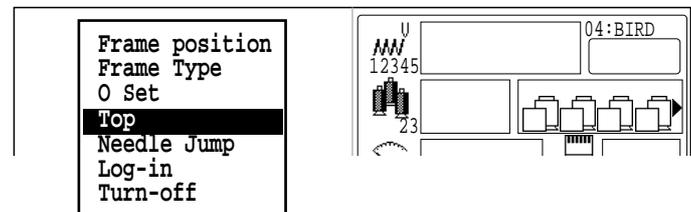


3. Press the **(SET)** button.


Upper right indication of  will be shown.

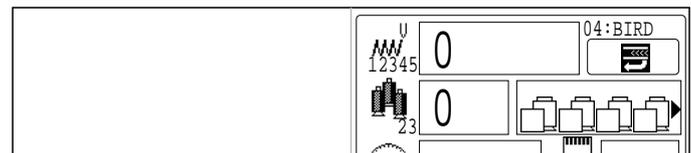


4. Press **(MENU)** and Select "FRAME" with .

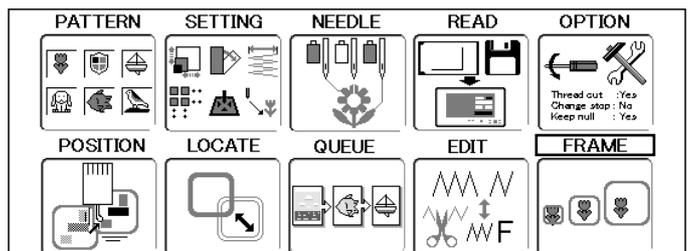

5. Press the **(SET)** button.
Indicates the select frame.

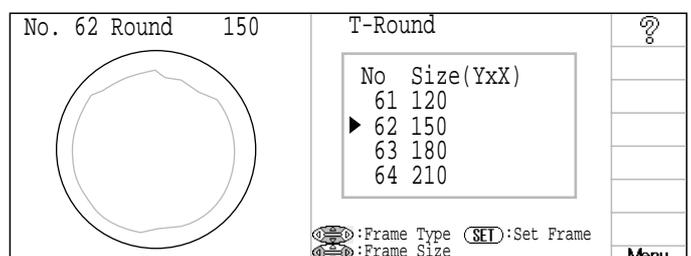

6. Press right /left of  to select the user-defined frame.

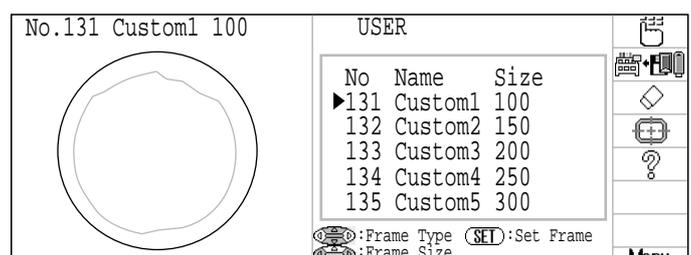

FRAME CONFIRMATION

20-H

7. Press right /left of  to select the type of frame.


Press up/down of  to select desired size of frame.

8. Press the **SET** button.


 **CAUTION: To prevent accidents.**
The moving head moves quickly.
The frame moves quickly.
Keep your hands away from the frame.

9. Press **SET** to carry out.

The head moves left to needle 1.
The type and shape of the frame is in black and embroidery area and outline of the pattern itself appear in red. All are displayed on the left together.

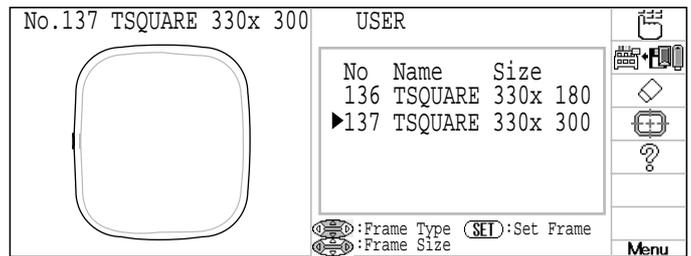


10. By  position of design can be moved.

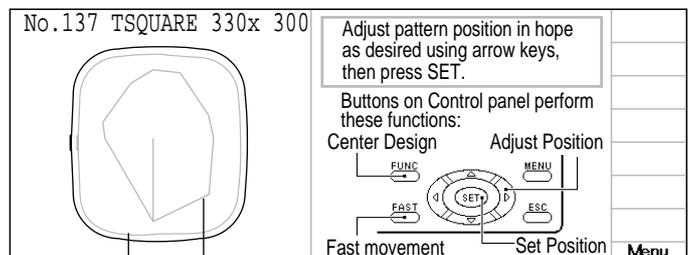

Embroidery area Outline of pattern

11. Press the **SET** button.

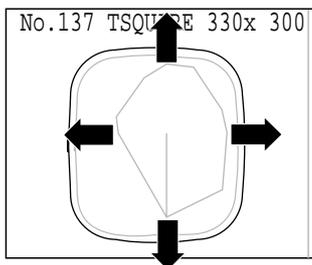


12. Press the **SET** button.

Frame starts to move for tracing.
Please confirm that pressure foot and needle do not hit to frame.

If press **ESC**, skip trace operation.


To stop tracing, press **ESC**.

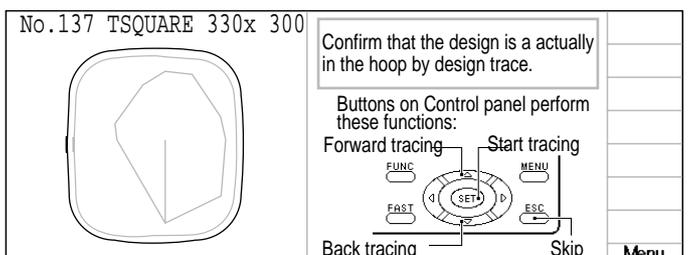


13. Press the **SET** button.

The display returns to MENU.

Start sewing by pressing the **START**.

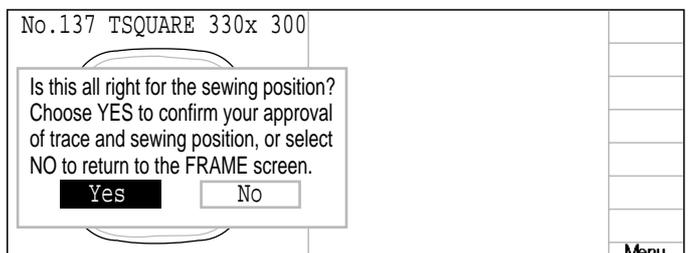


Select "No" with  and press **SET**.
The display will return to step 9.

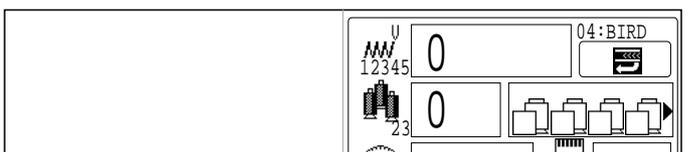


How to delete the resisted user-defined frames (No.136 ~ 150).

Delete resisted User-defined frame from memory.


1. Press **(MENU)** and Select "FRAME" with .

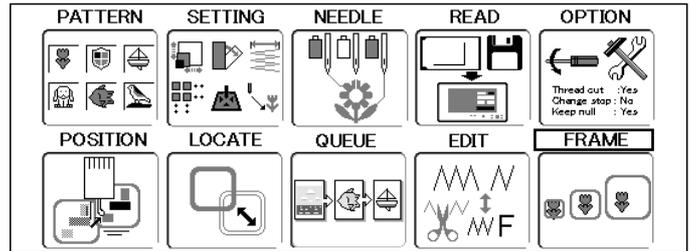


2. Press the **(SET)**.
Indicates the select frame.

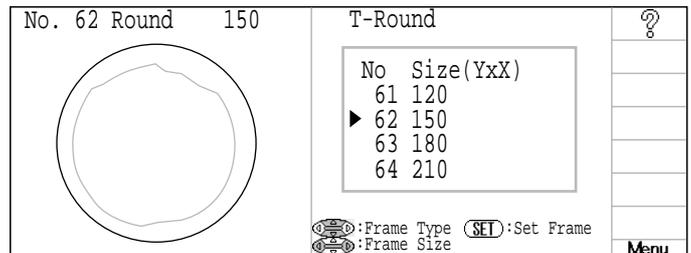


3. Select desired User-defined frames (No.136 ~ 150) with .

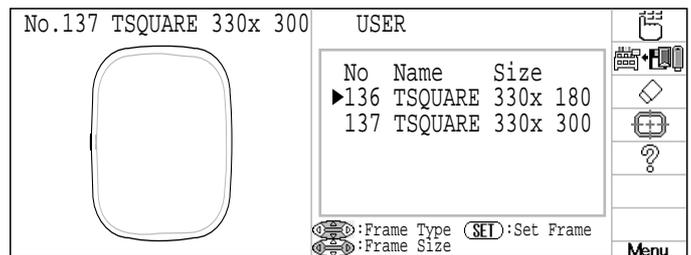

4. Press **(MENU)** and select  with .

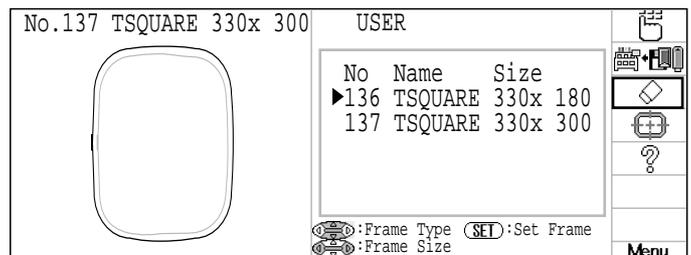

5. Press the **(SET)**.
The user-defined frames will be deleted.

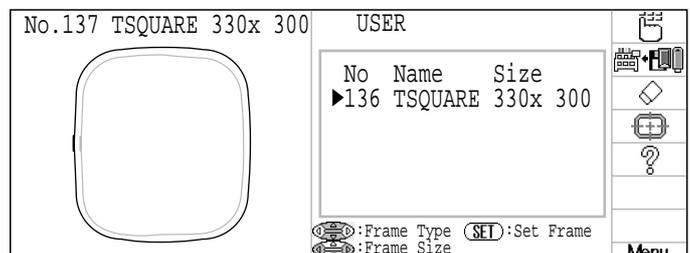


Press **(ESC)** to return to Menu mode.
Press **(ESC)** once again to return to Drive mode.

How to change center point of frame (No.131 ~ 135, No.136 ~ 150)


You can change memorized frame center point.

When you set your frame and use machine function of "Frame position" and "Center" (P 3-B),
If your frame is not center, please practice following steps for center setting again.


1. Press **(MENU)** and Select "FRAME" with

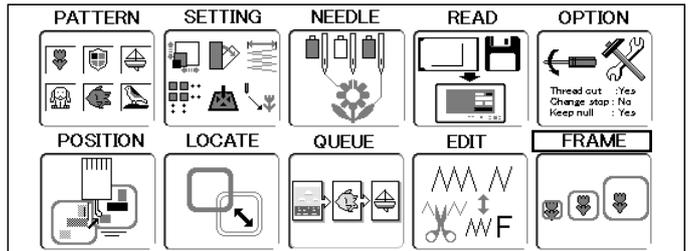


2. Press the **(SET)**.
Indicates the select frame.

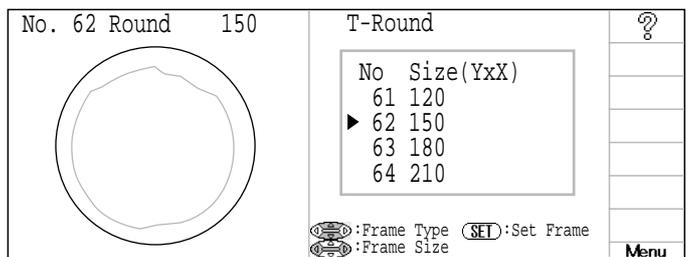


3. Select desired User-defined frames with

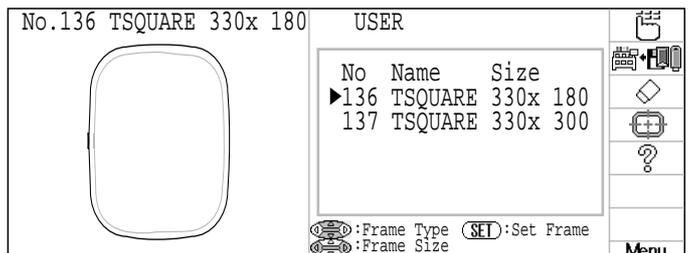


4. Press **(MENU)** and select  with .

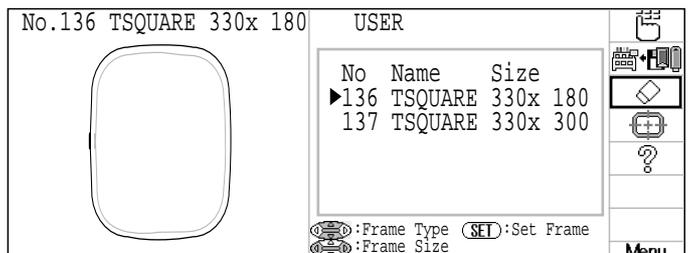

5. Press the **(SET)**.

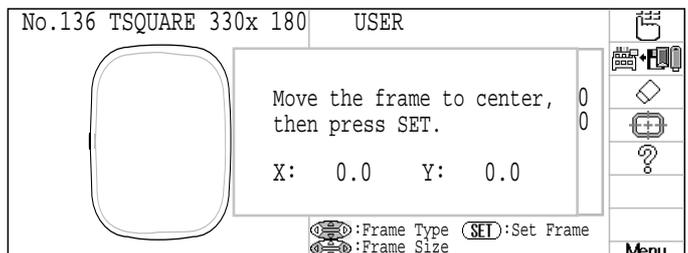


6. Move embroidery frame to frame center point by .

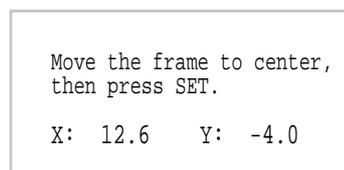

FRAME CONFIRMATION

20-K

7. Press the **SET**.
Memorized frame center point coordinate to the machine.

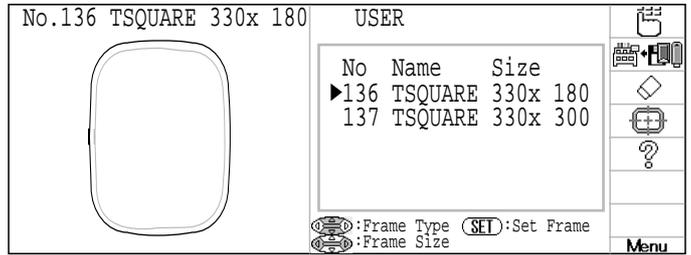

Press **ESC** to return to Menu mode.


Press **ESC** once again to return to Drive mode.

● Erase


You can erase designs from the floppy disk by using this feature.

1. Insert the diskette into the disk drive. 5-8


2. When the machine is stopped, press **(MENU)** and Select "FLOPPY" with .

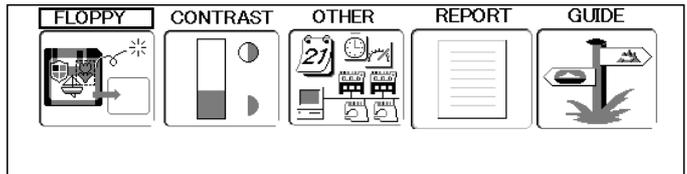


3. Press the **(SET)** button.

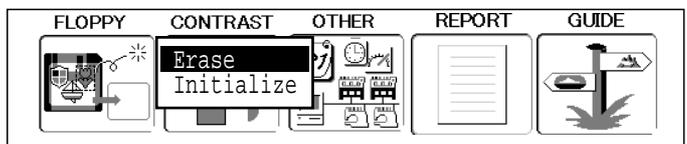

4. Select "Erase" with and press **(SET)**.

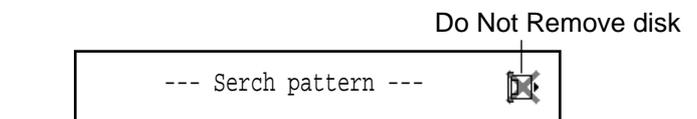



5. Select the pattern data with .

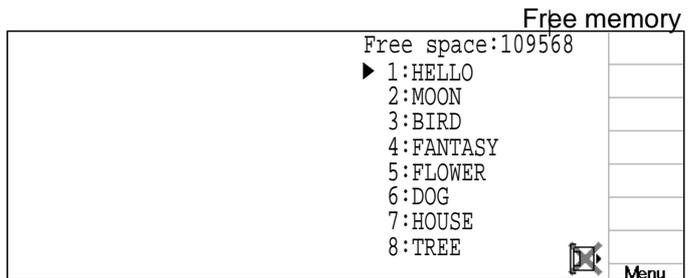


6. Press the **(SET)** button.



7. If you wish to continue with the erase operation, select "OK" with and press **(SET)**.

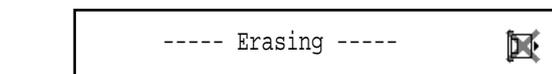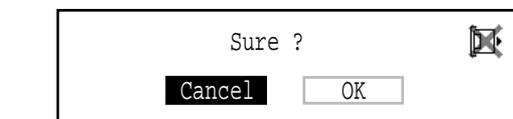

If you wish to cancel, press **(SET)**.
The display returns to MENU.

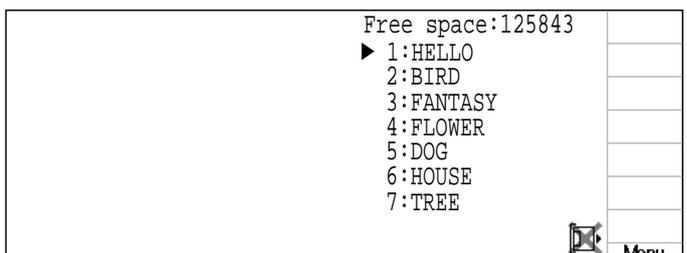


8. Press **(ESC)** several times to return Drive mode.

● Initialize


Initialize your traded edition 2HD or 2DD floppy disk to HAPPY original format.

1. Insert the diskette into the disk drive. 5-8


2. When the machine is stopped, press **MENU** and Select "FLOPPY" with .

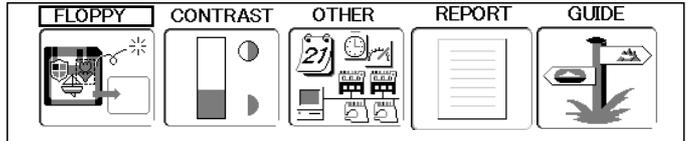

3. Press the **SET** button.

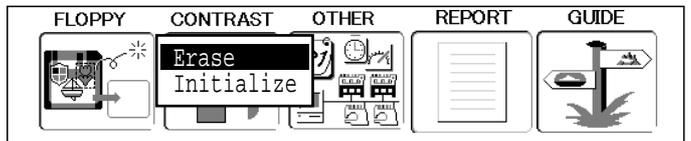

4. Select "Initialize" with and press **SET**.

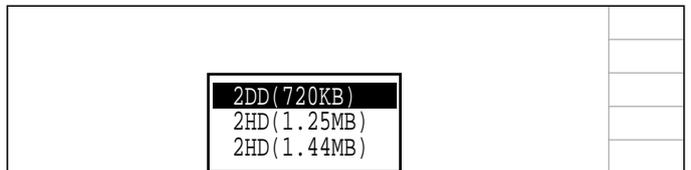



5. Select disk type and size with .




6. Press the **SET** button.



7. If you wish to continue with the formatting process, select "OK" with and press

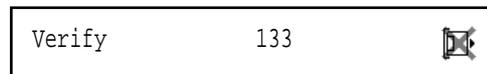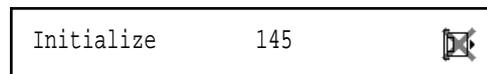

If you cancel, press **SET**.
The display returns to MENU.

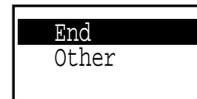


8. Press **SET** to exit Initialize mode.
The display returns to MENU.
If you wish to initialize another floppy disk, insert the next disk then select "Other" with and press **SET**.
Repeat steps 5 to 7.

Press **ESC** to return to Drive mode.


● Create network

Set this menu when you use Network cable to connect PC and machine(s).
Also use separate network software instruction together with this setup.


1. When the machine is stopped, press **(MENU)** and Select "OTHER" with .

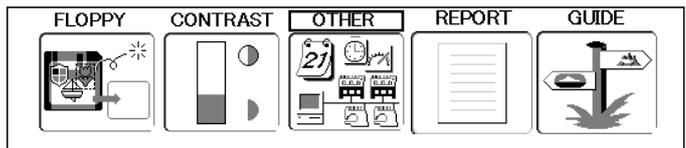


2. Press the **(SET)** button.

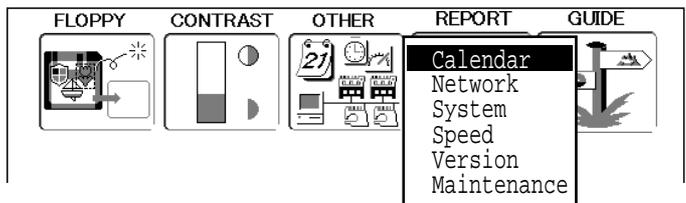


3. Select "Network" with  and press **(SET)**.

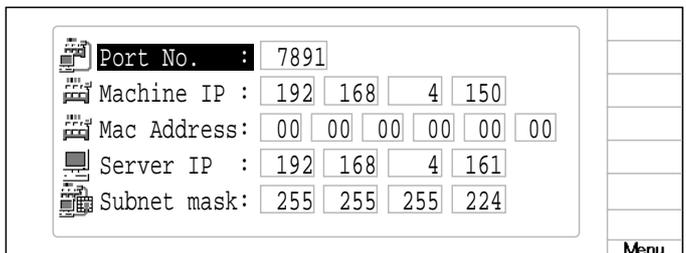


4. Press up/down of  to select the desired item.

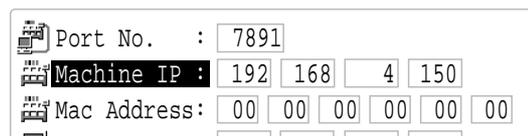


5. Press the **(SET)** button.

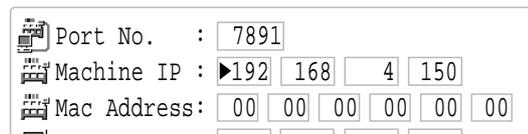


6. Press right /left of  to select the desired setting to change.

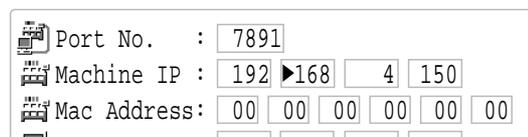


7. Press right /left of  to set the value and press up/down of  to select the number.

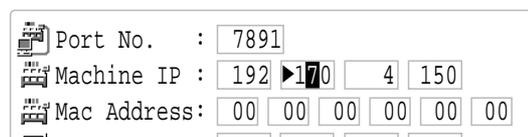


8. Press the **(SET)** button.

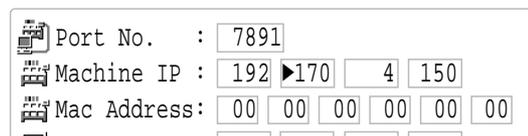

9. Press the **(ESC)** button.
The setting is fixed.
Other settings can be done by repeating steps 4 through 9.

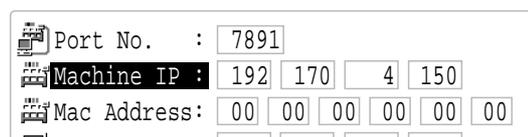


10. Press the **(ESC)** button.

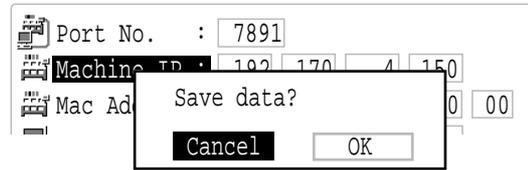

11. To save your settings, please select "OK" with  and press **(SET)**.

The setting is fixed and the display returns to MENU.

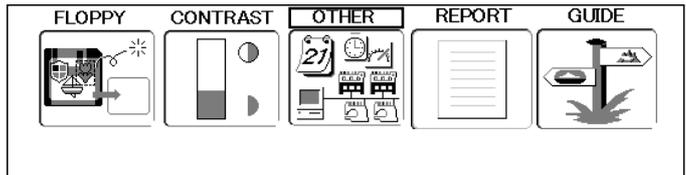

To cancel your setting, please select

"Cancel" with  and press **(SET)**.


The setting is canceled and the display returns to MENU.

Press **(ESC)** to return to Drive mode.


● Version information

Displaying machine operation software version number.


1. When the machine is stopped, press **(MENU)** and Select "OTHER" with .

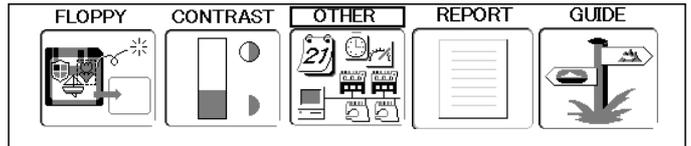

2. Press the **(SET)** button.

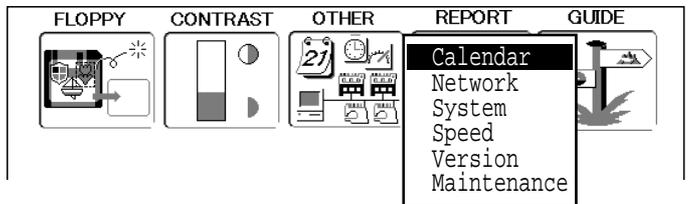

3. Select "Version" with  and press **(SET)**.

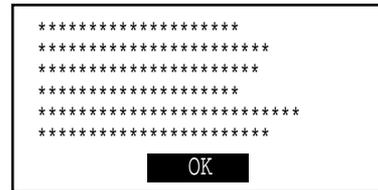

4. Press **(SET)** after confirm version number.
The display returns to MENU.



If you press the **(ESC)** you will return to drive mode.


● Report

Indicating operation record of machine.

Time of power on/off, and number of operated stitches will be recorded in machine memory.

If the machine is switched on without embroidery operation, it will not be recorded in memory.

- When the machine is stopped, press **(MENU)** and Select "REPORT" with .

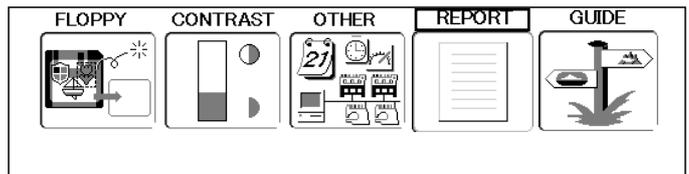

- Press the **(SET)**.

Indicate operation record
Maximum memory is up to 10.
If the record exceeds over 10, the new record will be added to the latest 9 records.


	Time of power on month/day/year/ hour:minute:second	Time of power off (1st raw is time of reporting.)	Number of stitches
1	09/07/2007/08:38:29	09/07/2007/17:09:56	289453
2	09/04/2007/08:41:58	09/04/2007/17:10:08	220046
3	09/03/2007/10:29:31	09/03/2007/17:06:24	69128
4			
5			
6			
7			
8			
9			
10			
	09/03/2007/10:29:31	09/19/2007/17:09:56	578627

Time of deleting record or power on | Current time (time of viewing the report) | Number of stitches after deleting record

- In order to exit the mode, proceed to the step 4.
If you want to delete the record, select "Clear" with  and press **(SET)**.

- Press the **(SET)**.

Exit the mode.

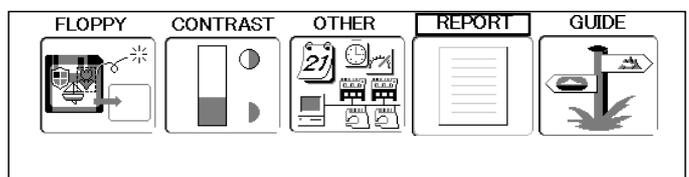

Press **(ESC)** to return to Drive mode.

● Specifications

Voltage	1 phase 100V ~ 115V -10% ~ +10%	1 phase 200V ~ 230V -10% ~ +10%
Electricity consumption	260 Wh	260 Wh
Frequency	50 / 60Hz	
Environmental condition	Temperature 0 ~ 40° C Moisture 45 ~ 85 %	
Dimension (Width x Height x Depth)	885 mm x 871 mm x 782 mm, 34.8" x 34.3" x 30.8" (Standard) 1,522 mm x 871 mm x 782 mm, 59.9" x 34.3" x 30.8" (Wide X-Carriage Option)	
Weight	106 Kg (Standard) 109 Kg (Wide X-Carriage Option)	
Embroidery area (Y x X)	Standard 400 mm x 520 mm, 15.7" x 20.5" Max.*1 (Wide X-Carriage Option) 400 mm x 1,200 mm, 15.7" x 47.2" Max.*1 Standard cap frame (Option) 70 mm x 180 mm, 3.0" x 7.1" Max.*2 Wide cap frame (Option) 80 mm x 360 mm, 3.2" x 14.2" Max.*2	
Max speed	1,200 rpm *3 (Standard) 1,000 rpm *3 (Wide X-Carriage Option)	
Memory capacity	About 1,000,000 stitches (About 2,000,000 stitches Max.)	
Registered pattern	99 pat.	

*1 Actual embroidery area will be restricted in accordance with inner frame size.

*2 Actual embroidery area will be restricted in accordance with shape of a cap.

*3 Maximum machine speed may change by sewing condition, such as pattern, material and etc.

■ Specifications are subject to change without notice.

● Oiling



CAUTION: To prevent accidents.

When performing maintenance, be sure to disconnect the power cord.

The machine will periodically prompt periodically for lubrication based on the number of stitches sewn.

When powered on, the machine will display an icon and letter to indicate that lubrication is necessary. [P](#) 3-4

- | | | |
|--|---|--------------|
| | A | Place to oil |
| | B | Place to oil |


Please lubricate the specified oil locations according to the instructions below.

Running the machine without proper oiling will damage the machine. Lint will gather in and around the rotary hook. Rotary hooks then wear which will cause the threads to break. Please clean lint with a brush and run the machine idly for 2 ~ 3 minutes.

Mark	No.	Place to oil	Specified oil
A	1	Rotary hook (Lubricate with oil slightly with a small brush and sewing machine oil between the outer and inner rotary hook parts.)	Sewing machine oil
B	2	Needle bar	
	3	Head shaft	
	4	Crank lever	

■ When oiling the head shaft, please move the head to the left and set it to needle No. 1.

■ Too much oil may stain fabrics and threads.

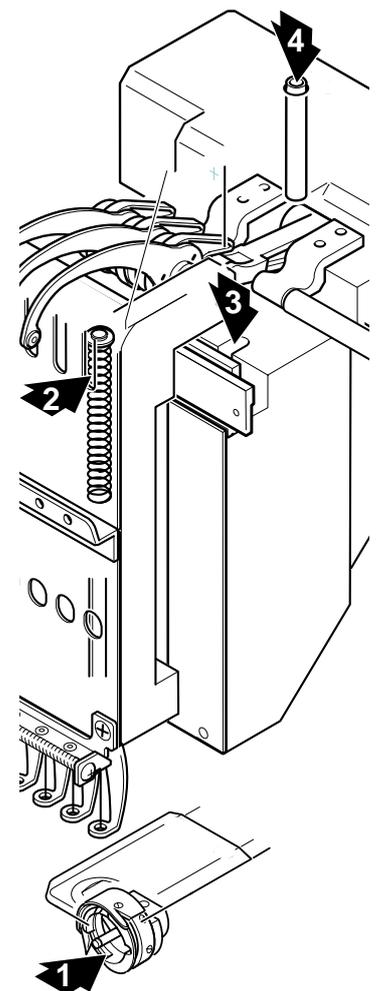

●Cleaning the rotary hook


If the rotary hook is clogged with waste thread or dust, it will degrade the stitch quality of the embroidery or may cause other problems. For a long sewing life, please keep the rotary hook clean. Use the included brush for cleaning the hook.




●Cleaning the thread cutting knife

If the thread cutting knife is clogged with waste thread or dust, the knife will not work correctly. Please keep the thread cutting knife and device clean.


1. Remove set screw (2 pieces) by offset driver and remove the needle plate.

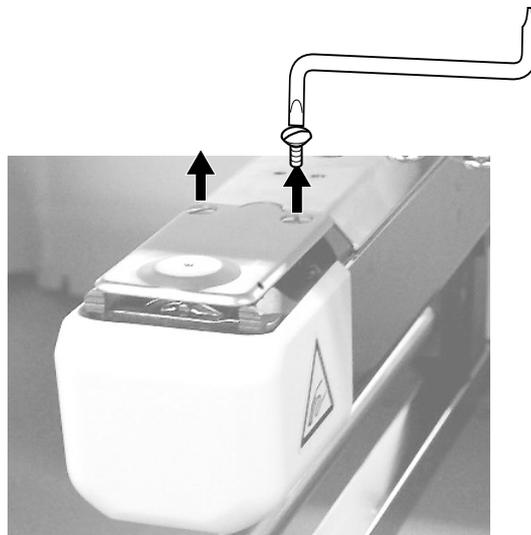


2. When the machine is stopped, press **MENU** and Select "OTHER" with

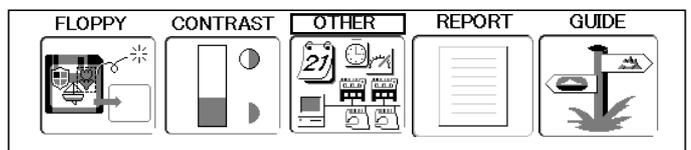

3. Press the **SET**.

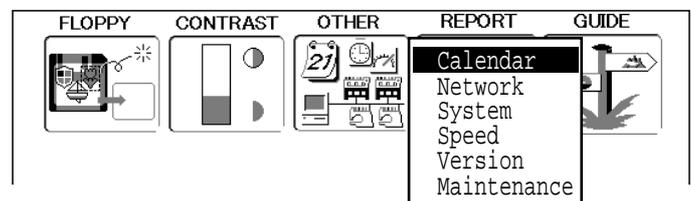

4. Select "Maintenance" with and press **SET**.

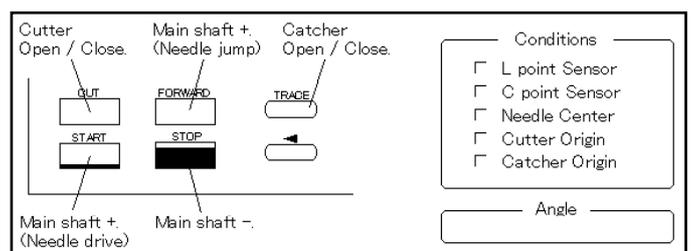

CAUTION: To prevent accidents.
The thread cutting knife moves quickly.
Keep your hands away from the machine.




5. Press the **CUT**.
In maintenance mode, pressing this button causes the moving knife to open and stop at max open position.


6. Remove any waste thread and dust from the knife assembly and surrounding area.

7. Press the **CUT**.
Moving knife returns to the original position.


Press **ESC** to return to Menu mode.
Press **ESC** once again to return to Drive mode.

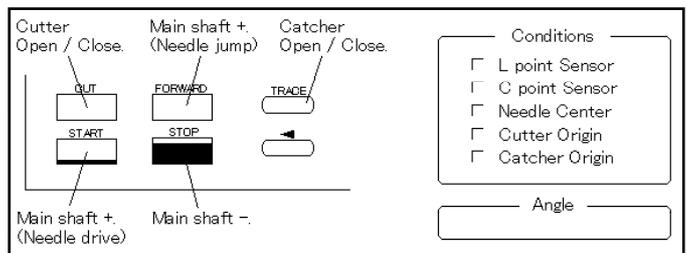


8. Put the needle plate on the bed.
Please insert positioning pin to hole of the needle plate.

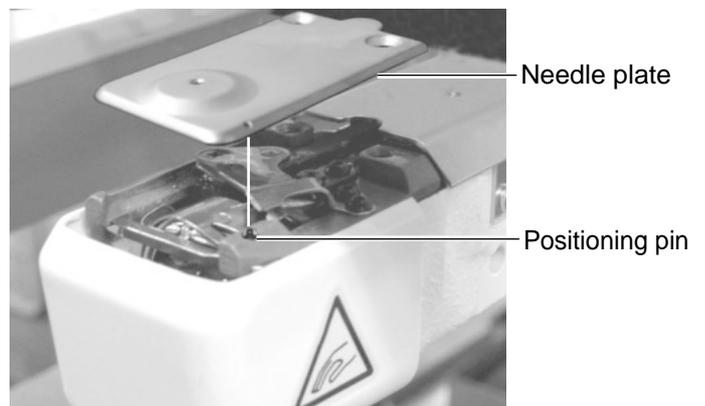

9. Tight set screws (2 pieces) for fix the needle plate.

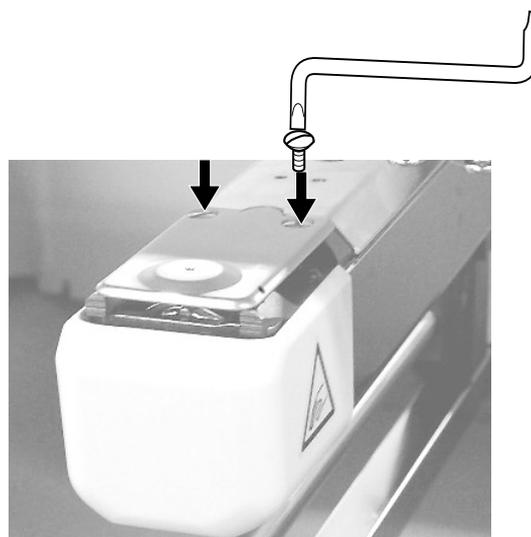

The machine has an extensive error code list to aid in troubleshooting when problems occur, as listed below. Upon error, press the **SET** button on the controller to release the error and correct it according to the list below. When errors occur frequently, please contact your dealer.


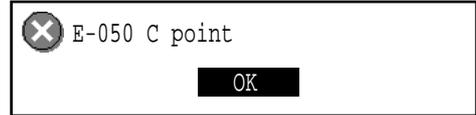


Automatic errors backup


The machine recovers from some errors (E-050, E-190, E-193) automatically after detecting the error(s) by itself. In cases where the machine does not recover from the error automatically, follow the "Solutions" below according to the indicated error number.

CAUTION: To prevent accidents.
In case of "Automatic errors backup", the machine's sudden movement might be caused without showing errors or messages after its stoppage.

No.	Display	Error	Solutions	Page
001	Circuit board	Abnormality detected in control circuit board	Power down machine and, after 10 seconds, power on again.	
002	Power source	Power failure or abnormal voltage		
004	System memory	System memory fault		
014	Fan Alarm	Cooling fan fault	Contact your Dealer.	
015	Inverter trip	Sewing motor-related trouble. Overload, short circuit, trouble with motor drive unit	Cut power and turn main shaft by hand. If turns normally, power on again. Fig. 2	
016	Alarm X unit	X-motor-related trouble, i.e. x-motor overload, short circuit, problem with motor drive unit	Power off machine, test pantograph movement manually. Check for any abnormality throughout full range of motion. If none found, power on again	
017	Alarm Y unit	Y-motor-related trouble, i.e. x-motor overload, short circuit, problem with motor drive unit		
018	Main shaft	Main shaft will not turn.	Turn main shaft manually at least 1 full turn & ensure that it turns freely, clearing any jam. Then, re-initialize machine system and speed.	25-1 25-2
020	Needle detect	Machine not detecting current needle # correctly, or needle bar selection unit is off its stop position. Trouble with position-detecting circuit board.	Turn needle bar selector to the fixed position (marked area shown below in Fig.1).	

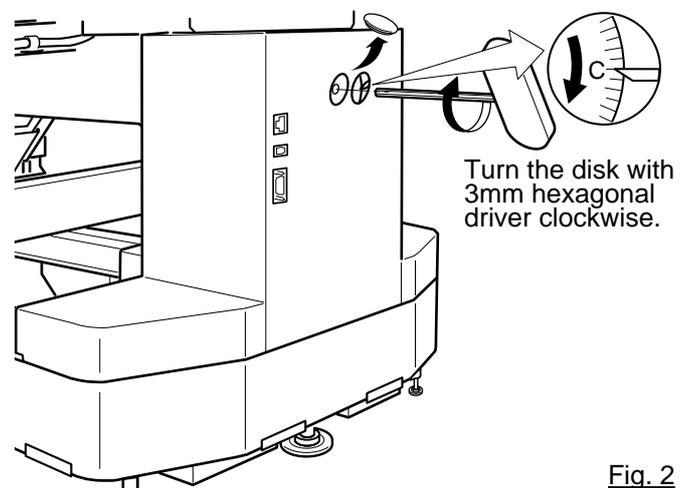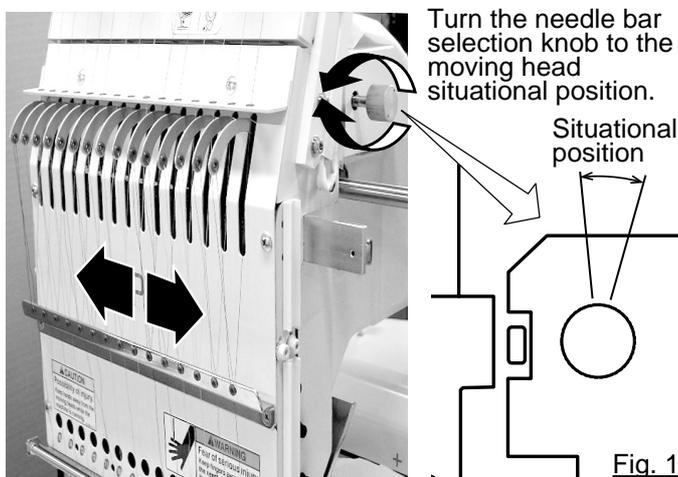

No.	Display	Error	Solutions	Page
021 022	Needle move	Motor for needle bar selection unit has stopped partway through its path. No movement due to malfunction of thread take-up lever or trouble of position-detecting circuit board	After fixing malfunction of needle and thread take-up lever, turn needle bar selector shaft with wrench to have it set at center of fixed position (range within which needle bar selector doesn't move) Fig. 1	
024	Needle center	Needle bar stop position is off-center; needle bar stop position is out of place.	Turn needle bar selector with 3mm hex wrench to have it set at center of fixed position (scope within which needle bar selector doesn't move). Fig. 1	
025	Needle over	Needle # out of range of actual needles on given machine.		
026	Needle differ	Needle # differs between		
030	Slow mismatch	Improper speed adjustment at low speed. Speed does not decrease below 100rpm at low speed.	Re-initialize machine system and speed.	25-1 25-2
050	C point	Main shaft is stopped in a position other than "C" point	See Fig. 2 below.	24-5
051	L sensor	Timing detection board fault, or marred photo-sensor. Malfunction of "Lowest needle position" sensor [PH2] on detection circuit board. Improper adjustment of slit plate.	Check to see if photo sensor is clean or if the slit plate contacts sensor. Re-initialize machine system and speed.	25-1 25-2
052	C sensor	Timing board detection fault, or marred photo-sensor. Malfunction of "Color change position" sensor [PH1] on timing detection circuit board. Improper adjustment of slit plate.		
060	X limit	Frame/pantograph has moved beyond sewing area along X-axis.	Return frame within sewing area using the frame movement keys on the control boxl. Check pattern size and center mark to ensure that it is within size range of selected hoop and also properly centered.	
061	Y limit	Frame/pantograph has moved beyond sewing area along Y-axis.		
066	Frame drive	Frame movement did not complete during origin point movement.	If this condition occurs frequently, contact your Dealer.	
067	Position data	Consumption of embroidery frame coordinate data.	If this condition occurs frequently, contact your Dealer.	
068	Position set	Failure to read embroidery frame sensor signal. (Return)	Check if position sensor is dirty. Turn off power source, then turn on again. If problem still persists, contact your Dealer.	
069	Position Entry	Failure to read embroidery frame sensor signal. (Entry)		

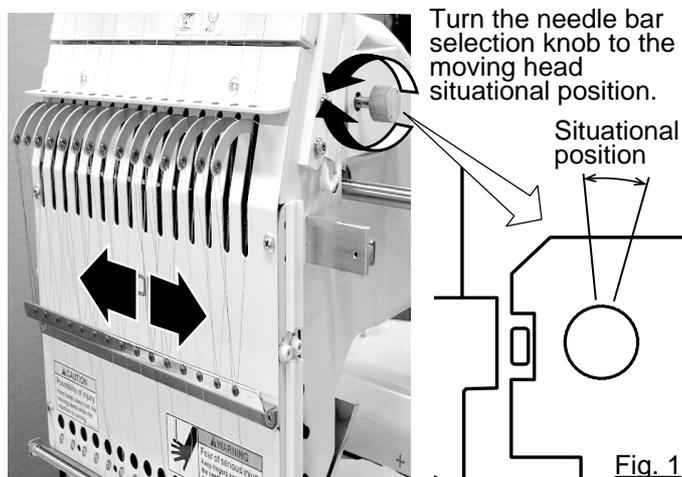

ERRORS AND WHAT TO DO

24-3

No.	Display	Error	Solutions	Page
070	Safety sensor	Safety sensor has been tripped.	Clear area around safety sensor. Ensure that sewing area are clear.	
090	Miss reception	Error has occurred during data transfer (via cable) between machine and PC.	Try reading pattern data again. Verify that transmission speed setting is correct at (1) transfer software; (2) device manager of PC and (3) RS-232C speed of machine.	5-4
091	No send	Machine has not received data for > 10 seconds during data transfer.		
103	Data format	Machine unable to determine format of pattern data.	Verify format of pattern data and fix if necessary.	14-5
104	Miss function	Timing to read pattern data does not conform.	Read pattern data again from the start.	5-4
105	Dual function	Data has been detected in the pattern that has ambiguous/dual function.	Read pattern data again from the start.	5-4
106	No function	Interval between start read time and time of reception of actual pattern data is too great.	Check quality of design data.	
108	Improper read	While reading pattern data, error has occurred in internal processing.	Read pattern data again from the start.	5-4
110	Memory full	Memory has filled while reading in a design.	Delete unnecessary patterns from machine memory and try again.	5-B
111	Change over	While reading pattern data, # of color changes (color No.) has exceeded 250.	Divide pattern data such that number of color changes of each segment is less than 250.	
112	Data error	Pattern data of current design is damaged.	Delete pattern and re-load.	5-B
114	Id over	# of patterns in control panel memory has exceeded the maximum of 99.	Delete unnecessary patterns from machine memory and try again.	5-B
116	Not found Id	Specified pattern does not exist.	Check setting.	
118	Trace data over	Over 1024 stitches trace data were created during reading of pattern data.	Set maximum stitch length to embroidery area of pattern data within 2m (lengthwise) x 2m (sideways).	
120	Memory error	Fault in retaining contents of pattern memory.	If this occurs frequently, it is likely that CPU is faulty. Contact your Dealer.	
130	Disk error	Unable to communicate continuously with memory media or data disk.	Power down machine and after a 10 seconds, power on again. If error remains, contact your Dealer.	
131	Device no ready	Memory media or data disk is not set.	Check if memory media or data disk is properly set.	5-5
132	Write protect	Disk write protected	Disable write protect on disk.	2-8
133	Bad card	Improper or faulty memory media or data disk.	Memory media that media reading unit can't read or faulty media or un-initialized media. Data disk that disk drive unit can't read or faulty data disk or un-initialized disk.	5-5
134	Disk unit	Trouble in disk drive unit.	Power down machine and after a 10 seconds, power on again. If error remains, there is a problem with the disk drive unit.	
140	Entry over	Maximum number of patterns has been exceeded. (refer to "SPECIFICATIONS" page.)	Clear unnecessary patterns or use alternate disk.	
141	Not found name	Designated pattern is not found.	Memory card is not correct.	5-5
142	Disk full	Disk is full to capacity. (refer to "SPECIFICATIONS" page.)	Clear unnecessary patterns or use a different data disk.	21-1
143	Multi name	Another pattern with same name has been detected while attempting to write to disk.	Change name, use a different disk, or overwrite existing pattern.	

ERRORS AND WHAT TO DO

24-4

No.	Display	Error	Solutions	Page
190	Cut blade	Thread cut knife is not at stop position.	Follow the instructions below.	24-6
193	Catcher	Thread catch hook is off its position. Limit switch to detect position is not "OFF".	Please follow the example below: 1. Check whether thread was actually cut by thread cutting knife. If not, cut thread and return catch hook to its normal position. 2. If thread is actually cut, check if thread catch hook on head has returned to its position completely.	24-8
215	Frm. drive err	Frame movement did not complete during normal movement. (Time over)	If this condition occurs frequently, contact your Dealer.	
217	Frm.drive data	Frame movement data loose.		
220	Calendar Stop	Calendar has not been setup.	Set calendar data after re-starting machine. If problem recurs frequently, replace CPU board assembly. Contact your Dealer.	3-7
221	Battery Low	Low voltage warning for CPU board battery.	If machine has not been powered on for an extended period, CPU board battery drains. Power on machine and if problem persists, replace CPU board assembly. Contact your Dealer.	
222	Calendar Data	Incorrect calendar data.	Please set calendar date and time. If you have same problem often, please replace CPU board assy. Contact your Dealer.	3-7




What to do when Stop position of main shaft is out of place (error E-050)

1. Press the **SET** button.

2. Select "Auto" with .

3. Press the **SET** button.

The main shaft turns 2 to 3 times and returns to a stop position ("C" point) automatically. The display returns to drive mode.

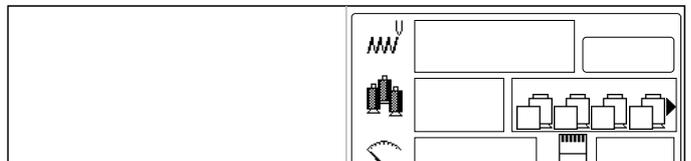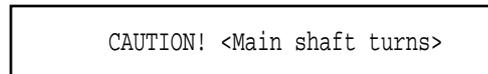
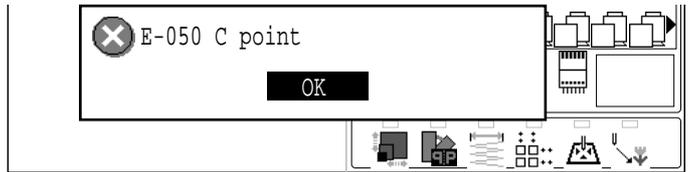


When you cannot clear by the method above (Auto)


1. Press the **SET** button.

2. Press the **SET** button.


The error status is released and the display shows "drive mode".

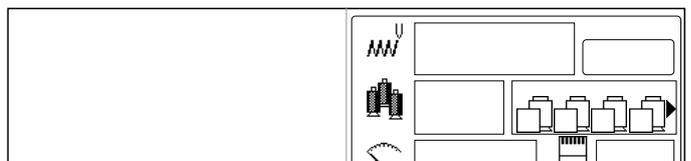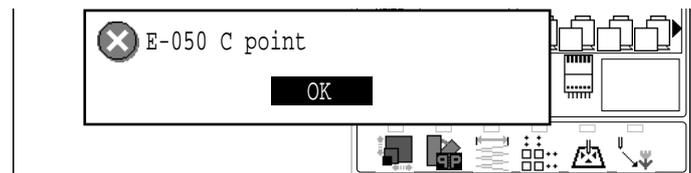

3. Remove the cap over the small hole in the rear of the machine. Using a 3 mm hexagonal driver, Please turn the main shaft and adjust it to the "C" point.

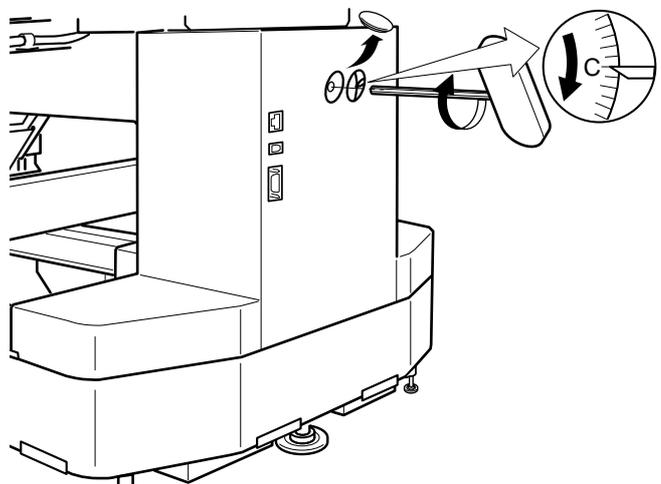

What to do for "Thread cut knife is not at the stop position (error E-190)"

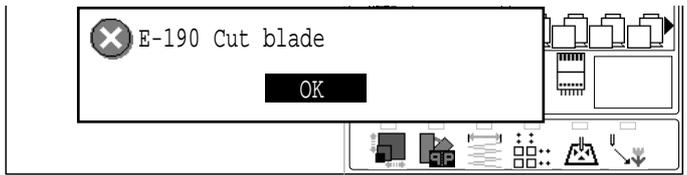

1. Press the **SET** button.




2. Select "Auto" with .




3. Press the **SET** button.

The display returns to the drive mode.

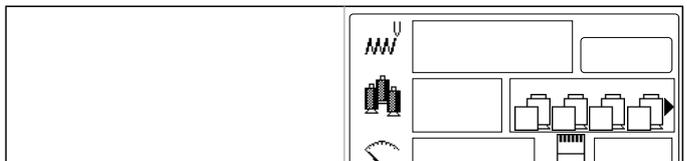

When you cannot clear by the method above (Auto)

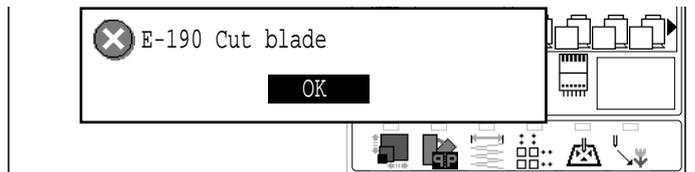


1. Press the **SET** button.




2. Press the **SET** button.


The error status is released and the display shows "drive mode".

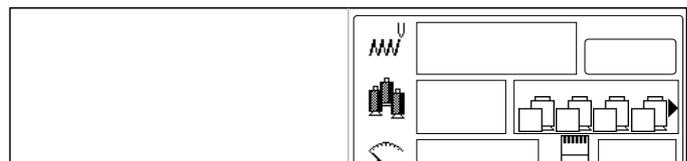


3. Using a 3 mm hexagonal driver, Please turn the main shaft and adjust it to the "C" point.

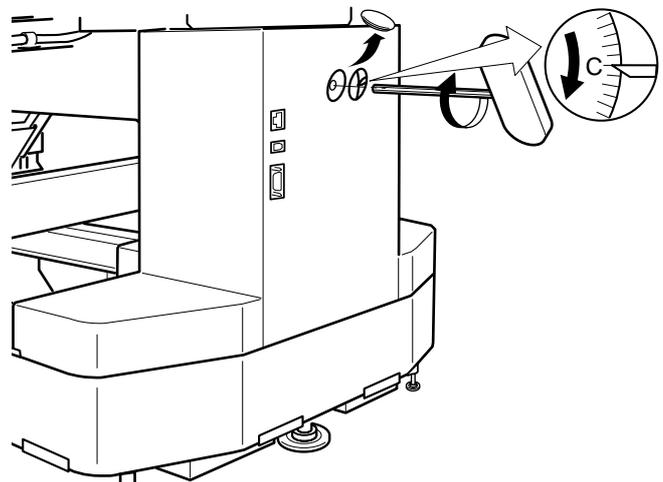

4. When the machine is stopped, press **MENU** and select "OTHER" with .

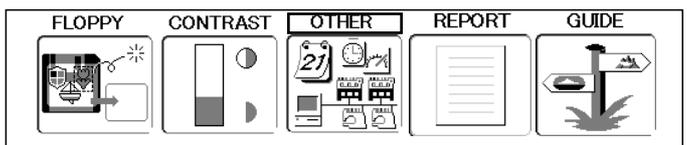


5. Press the **(SET)** button.

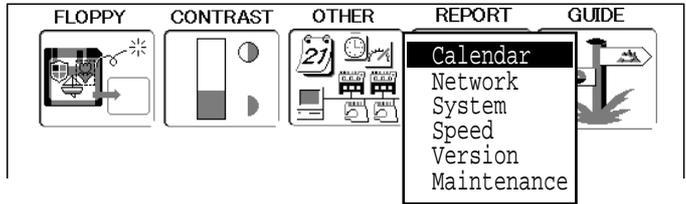


6. Select "Maintenance" with  and press **(SET)**.

7. Press the **(CUT)** button..
You should hear the sound of moving knife opening.

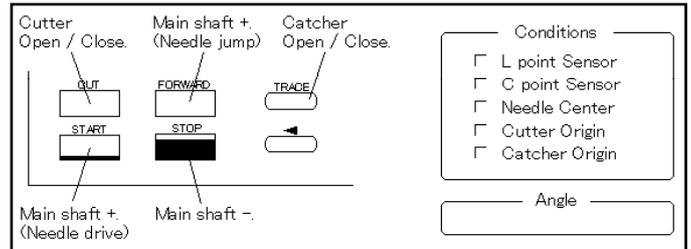


8. Press the **(ESC)**.
You should hear the sound of moving knife returning to the closed position.

9. Press **(ESC)** several times until display returns to Drive mode.

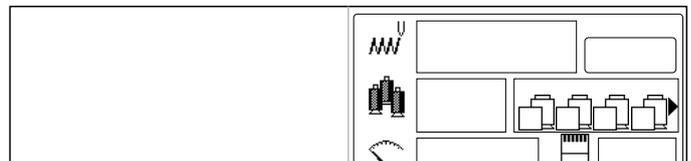

What to do for "Thread catch hook is off its position (error E-193)"

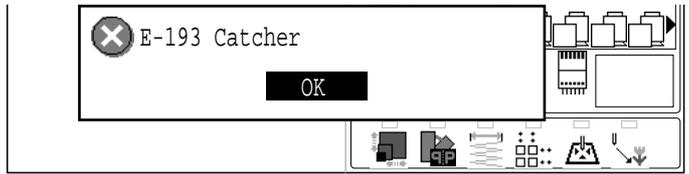

1. Press the **SET** button.




2. Select "Auto" with .



3. Press the **SET** button.

The thread catch hook returns to the original position.
The display returns to drive mode.

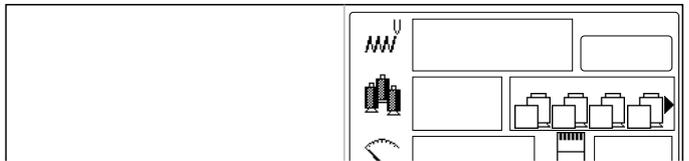

When you cannot clear by the method above (Auto)




1. Press the **SET** button.



2. Press the **SET** button.

The Error status is cleared and the display shows "drive mode".

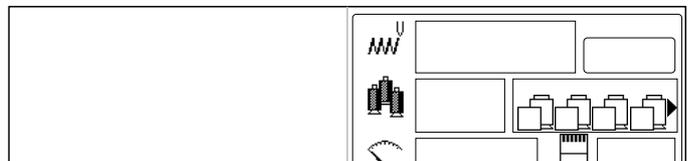


3. Refer to the page in the section (ERRORS AND WHAT TO DO), and determine what may be preventing the hook from returning to the original position, and follow the steps outlined. [P 24-4](#)


● Re-Initialization of machine system

Perform this function only to fix problems with the machine.
 When performed, all settings in the "OPTION" menu are lost.
 Be sure to reset the "OPTION" menu after performing this function.


1. When the machine is stopped, press **(MENU)** and Select "OTHER" with .

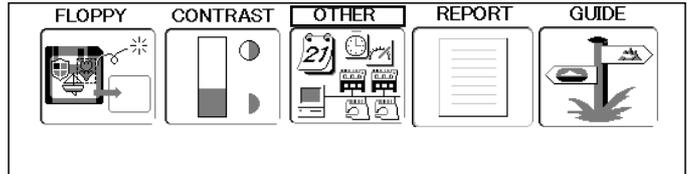

2. Press the **(SET)**.

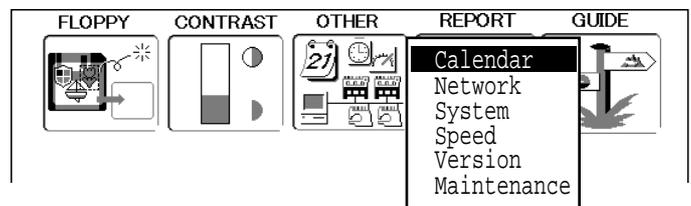


3. Select "System" with  and press **(SET)**.

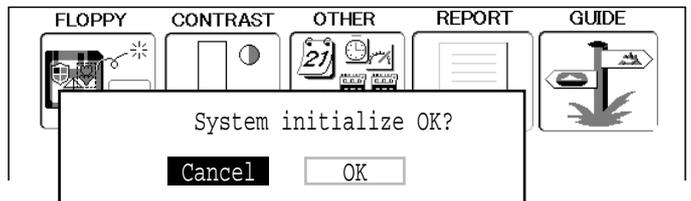


4. Select "OK" with  to carry out.

If you cancel, press **(SET)**.
 The display returns to MENU.

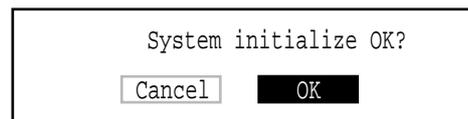

5. Press the **(SET)**.
 Formatting of the machines systems are carried out.

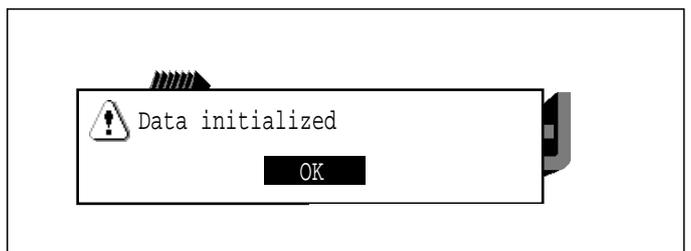


6. Press the **(SET)**.
 Indicate HAPPY logo in screen.




● Initializing of machine speed

If you have E-18, E-30, E-51 or E-52 while sewing, Please try initializing the machine settings.


1. When the machine is stopped, press **(MENU)** and Select "OTHER" with .

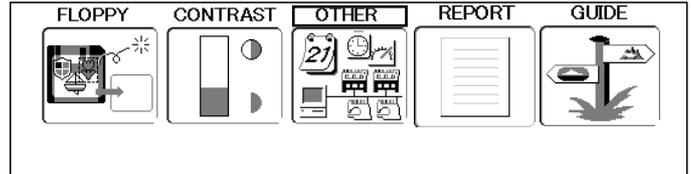


2. Press the **(SET)** button.

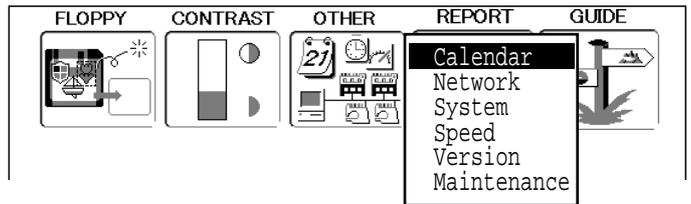

3. Select "Speed" with  and press **(SET)**.


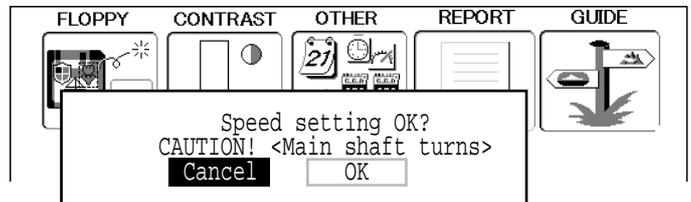


4. Select "OK" with  to execute.

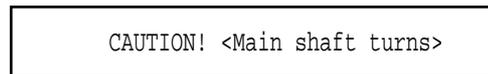


Press the **(SET)** to cancel.
The display returns to menu.

5. Press the **(SET)**.
The machine will display a warning, then start turning the main shaft automatically.
The speed will slowly increase from slowest speed to maximum and then stop automatically and indicate "Complete".

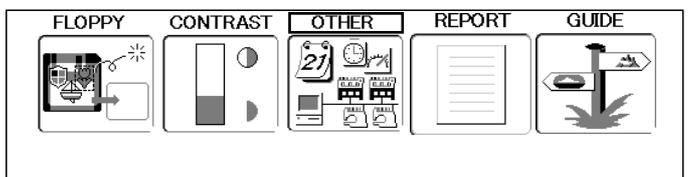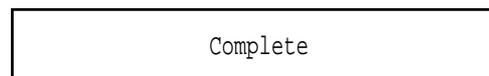

6. Turn off the power switch and turn on the power switch again.
The HAPPY logo shows onscreen.

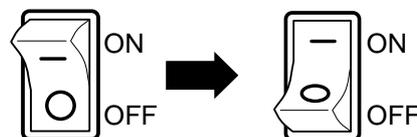

HELPFUL HINTS

26-1

PROBLEM	CAUSE	CORRECTION	PAGE
Upper thread breaks	Machine not properly threaded. Needle inserted incorrectly.	Re-thread machine.	4-6
		Re-insert needle. (remember, needles have a front and back!)	4-1
	Thread tension too tight.	Readjust thread tension.	8-1
	Poor thread quality.	Replace with good quality thread.	
	Dry hook	Oil the hook.	23-1
Empty stitches or continuous tiny stitches in design data.	Thread is tangled in an upper thread cone.	Turn on stitch sweep function, then read design data in again.	14-4
		Un-tangle thread.	
Lower (bobbin) thread breaks	Bobbin threaded incorrectly.	Re-thread the bobbin.	4-5
	Bobbin wound unevenly or too full.	Re-wind the bobbin.	4-4
	Thread tension too tight.	Readjust thread tension.	4-4
	Dirt on the hook.	Clean the hook.	23-2
	Dry hook	Oil the hook.	23-1
Thread break lamp lights up despite thread not being broken (False thread breaks)	Upper thread is not passing around the detecting roller.	Thread upper thread correctly.	4-7
Machine skips stitches	Needle inserted incorrectly. Bent or blunt needle. Incorrect size of needle.	Re-insert needle.	4-1
		Insert new needle.	4-1
		Choose correct size needle for fabric.	4-2
Fabric puckers	Machine not properly threaded.	Re-thread machine.	4-6
	Bobbin threaded incorrectly.	Re-thread the bobbin.	4-5
	Blunt needle.	Insert new needle.	4-1
	Thread tension too tight.	Readjust thread tension.	8-1
Machine makes loose stitches or loops	Bobbin threaded incorrectly.	Re-thread the bobbin.	4-5
	Machine not properly threaded.	Re-thread machine.	4-6
	Tension not adjusted properly.	Readjust thread tension.	4-5,8-1
Poor tension balance	Bobbin threaded incorrectly.	Re-thread the bobbin.	4-5
	Machine not properly threaded.	Re-thread machine.	4-6
	Dry hook	Oil rotary hook.	23-1
Poor design registration	Fabric not hooped correctly.	Set hooping correctly.	6-2,7-9
	Garment is made of elastic material.	Use correct backing and ensure that design has proper underlay.	6-2,7-9
	Hoop not installed into machine properly.	Set hoop correctly.	6-3,7-5
Needle breaks	Bent or blunt needle. Needle setting incorrect. Thin needle against material. Poor hooping.	Insert new needle.	4-1
		Re-insert needle.	4-1
		Change to thicker needle.	4-2
		Re-hoop fabric.	
Machine runs with difficulty	Dirt on the hook race.	Clean rotary hook.	23-2
		Oil rotary hook.	23-1
Machine will not run	Cord not plugged into electrical outlet. Power switch is not turned on. Power source fuse has blown.	Insert plug fully into outlet.	
		Turn on the switch.	3-5
		Replace power source fuse (6A).	3-1
will not turn on	Emergency stop button in locked position.	Release emergency stop button lock.	3-8
Cannot see menu	Contrast setting incorrect.	Adjust LCD screen contrast	3-6

Thread break back

With this setting, drive frame backs up several stitches after a thread break before stopping.

Color change number

The Needle number (thread color) to be sewn can be set to each Color change number. For example, if a pattern is divided by a color change function in 2 places, 3 color change numbers exist in the pattern. When the needle number is set to its respective color change number, the pattern is sewn in 3 colors.

Memory pattern

Patterns stored in memory.

Start point of the frame

This is the point where the frame begins to move before the machine starts sewing.

Trace back

This is to move the frame and memory pattern in the reverse direction of sewing.

Trace forward

This is to move the frame and memory pattern towards the sewing direction.

Various function settings

A general term for Needle bar selection, Convert, Pattern adjustment, Repeat sewing, Offset and frame out which are set in the pattern data.

Zero stitch

This is a stitch whose net movement in both the X- and Y- direction is zero, and the needle lands in the same position.

Original Point

The frame position where the machine embroiders the pattern from the beginning is automatically registered as the original point.

Stitches

This is the minimum unit within the pattern data. There are different types of such "stitches": "stitches" that command determine the sewing sequence; "functions" that dictate functions such as jumps, thread cut, etc; "sideways movement distance" and "lengthwise movement distance" that command the movement distance of the frame.

Speed limit

This is a function code that limits the highest speed. In cases where there is a need to limit the sewing speed at a specific point in a design, you can limit the speed to not exceed the speed specified by setting the appropriate function code to the desired stitch.

Auto origin

This returns the frame automatically to the original point upon finishing the embroidery.

Communication speed

This refers to the data transmission speed between the machine and a PC when connected by serial port. Higher speed settings allow faster transmission of data but also increase probability of communication error. If communication errors happen frequently, lower the communication speed.

Tubular round frame, Tubular square frame

The frames made by HAPPY and used for cylinder sewing, such as on T-shirts, bags, etc. These frames have brackets at both sides.

Memory media

What saves design data by things, such as memory card and a USB memory.

Data format

This is the format that the pattern data is converted into/

Color change stop

When a color change stop is assigned to a color change number, the machine embroiders the set color change and stops.

Conversion

This is a user-adjustable design setting of a given pattern that allows rotation in increments of 90 degrees.



HAPPY Industrial Corporation

HEAD OFFICE 9-16, 5-chome, Miyamachi, Yamagata-City 990-0057,
Japan
Phone: 023-623-7111 FAX: 023-623-2654

TOKYO OFFICE 2-9-5, Taito, Taito-Ku, Tokyo 110-0016, Japan
Phone: 03-3834-0711 Telex: 265-5482
FAX: 03-3835-8917 Cable: HAPPYSEW TOKYO

HAPPY Am Kuemmerling, 10-12
INDUSTRIAL 55294 Bodenheim, (Mainz)
GmbH Germany
Phone: 06135-8101 FAX. 06135-3995